

van buuren



User Manual
TWS Earphones & Power Bank

Notice Before Use

Thank you for purchasing the van buuren TWS Earphones & Power Bank. Please read this User Manual completely before you use the Earphones. The TWS Earphones & Power Bank has been developed using Bluetooth® wireless technology and is capable of connecting with Bluetooth® devices. Before using the Headset please verify your Bluetooth® device (Phone, PDA) complies with Bluetooth® V5.0 (or below).

Contents

Please inspect this package and refer to the contents list below to verify all items were included in this package:

Earphones (left and right).....	1
Charging Case.....	2
Micro USB charge cable.....	3
User Manual.....	4

Product Overview



Specifications

- Name: van buuren TWS Earphones & Power Bank
- Model: VB-TWS-003
- Bluetooth device name: Van Buuren TWS3
- Bluetooth version: 5.0 + EDR
- Range: 2m
- Stereo, 10mm diameter speakers
- Speaker impedance: 32 Ω
- Sensitivity: 102 dB/mV
- Frequency: 2.402 - 2.480 HZ
- Earphone battery capacity: 2 x 30mAh
- Charging case battery: 1800mAh
- Power bank USB output: 5V 1A
- Power bank micro USB input: 5V 1A
- Playing time: 3.5 hours
- Talk time: 4 hours
- Standby time: 160 hours
- Charging time: ~1 hour
- Compatible with iOS and Android devices

Pairing Device

To pair a **SINGLE** earbud

1. Press + hold the multi-function button (MFB) until the LED light flashes red and blue alternatively
2. On your device's list of Bluetooth devices, select "Van Buuren TWS3"
3. Once connected, the earbud will announce "connected"

To pair **BOTH** earbuds

1. Press + hold the MFB buttons on both earbuds at the same time until the LED lights flash red and blue alternatively
2. One of the earbuds will announce "connected" as it pairs with the other earbud
3. On your device's list of Bluetooth devices, select "Van Buuren TWS3"
4. Once connected, the second earbud will announce "connected"

Note: if you see "Van Buuren TWS3" listed twice on the list of Bluetooth devices, and the first attempt doesn't pair successfully, select the other option

Usage

General

- Once paired, the TWS battery status will be visible on your device
- The earbuds will remind you when the battery is low with voice prompts, and the LED light will flash in red

Power on/off

- Long press the MFB button until you hear "power on" or "power off"

Phone calls

- Only one earbud will work when using TWS for phone calls, however the MFB button on both sides will still work for power off/play/pause when both earbuds are paired
- For inbound phone calls, the earbud will announce the caller's phone number
- To answer a call: press the MFB button once
- To decline a call: press and hold MFB button
- To redial last number called: from music mode, triple click the MFB button

Music play/pause

- Press the MFB button once
- Double click to skip song

Voice Assistant

- Triple click MFB button to activate your device's voice assistant

Charging the Battery

To charge earbuds in the Charging Case

1. Set the earbuds into the slots in the charging case
2. Press the power button on the back of the charging case
3. The LED light(s) will illuminate in blue on the charging case, and the LED lights on the earbuds will illuminate in red to indicate the earbuds are charging. The earbud LED lights will turn off when fully charged

Note: if the LED lights do not illuminate, you must charge the Charging Case. The blue LED light(s) will flash when running low on charge

To recharge the Charging Case

1. Using the micro USB cable included, plug the charging case into a USB port or USB wall charger (with or without earbuds inserted)
2. The front LED light(s) will flash in blue while the charging case is recharging, and all 4 lights will be solid blue when fully charged

Battery Information

The TWS earphones and charging case are equipped with integrated lithium-polymer batteries. These batteries cannot be replaced. Do not attempt to remove the batteries from the device as this will damage the device.

The full performance of a new battery is not achieved until after two or three complete charging-discharging cycles. The battery can be charged and discharged several hundred times, but it will lose its capacity over time. Disconnect the TWS from the power supply as soon as the battery is fully charged, overcharging will reduce the service life of the battery. A charged battery will lose its capacity if it is not used on a regular basis.

Important

To avoid a complete discharge of the battery, the TWS should be charged at least once every 6 months

Safety Information

1. Please read this User Manual carefully and follow all instructions.
2. To avoid any damage or malfunction of the device do not drop the device from high places.
3. Keep device away from humidity, water and any other liquid. If the device is exposed to water, moisture and other liquids do not operate it to avoid any electrical shock, explosion and damage to the device or yourself.
4. Do not place or keep this device near any heat sources, such as, direct sunlight, radiators, stoves or other apparatus that produce heat. This may cause an explosion, degrade the performance and/or reduce battery life.
5. Do not modify, repair or disassemble device (especially the battery). Doing this will void the warranty.
6. Do not place heavy objects on the device.
7. Use only the supplied and approved charge cable.
8. Unplug this device when unused for long periods of time and during lightning storms.
9. The battery used in this device may present a risk of fire or chemical burn if mistreated.

Safety Information (cont.)

10. If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
11. This product contains small parts and packaging which may pose a choking hazard. Keep out of reach of children.
12. This device is designed for consumer use: follow directions and use only as described.
13. Always drive safely, avoid distractions and follow required laws.
14. Permanent hearing loss may result from long-term exposure to sound at high volumes. Always set the volume to as low a level as possible. Adjust slowly if increasing volume is required. Avoid using earphones for extended periods of time.
15. If you experience discomfort or ringing in your ears, stop use immediately. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage without noticeable discomfort.
16. This device contains no user-serviceable parts. If it suffers any failure or damage, cease usage and contact Powerpod Support after consulting this manual.
17. Keep device away from WiFi router and other high frequency transmitting equipment to prevent signal interference

Warranty & Support

For warranty details, please visit:
<https://www.powerpod.net/pages/the-powerpod-one-year-warranty>

For support enquiries, please contact:
support@powerpod.net

or via our website at:
www.powerpod.net/gethelp

Note: this product is not manufactured nor endorsed by Apple