 




# Induction Cooker User's Manual

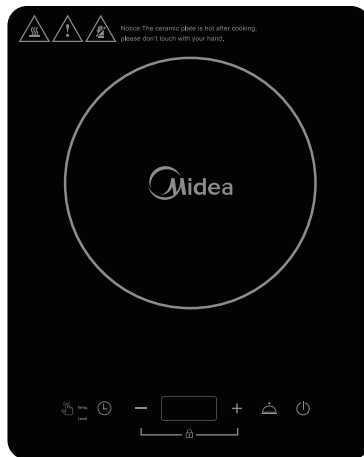

Model: MC-STW2018

Thank you for purchasing this induction cooker. Please thoroughly read through this instruction manual before use and store it carefully for future use.

The pictures are only for reference, please keep the real product as a standard.

# I. SAFETY INSTRUCTIONS

For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions below.

Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:

- use by children or disabled people without supervision;
- children treating it as a toy.

Symbols: ⊘ **Forbidden** ⊕ **Mandatory** ⚠ **Warning** ⚠ **Attention**

 
- ⊘ Never heat foods in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.




- ⊘ Do not directly rinse this induction cooker under water. Do not spill water or soup into the internal parts of the induction cooker.



- ⊘ To avoid affecting product performance and to prevent injury, do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot.

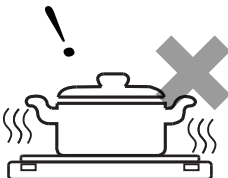


 - ⊘ To avoid accidents, do not place the induction cooker, when in use, on a gas stove (the magnetic lines can heat the metal parts of the gas stove).

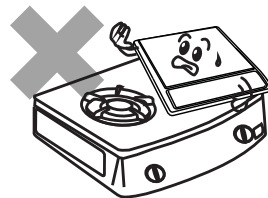


# I. SAFETY INSTRUCTIONS

 
- ⊘ Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.

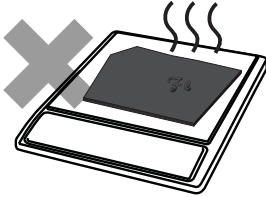

 
- ⊘ The utensils provided for the induction cooker can only be used for cooking with it. These cooking utensils cannot be used on both induction cooker and gas stove.

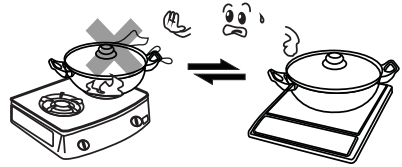

 
- ⊘ To avoid injuries such as scalding, do not let children operate the appliance alone.

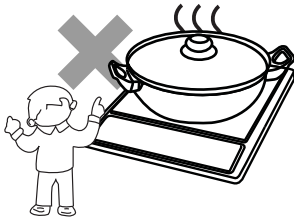

 
- ❗ Unplug the power cord from the outlet after use to avoid fire and/or damaging the electronic components, caused by prolonged electrical connection.

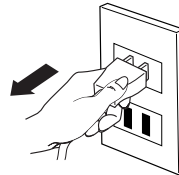

 - ⊘ To avoid danger, do not insert any foreign object, such as iron wire, nor block the air ventilation opening or air entry port.

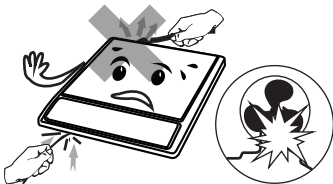


 - ❗ People with heart pacemakers should consult a doctor. Only use the appliance after confirming that it does not affect the pacemaker.

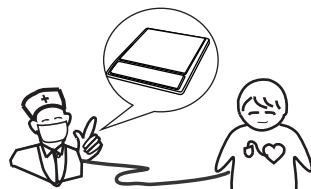


# I. SAFETY INSTRUCTIONS

 
❗ To avoid damage, avoid causing impacts on the heating plate. **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

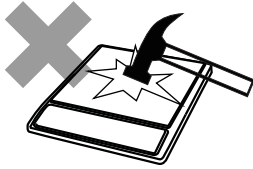

 
⚠ To avoid danger, do not place paper, aluminium foil, cloth or other unsuitable articles on to the induction cooker heating plate for indirect heating.

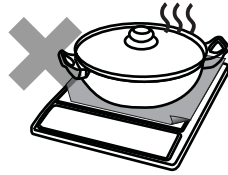

 ⚠ When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate.

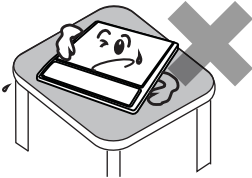

 
❗ When using the induction cooker, place it horizontally and allow at least 10cm of free space between the sides and back of the induction cooker and the wall. Do not use the induction cooker in narrow spaces. To avoid hindering release of heat, do not cover the ventilation opening.

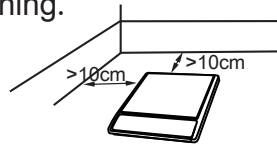

⚠ Please use a dedicated and high quality power outlet, with high power rating, equal to or above 10A. Do not use poor quality outlets. Do not share the power outlet with electrical appliances with high power ratings, such as air conditioners, electrical stoves etc to avoid fires caused by overburdening the outlet.




 ❗ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

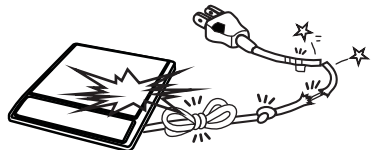


# I. SAFETY INSTRUCTIONS

 ⚠ Do not touch the cooker plate with sharp tools to avoid cracking or damaging the plate. If cracking is found on the cooker plate, turn off the appliance to avoid any electrical shock that might occur.

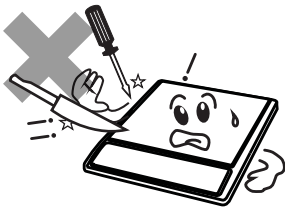

 
⚠ When using the induction cooker or after use, please keep it clean. Protect the induction cooker from bugs, dust and humidity. Avoid letting cockroaches etc fall into the internal parts of induction cooker and causing a short circuit of the electrical board. When not in use for a long period, please clean it and put it into a plastic bag to store it.

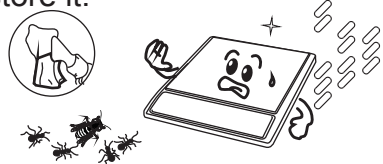


⚠ The cooker cannot be overloaded. Overloading the plate may damage the plastic cover and cooker plate.



 
⚠ Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.

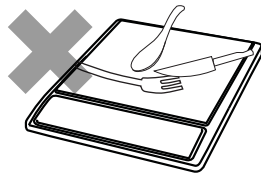

 ⚠ Do not use the induction cooker near a gas stove, kerosene stove, gas cooker or in any space with an open fire or an environment with high temperature.

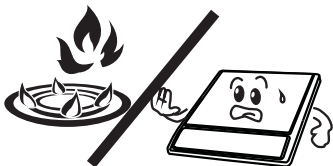

 ⚠ Do not use the induction cooker by putting it onto a carpet, tablecloth or thin paper to avoid blocking the air inlet opening or air outlet opening, which results in influencing heat emission.

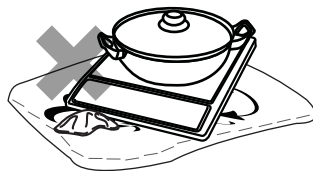

# I.SAFETY INSTRUCTIONS

⚠ Carefully clean the cooking surface - if you wipe with a wet sponge or cloth should be careful vapor heat cooking area burns, and some cleaning materials may produce toxic gases.



When operating the appliance or after moving the pot, the cooking area will remain hot for a period of time. Do not touch it, be careful of scalding caused by the high temperature.



This appliance is intended to be used in household and similar applications such as:- staff kitchen areas in shops, offices and other working environments; -farm houses;-by clients in hotels, motels and other residential type environments ; -bed and breakfast type

**!** Mandatory

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**!** Mandatory

We suggest that you should periodically check that there are no object (glass, paper, etc) that could obstruct the inlet under your induction cooker.

**!** Warning

Children should be supervised to ensure that they do not play with the appliance.

**!** Warning

Never have the induction cooker to work without food inside, otherwise its operational performance may be affected and danger may happen.

**!** Mandatory

# I.SAFETY INSTRUCTIONS

Keep electrical appliance out of reach from children or inform person. Do not let them use the appliances without supervision.

 **Warning**

The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.

 **Warning**

This appliance is for household use only. Do not use outdoors. Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.

 **Warning**

 
## II.PRODUCT INTRODUCTION

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.


### Performance Parameters

Model	Applied voltage/frequency	Rated power	Dimension (mm)	Weight (kg)
MC-STW2018	220-240V~ 50/60Hz	2000W	350x280x65	2.5

# Product Sketch Map

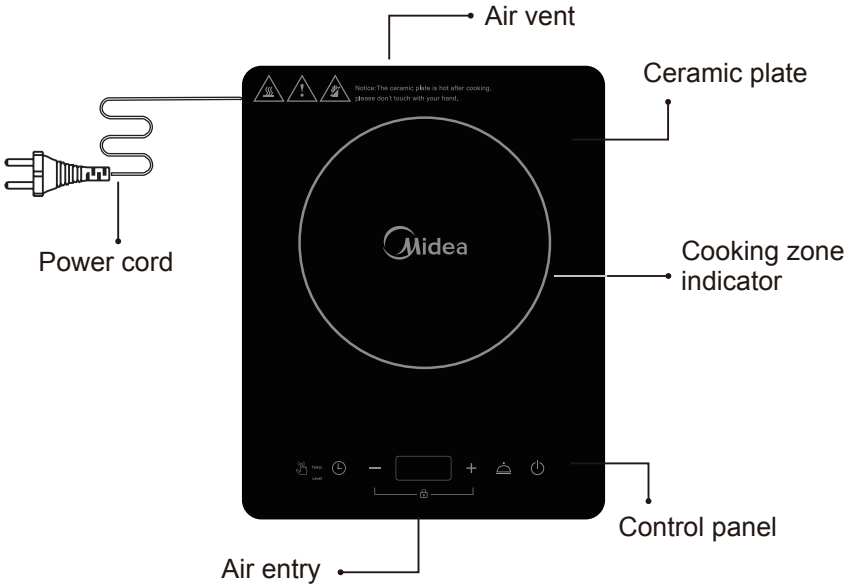

# Control Panel

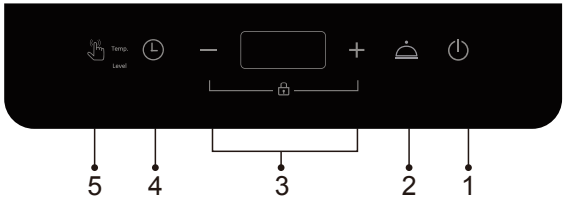 

- 1. ON/STANDBY
- 3. Lock
- 5. Function

- 2. Keep warm
- 4. Timer





## II.PRODUCT INTRODUCTION
  
### Before using New Induction cooker

- Read this guide, taking special note of the “Safety Warnings” section.
- Remove any protective film that may still be on your ceramic plate.

### Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

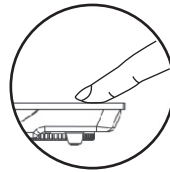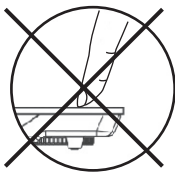

### III. OPERATION INSTRUCTIONS

#### Put the pot on the ceramic plate

- Make sure the air vents are not blocked and keep utensils away from the immediate surrounds of the ceramic plate.
- Make sure the cookware which has food or liquid is placed in the center of ceramic plate.

#### Plug in

- After the power supply is connected, a beep will be heard. The display shows “L”, indicating that the induction cooker is in standby mode.

#### Turn on

- After pressing the “ON/STANDBY” button, the induction cooker is ready for heating. Press the “Function” button, the induction cooker enters heating mode.
- After pressing the “ON/STANDBY” button, if no function button is pressed for 10 seconds, the induction cooker will switch off automatically.
- After pressing the function button, if there is no proper pot on the ceramic plate, the induction cooker will not heat up and the alarm will sound to indicate that a pot is required. One minute later, it will switch off automatically.

#### Function

- After switching on the induction cooker, press “Function” button to enter the temperature or level mode.
- You can adjust the power level by pressing “+” or “-” button.  
You can adjust the temperature by pressing “+” or “-” button.

### III. OPERATION INSTRUCTIONS

#### Timer

- Press the “Timer” button to enter the timer mode. When the timer indicator lights up and the numbers blink on the display, press the “+” or “-” button to adjust the time duration. Adjustable timer from 1 minute to 3 hours.
- When the adjustment is finished, the number on the display will be shown after blinking for several seconds. The induction cooker starts counting down.
- When the counting down is over, the induction cooker automatically stops heating and switches off.
- The induction cooker will shut down when the default timer is reached unless the user sets the timer himself.

#### Keep Warm

- Press the “Keep warm” button to maintain warmth. Under this mode, the induction cooker heats the ingredients with gentle power to maintain a certain temperature inside the pot.

Note: Under this mode, the power cannot be adjusted.

# III. OPERATION INSTRUCTIONS

## How To Lock

- Press the “+” and “-” button to start lock function. Now only the “ON/STANDBY” button can be used to switch off the induction cooker, all the other operations are forbidden.
- Press the “+” and “-” button for 3 seconds to quit the lock function.

## Switch Off

- When the operating time is over, the induction cooker switches off automatically.
- Press the “ON/STANDBY” button to turn off the appliance.  
Note: Do not touch the surface of the ceramic while “H” is displayed, it means the temperature high. While “L” is displayed, it means the temperature low.

## IV. COMPATIBLE COOKWARE



Iron oil frying pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless steel kettle



Enamel cooking utensil



Iron plate

- Requirement for pot materials: containing magnetic inducing materials.
- Shape requirement: flat bottom, with the diameter more than 14.5 cm and less than 20 cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Please pour some vinegar into the pot, heat it at about 60-80 °C, then wipe the spots away with brush.
- Incompatible pots material: glass, ceramic, aluminium, copper and other non magnetic material.
- If the pot removed, the induction cooker will stop heating immediately. After the buzzer sounds for 1 minute, it will go into standby mode automatically.

## V. CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet. Wait till the cooker plate of the induction cooker is not hot and start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

**Note: Please do not rinse it with water**

## V. CLEANING AND MAINTENANCE

- For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.
- When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

## VI. TROUBLESHOOTING

Abnormalities		Key checking points and trouble shooting
After plugging in the power cord and pressing the " ON/STANDBY " key, the indicator and display do not light up.		<ul style="list-style-type: none"> <li>• Is the power plug properly connected?</li> <li>• Is the switch, power outlet, fuse or power cord damaged?</li> </ul>
The " ON/STANDBY " indicator lights up and the display works normally, but heating does not start.		<ul style="list-style-type: none"> <li>• Is the pot material proper?</li> <li>• Is the appliance in a "Preset" working status?</li> <li>• For other causes, please take the appliance to a repairing and maintenance site to be fixed.</li> </ul>
Heating suddenly stops during the process.		<ul style="list-style-type: none"> <li>• Is the temperature of the oil too high when frying dishes?</li> <li>• Is the temperature of the surroundings very high? Is the air inlet or air outlet of the induction cooker blocked?</li> <li>• Is the default heating time of the induction cooker over? The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.</li> </ul>
Code of failure	E3 E6	<ul style="list-style-type: none"> <li>• Wait a moment and press the "ON/STANDBY" button when the temperature of the hotplate becomes normal, the induction hotplate will operate as usual.</li> </ul>
	E7 E8	<ul style="list-style-type: none"> <li>• Turn off the hotplate, when the voltage becomes normal, and then turn on the hotplate, it will operate as usual.</li> </ul>
	E1 E2 E4 E5 Eb	<ul style="list-style-type: none"> <li>• Please contact the special maintenance department.</li> </ul>

### Emergency

During using, if there are some abnormal cases, please unplug immediately and disconnect power.

For any failure of the product, please contact the special maintenance department or the customer service center.



# 电磁炉 使用说明书



型号：MC-STW2018

感谢您购买本电磁炉。使用前请仔细阅读本说明书，并妥善存放以备将来使用。

图片仅供参考，请以实物为准。

# I. 安全指南

为安全起见，以及为避免损坏本电器或人身伤害，请遵守以下所有安全措施。

忽略安全警告可能会导致人身伤害。

本电器未考虑以下情况：

- 儿童或残疾人在无人监督的情况下使用；
- 儿童将其视为玩具。

图标：



禁止



强制



警告

 


注意


- ⊙ 切勿在密封容器（如压缩电器、罐头或咖啡壶）中加热食物，以免发生热膨胀引起的爆炸。




- ⊙ 请勿直接用水冲洗电磁炉。请勿将水或汤洒入电磁炉的内部部件。

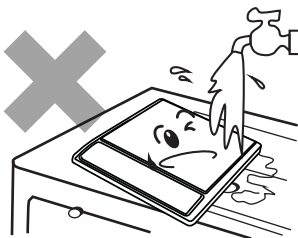

 - ⊙ 以免影响电器性能并避免受伤，请勿加热空锅。使用时，请勿在无人监督的情况下长时间离开电器。如果在无监督的情况下离开电器，请确保锅中有足够的水。

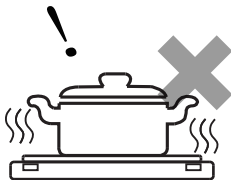

 
- ⊙ 以免发生意外，请勿在使用时将电磁炉放在燃气灶上（磁感线可加热燃气灶的金属部件）。

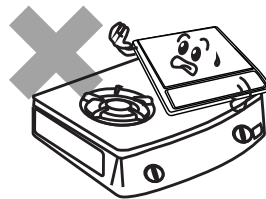




# I. 安全指南

 
⊘ 不要在电磁炉加热板上加热铁制品，以避免高温引起的危险。

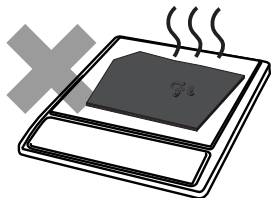


⊘ 电磁炉的配套餐具只能用于烹饪。这些厨具不能用于电磁炉和燃气灶。

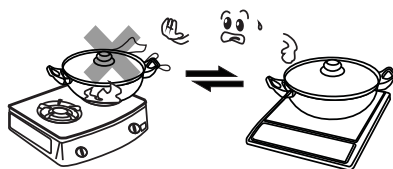 


⊘ 为避免烫伤等伤害，请勿让儿童单独操作。

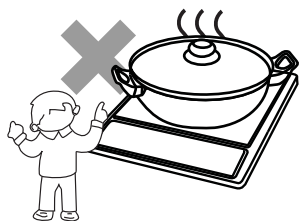 

 
❗ 使用后，请从插座上拔下电源线，以避免长时间电气连接造成电子元件起火和/或损坏。

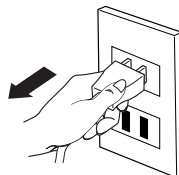

⊘ 为免生危险，请勿插入任何异物（如铁丝），也不要堵塞通风孔或进气孔。

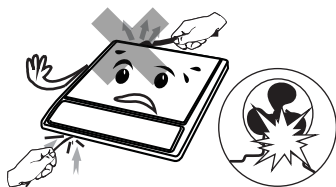 


❗ 带有心脏起搏器的人应该咨询医生。确认不影响起搏器后才能使用本电器。

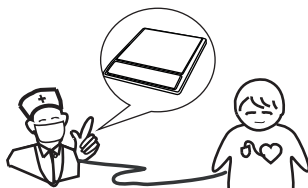 


# I. 安全指南

 
❗ 为避免损坏，请避免对加热板的冲击。警告：如果表面破裂，请关闭电器电源以免触电。

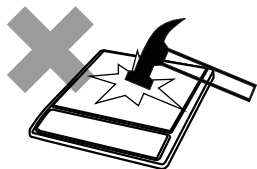

 
⊘ 为避免危险，请勿将纸、铝箔、布或其他不合适的物品放置在电磁炉加热板上进行间接加热。

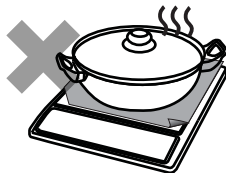

 ⊘ 使用电磁炉时，请勿将其放置在任何金属平台（如铁、不锈钢、铝）上，或将不小于 10cm 厚的非金属垫放在加热板上。

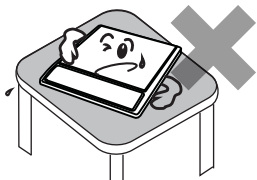

 
❗ 使用电磁炉时，请将其水平放置，并在电磁炉的侧面和背面与墙壁之间留出至少 10 厘米的空间。请勿在狭窄空间内使用电磁炉。为避免阻碍热量释放，请勿遮盖通风口。

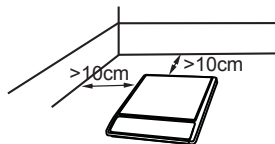

⚠ 请使用高功率、等级或高于 10A 的专用高品质电源插座。不要使用质量差的电源插座。不要与配备高功率额定值的电器（如空调、电炉等）共用电源插座，以避免由于插座过载造成的电源损坏。




 ❗ 如果电源线损坏，必须由生产商、服务代理或类似合格人员更换电源线，以免发生危险。

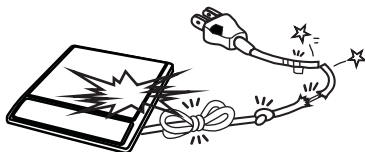

# I. 安全指南

 
⚠ 请勿使用锋利的工具接触锅板，以免破裂或损坏锅板。如果锅板发生裂纹，请关闭电器以避免可能发生的电击。

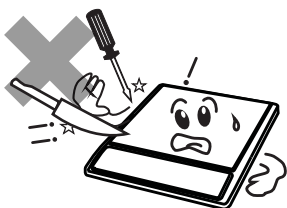


⚠ 使用电磁炉时或使用后，请保持电磁炉的清洁。保护电磁炉免受臭虫、灰尘和湿气的影响。避免蟑螂等掉入电磁炉的内部部件，而导致电路板短路。长期不使用时，请将其清洁并放入塑料袋中保存。



 
⚠ 炊具不能超载。  
锅板超载可能会损坏塑料盖和锅板。

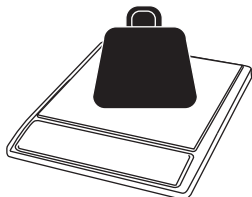

 ⚠ 因为金属物品会变热，所有，诸如刀、叉、勺子和盖子等金属物品不要放在电热板上。

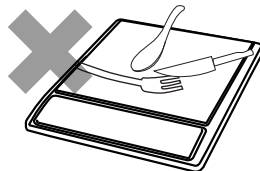

⚠ 请勿在燃气灶、煤油炉、燃气炉或任何有明火或高温环境的地方使用电磁炉。

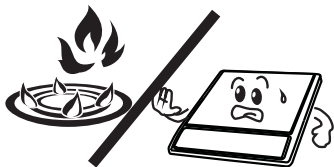 

⚠ 不要将电磁炉放在地毯、桌布或薄纸上，以免堵塞进气孔或出气孔，从而影响散热。




# I. 安全指南

 ⚠ 请小心清洁烹饪表面 - 如果用湿海绵或布擦拭，应小心由于蒸汽加热烹饪面而造成的灼伤，有些清洁材料可能会产生有毒气体。



⚠ 操作电器或移动锅后，烹饪区域的余热将保持一段时间。请勿触摸，小心高温造成的烫伤。

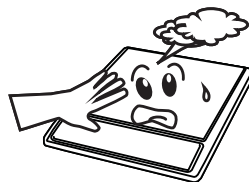

本产品适用于家用和类似应用，例如：

- 商店，办公室和其他工作环境中的员工厨房区域；
- 乡村旅馆；
- 酒店，汽车旅馆和其他住宅类型环境中的客户；
- 快捷酒店类型等。

## ❗ 强制

8岁及以上的儿童以及身体、感官或精神能力薄弱或缺乏经验和知识的人员，如果他们接受了安全使用器具的监督或指导并了解使用过程中的危害，可以使用本产品。禁止儿童玩弄本产品。未经监督的儿童不得进行清洁和用户维护。

我们建议您定期检查是否有异物（玻璃、纸等）阻塞电磁炉下的入孔。

## ⚠ 警告

## ❗ 强制

应照看好儿童，确保不让他们玩弄设备。

不要空锅使用电磁炉，否则其操作性能可能会受到影响，并可能发生危险。

## ⚠ 警告

## ❗ 强制

# I. 安全指南

将该电器放在远离儿童的地方。请勿让他们在没有监督的情况下使用产品。



**警告**

说明书应声明，不能通过外部定时器或单独的遥控系统操作电器。



**警告**

本产品只限家庭使用。禁止在户外使用。  
清洗、维护、重新安装之前或不使用时，请关闭电饭煲并拔掉插头。



**警告**

 
# II. 产品介绍

电磁炉能够通过电磁加热、高热效率，满足各种烹饪需求，并且安全可靠，易于清洁。


## 性能参数

型号	外加电压/频率	额定功率	尺寸 (mm)	重量 (kg)
MC-STW2018	220-240V~50/60Hz	2000W	350x280x65	2.5

## 电器示意图

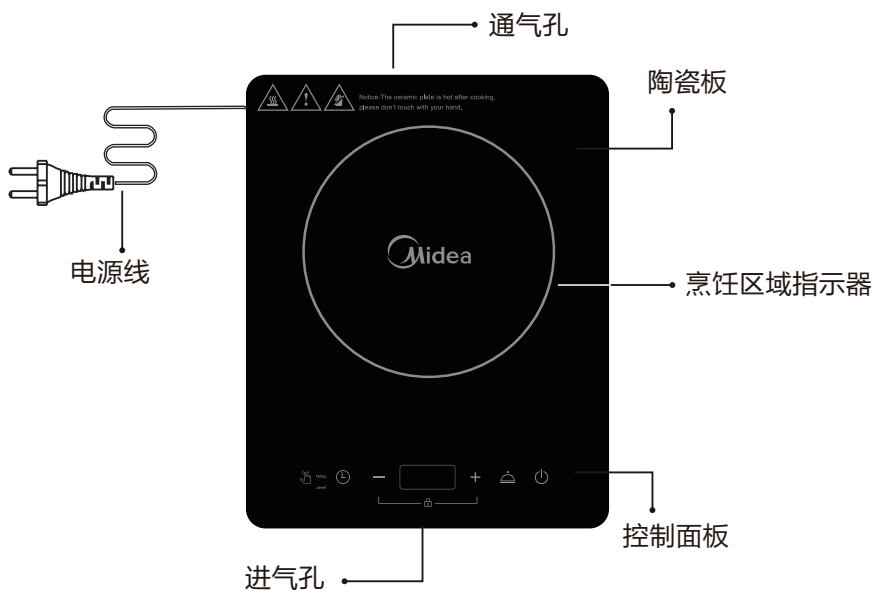

## 控制面板

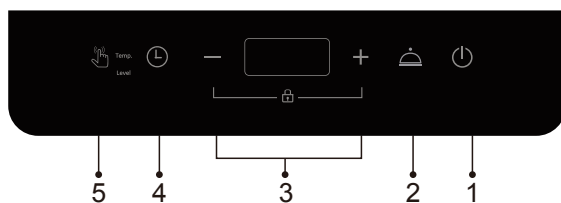 

1. 工作/待机
3. 锁定
5. 功能

2. 保温
4. 预约


## II. 产品介绍
 
### 使用新电磁炉之前

- 阅读本指南，特别注意“安全警告”部分。
- 拆下陶瓷板上的保护膜。

### 使用触摸控制键

- 控制键对触摸产生响应，因此您不需要用力按。
  - 请不要使用指尖。
  - 每次触摸产生响应时，你会听到蜂鸣声。
  - 确保控制键始终是清洁和干燥的，并且不被任何物体（例如器皿或抹布）遮盖。
- 即使溅上些许水也可能使控制键失去响应。

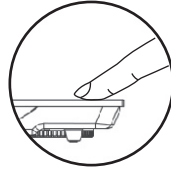

## III. 操作说明

### 将锅放在陶瓷板上

- 确保通气孔不被堵塞，并且餐具远离陶瓷板的四周。
- 确保盛食物或液体的炊具放置在陶瓷板的中央。

### 插件

- 连接电源后，会听到哔声。显示屏显示“L”，表示电磁炉处于待机模式。

### 开启

- 按下“工作/待机”键后，电磁炉随即进入待加热状态。按下“功能”键，电磁炉进入加热模式。
- 按下“工作/待机”键后，如果 10 秒中内未按下功能键，电磁炉将自动关闭。
- 按下功能键后，如果陶瓷板上没有适当的锅具，电磁炉将不会启动，并且会发出警报指示需要使用锅具。1 分钟后，电磁炉会自动关闭。

### 功能

- 开启电磁炉后，按下“功能”键进入温度或等级模式。
- 您可以按“+”或“-”按钮来调整功率级别。  
您可以按“+”或“-”按钮来调整温度。



### III. 操作说明

#### 预约

- 按下“预约”键进入定时模式。当定时器指示灯亮起且显示屏上的数字闪烁时，按“+”或“-”按钮来调整持续时间。定时范围是 1 分钟到 3 小时。
- 当调整完成后，显示器上的数字将在闪烁几秒钟后显示出来。电磁炉开始倒计时。
- 当倒计时结束时，电磁炉自动停止加热并关闭。
- 达到默认定时时间时，电磁炉将自动关闭，除非用户另外设置时长。

#### 保温

- 按下“保温”按钮进行保温。该模式下，电磁炉以较低功率对食材进行加热，使锅内保持一定温度。  
注意：该模式下无法调整功率。

## III. 操作说明

### 如何锁定

- 按“+”和“-”键启动锁定：功能。这时，仅可使用“工作/待机”键关闭电磁炉，并且禁止所有其他操作。
- 按住“+”和“-”键 3 秒钟退出锁定功能。

### 关闭

- 当操作时间结束时，电磁炉自动关闭。
- 按下“工作/待机”键关闭电磁炉。  
注意：显示“H”时，表示高温，这时请不要碰触陶瓷制品的表面。显示“L”时，表示低温。

## IV. 通用炊具



油煎铁锅



不锈钢锅



铁锅



铁水壶



搪瓷不锈钢水壶



搪瓷炊具



铁板

- 锅质要求：含磁感应材料。
- 形状要求：平底，直径大于 14.5 厘米且小于 20 厘米。
- 首次使用后，锅底部会出现一些白斑。这属于正常现象。
- 请将一些醋倒入锅中，在约 60-80°C 时加热，然后用刷子擦去斑点。
- 非通用型锅质：玻璃、陶瓷、铝、铜等非磁性材料。
- 如果取下锅，电磁炉将立即停止加热。蜂鸣器鸣响 1 分钟后，将自动进入待机模式。

## V. 清洁与维护

- 清洁之前，请先关闭电器的电源，然后从电源插座上拔下电源插头。等到电磁炉的锅板散完全余热后，开始清洁。
- 长时间使用电磁炉后，进气孔/出气孔将堆满灰尘或其他污垢，请用柔软的干布擦拭。进气孔和出气孔上的灰尘可以使用软刷或微型吸尘器进行清洁。

**注意：请勿用水冲洗**

## V. 清洁与维护

- 对于锅板上的油渍，请使用带有少量牙膏或温和洗涤剂的柔软湿布擦拭锅板。然后使用柔软的湿布擦拭，直到没有污渍残留。
- 长时间不使用时，请将电源插头从电源插座上拔下，并保护电磁炉免受任何灰尘或臭虫的损害。

## VI. 故障排除

异常情况		关键检查点和故障排除
插入电源线后，按“工作/待机”键，指示灯和显示屏不亮。		<ul style="list-style-type: none"><li>• 是否正确连接电源插头？</li><li>• 开关、电源插座、保险丝或电源线是否损坏？</li></ul>
“工作/待机”指示灯亮起，显示屏正常工作，但未开始加热。		<ul style="list-style-type: none"><li>• 锅质是否适合？</li><li>• 电器是否处于“预设”工作状态？</li><li>• 对于其他原因，请将电器带到修理和维护现场进行修理。</li></ul>
加热过程中突然停止。		<ul style="list-style-type: none"><li>• 炒饭时油温是否过高？</li><li>• 环境温度是否很高？</li><li>• 电磁炉的进气孔或出气孔是否堵塞？</li><li>• 电磁炉的加热时间是否为默认？</li><li>• 电磁炉的自我安全保护开始，等待几分钟，然后连接电源即可使用。</li></ul>
故障代码	E3 E6	<ul style="list-style-type: none"><li>• 当电磁炉的温度恢复正常时，等待片刻，并按“工作/待机”按钮，感应电磁炉照常运行。</li></ul>
	E7 E8	<ul style="list-style-type: none"><li>• 关闭电磁炉，当电压正常后，重新打开电磁炉，它将照常运行。</li></ul>
	E1 E2 E4 E5 Eb	<ul style="list-style-type: none"><li>• 请联系特约维修部门。</li></ul>

### 紧急情况

使用过程中，如果有异常情况，请立即拔下插头并断开电源。  
如果电器发生故障，请联系专业维修部门或客户服务中心。