



# MANUAL DEL USUARIO

## ELECTRIC GRIDDLE

### MODEL: MC-DY3020Power101



***READ AND SAVE THE FOLLOWING INSTRUCTIONS***

Note: images are for information only.

<b>SAFETY PRECAUTIONS .....</b>	<b>3</b>
<b>PARTS AND FEATURES .....</b>	<b>5</b>
<b>HOW TO USE .....</b>	<b>6</b>
<b>CLEANING AND MAINTENANCE .....</b>	<b>6</b>
<b>FAULT EXPLANATION .....</b>	<b>7</b>
<b>WARRANTY .....</b>	<b>8</b>

### Read This Manual

Inside you'll find many helpful hints on how to use and maintain your Electric Griddle properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your appliance. These instructions may not cover every possible condition of use, so attention to safety details is required when operating and maintaining this product.



### CAUTION

- This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been provided with supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance shall be installed in accordance with national wiring regulations.

### Welcome

You are about to see how quick, easy, and delicious healthy eating can be!

Please read all the safety information, warnings, and instructional material found in this booklet before getting start. Set your machine on a dry, level surface.

Then, follow the cleaning instructions to prepare your machine for use. Always clean your machine before the first use.

## SAFETY PRECAUTIONS

When using your electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following.

1. Read All Instructions.
2. Do not touch hot surface. Use handles or buttons of control panel. The unit body will become very hot during long-time using, handle it carefully.
3. CAUTION: To reduce the risk of electric shock, cook only in removable container.
4. Close supervision is necessary when any appliance is used by or near children.
5. To protect against electrical shock, do not immerse cord, plug, or cooker body in water or other liquid.
6. Do not add too much water beyond the edge of the porcelain inner pot, or the water will flow out during cooking.
7. Unplug from outlet when do not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
9. The use of accessory attachment not recommended by the appliance manufacturer may cause injuries.
10. Intended for countertop use only.
11. Do not use the appliance for other than intended use.
12. Do not use outdoors.
13. Extreme caution must be used when moving an appliance containing other hot liquids.
14. Do not let cord hang over edge of table and counter, or touch hot surface.
15. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
16. WARNING: Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
17. Prior to first use, please make sure that the electric rating of the appliance is in conformity with the current electric rating.
18. To disconnect, turn any control to "off", then remove plug from wall outlet.
19. DO NOT place unit on or near a hot gas or electric burner, or in a heated oven.
20. DO NOT put frozen articles inside the porcelain pot when it is too much heat, nor do wash the porcelain pot with the cold water.

## SAFETY PRECAUTIONS



caution, hot surface

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

Misuse can cause potential injury

A heating element surface is subject to residual heat after use


21. DO NOT uncover the lid when in stewing, otherwise the heat will run out and more stewing time will be needed.
22. DO NOT cooking food directly in the Aluminum pot.
23. DO NOT place the porcelain inner pot on gas stove.
24. To avoid any cracks or spoilage that may bring to the slow cooker, proper maintenance is necessary..
25. Only carry the slow cooker from the side handles on the cooking base. Do NOT carry from the handle on the lid ,even when locked.
26. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way
27. HOUSEHOLD USE ONLY.

**WARNING:** The appliance must never be used with oil, it should not be used as a frying pan or deep fat fryer!

## SAVE THESE INSTRUCTIONS



# PARTS AND FEATURES

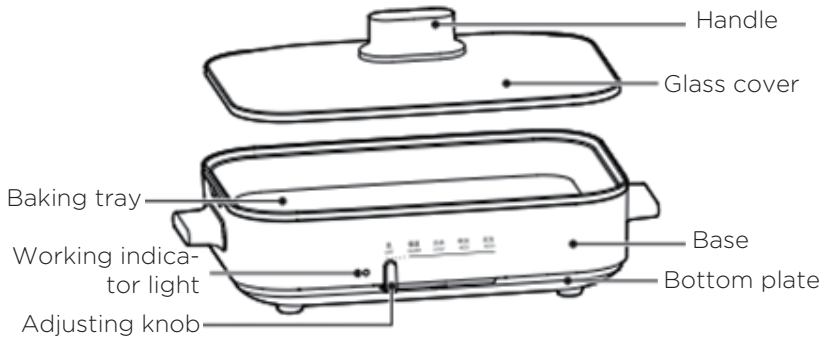


## Accessories (Optional, purchased separately)



1.Deep plate



 2.Meatball plate



3.Round cake plate

## Product Information

Product model	Rated voltage	Rated power
MC-DY3020Power101	220-240V	1300W

## HOW TO USE

1 Insert the power plug to make sure it is plugged in.



2 Turn the adjusting knob in the front to the high temperature gear.



3 Put the seasoning in the baking pan.



4 Add food.



5 Put on the glass cover, start cooking, open the glass cover and stir the food at the right time to ensure uniform heating.



6 After cooking, unplug the power cord and wipe the baking tray with a wet towel after cooling down.



## CLEANING AND MAINTENANCE

- Please be sure to unplug the power cord plug after each use, wait for a few minutes after power failure, and then wipe it with a damp cloth. If it is stored for a long time, it should be cleaned with detergent.
- Do not use abrasive cleaning products or solvents for cleaning.
- Do not put the product in water for cleaning in case of electric shock and malfunction.
- Dry all components before storage and put the product in a safe and dry place.

# FAULT EXPLANATION

Serial Number	Abnormal Phenomena		Cause	Check Points and Troubleshooting
1	Working light is always off	The heating plate stops functioning	<ol style="list-style-type: none"> <li>1. The power supply is not connected</li> <li>2. Internal wire is disconnected</li> <li>3. Fuse is burnt out</li> <li>4. The temperature controller is damaged</li> </ol>	<ol style="list-style-type: none"> <li>1. Check whether the switches, plugs, sockets, power leads are intact or not, and ensure that the plugs and sockets are in right place.</li> <li>2, 3, 4 send to the designated maintenance department for maintenance</li> </ol>
		The heating plate starts functioning	Indicator light is damaged	Send to the designated maintenance department for maintenance
2	The working light is always on and never off	The heating plate stops functioning	<ol style="list-style-type: none"> <li>1. The electric heating pipe is damaged</li> <li>2. Internal wire is disconnected</li> </ol>	Send to the designated maintenance department for maintenance
		The heating plate starts functioning	The temperature controller is damaged	Send to the designated maintenance department for maintenance

## LIMITED ONE YEAR WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep tile original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the label (e.g., 120V~).

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so tile foregoing limitations may not apply to you.

### NOTICE

**Customer Service Management Office:**

5 Sylvan Way, Suite 100 Parsippany, NJ, 07054

Amazon Store: <https://www.amazon.com/comfee>

Tel: 866-646-4332

E-mail: [officialservice@comfeeappliance.com](mailto:officialservice@comfeeappliance.com)

**Midea**