


 

 
 
 


 

 


 
 




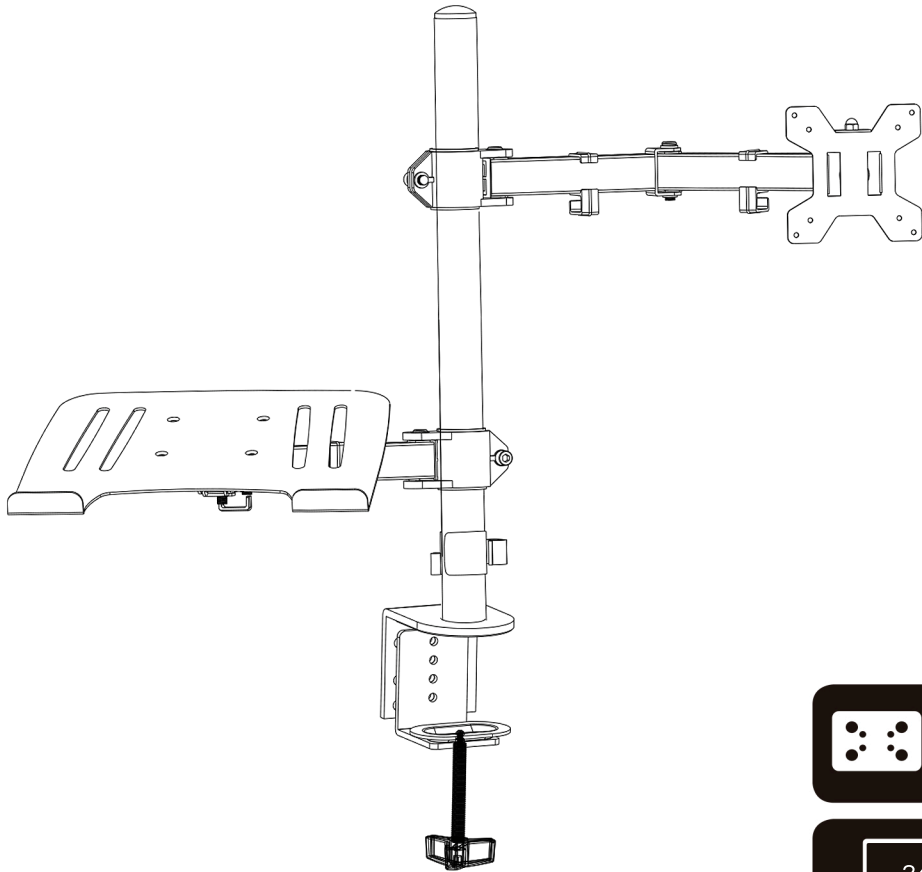

**GUIA DE REFERENCIA
MANUAL DE MONTAJE**







BR04-2
**Brazo monitor
y laptop de poste**





Contenido

	1 X1		8 X1		M4x30 F X4
	2 X2		9 X4		M4*12 G X4
	3 X2		M8x10 A X2		H X4
	4 X1		M6 B X2		I X1 3mm
	5 X1		M5x16 C X3		J X1 5mm
	7 X1		M4x8 D X4		K X1 6mm
			M4 E X4		L X1 7mm

Paso 1

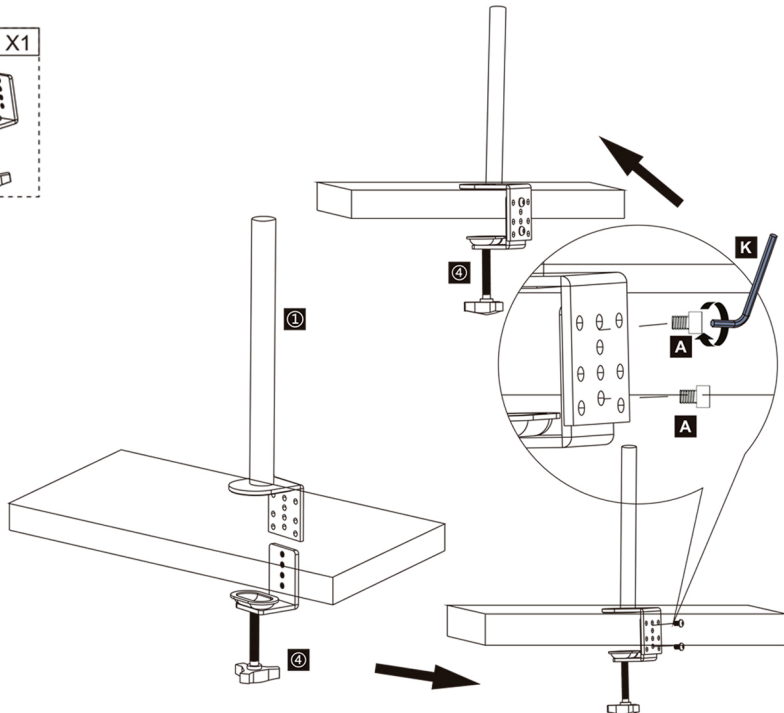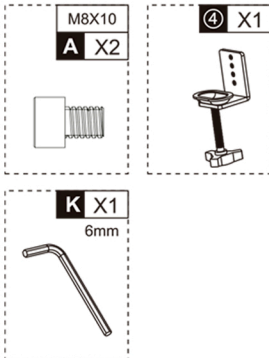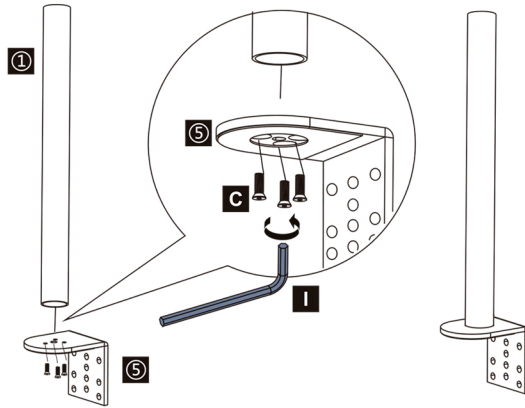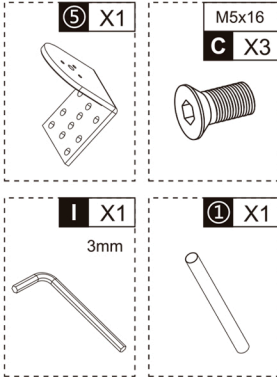


Paso 2

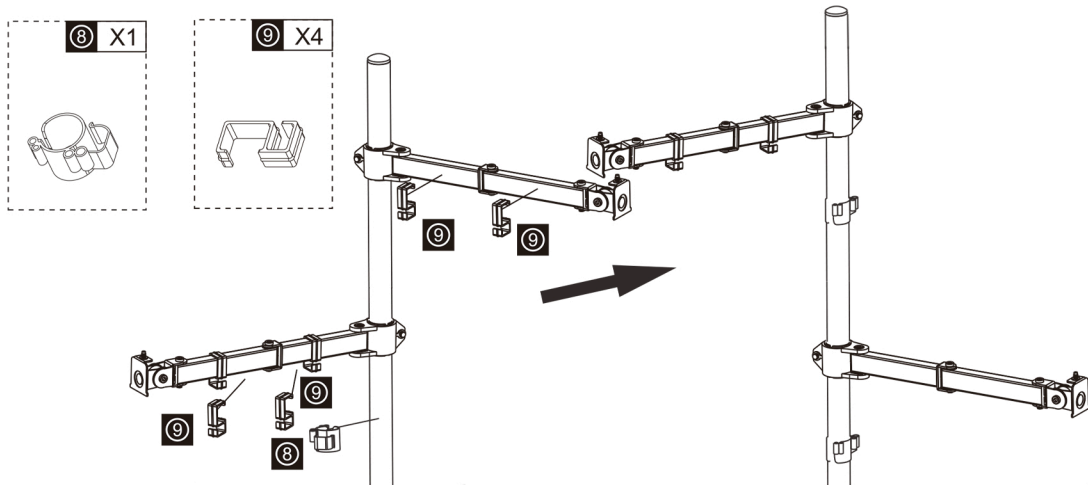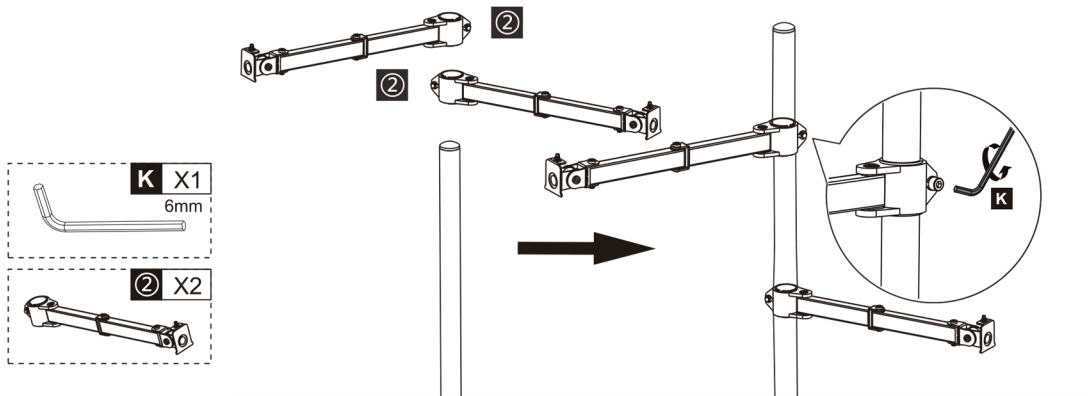




Ergonomics

BR04-2 Brazo monitor y laptop de poste

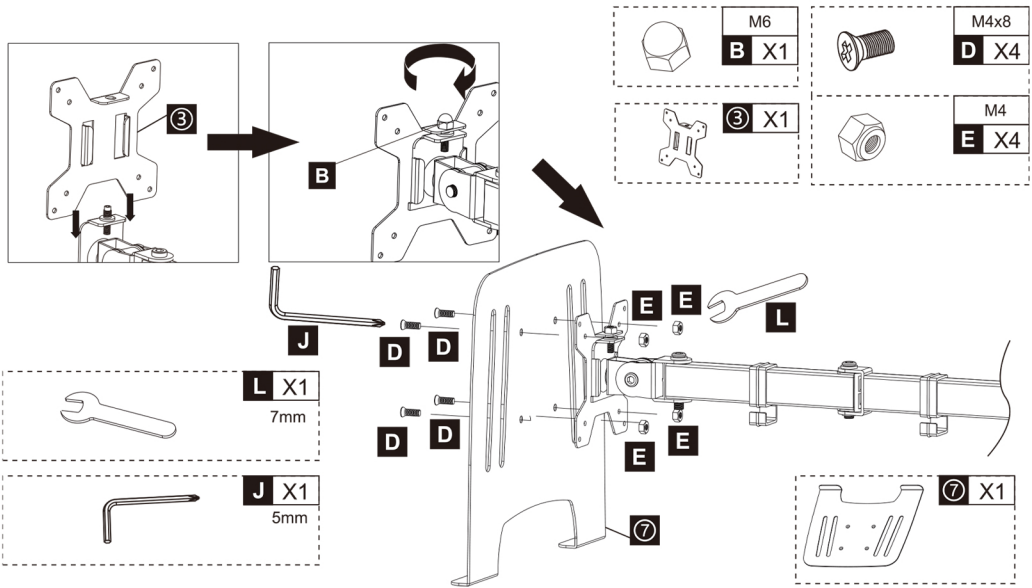

Paso 3

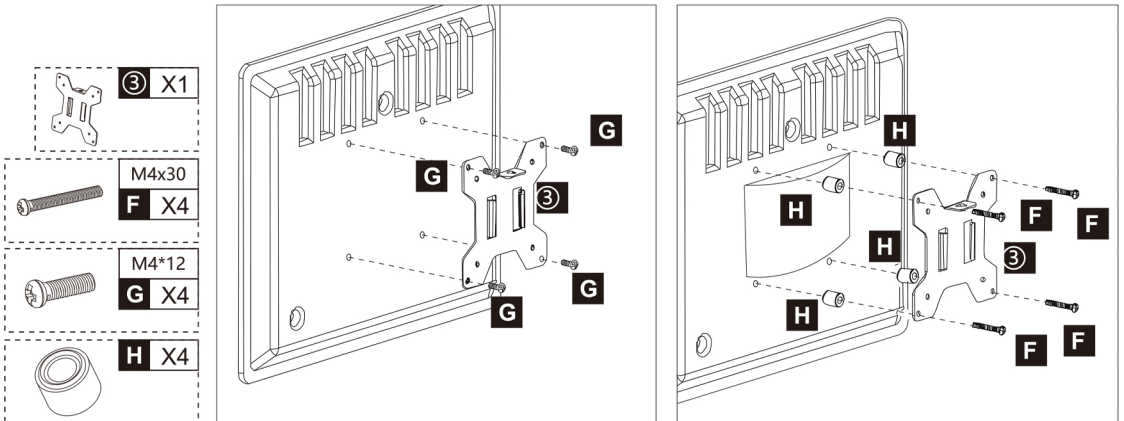



Ergonomics

BR04-2 Brazo monitor y laptop de poste

