



 

 



**GUIA DE REFERENCIA
MANUAL DE MONTAJE**



 

 

 


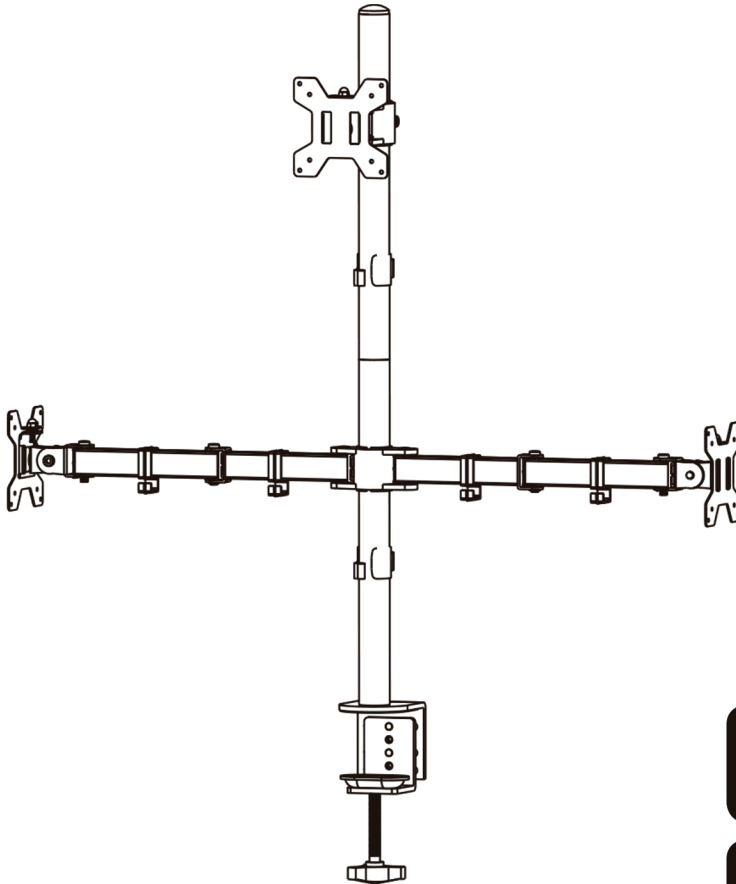



BR06-3
Brazo monitor
triple de poste





Contenido

	1 X1
	2 X1
	3 X3
	4 X1
	5 X1
	6 X1
	7 X1


	M6 A X3		I X2
	M8x10 B X2		J X4
	M5x16 C X3		K X1
	M4x30 F X12		L X1
	M4*12 G X12		M X1
	H X12		

Paso 1

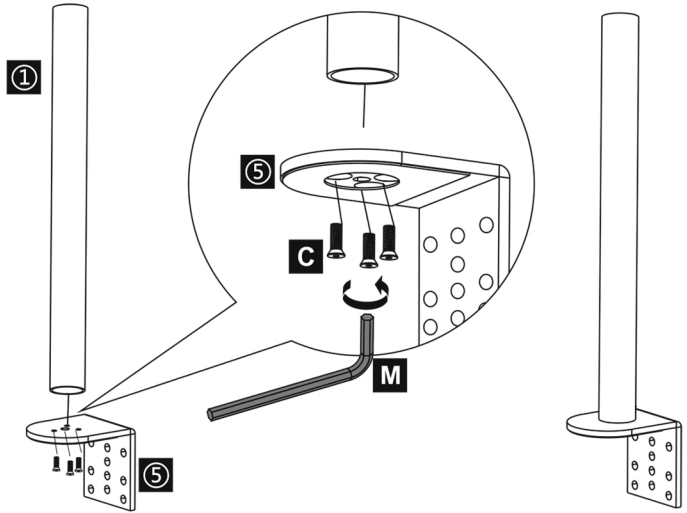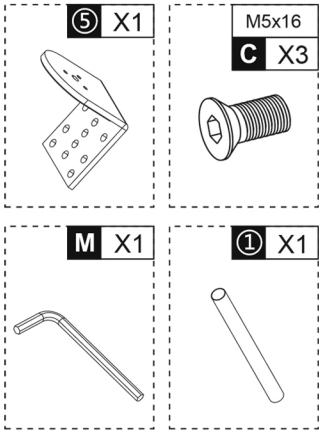


Paso 2


- M8X10
B X2
- 4** X1
- K** X1
- 6** X1
- M** X1

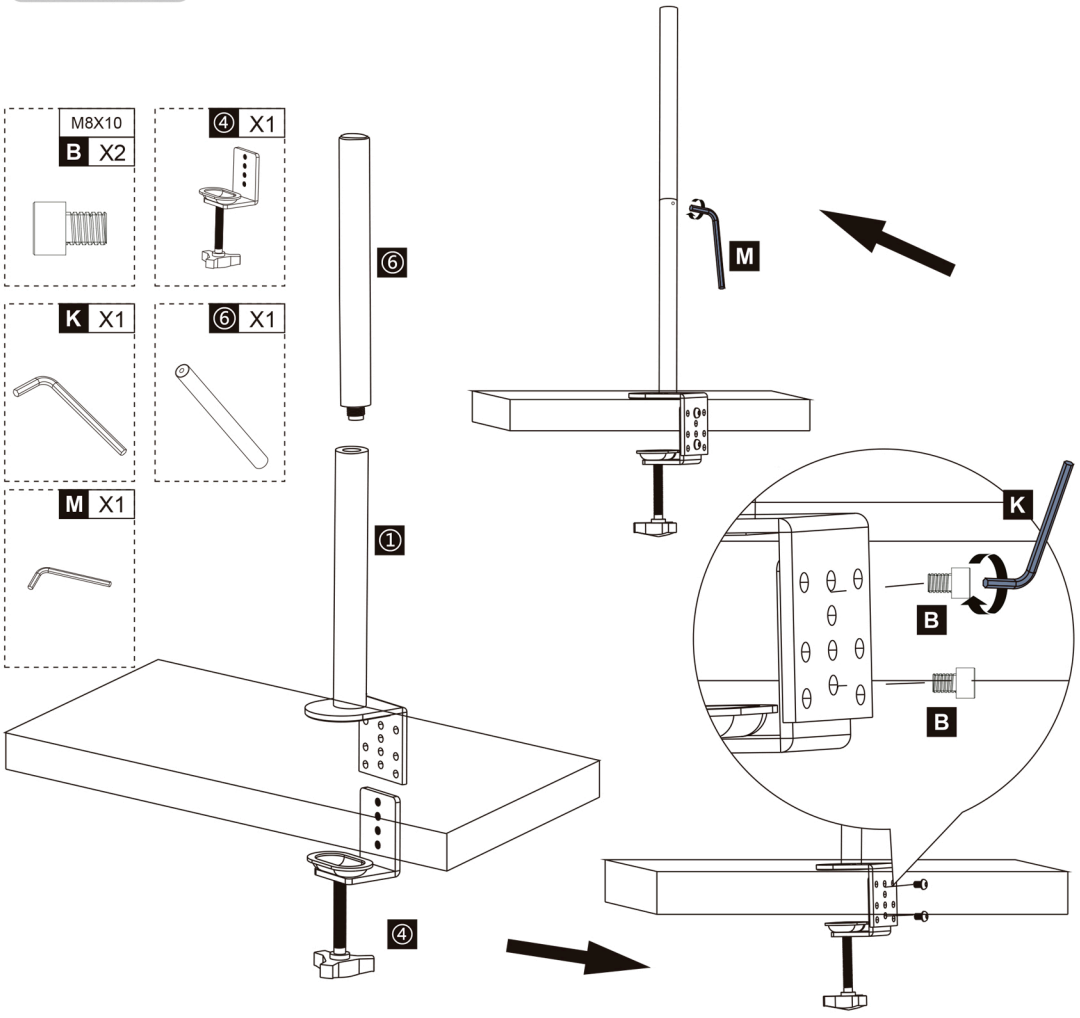

Paso 3





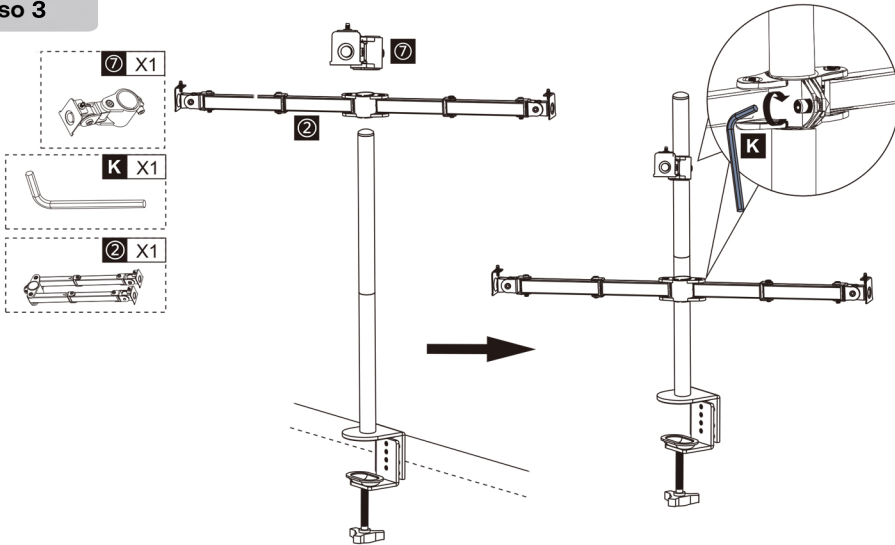


Paso 4

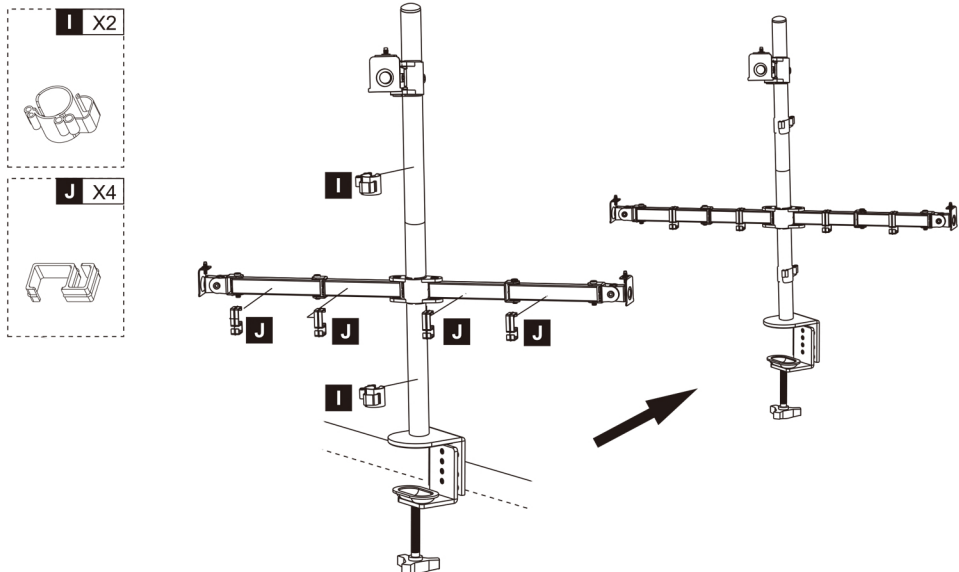



Paso 5

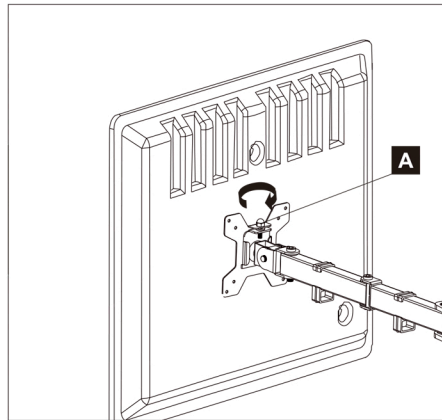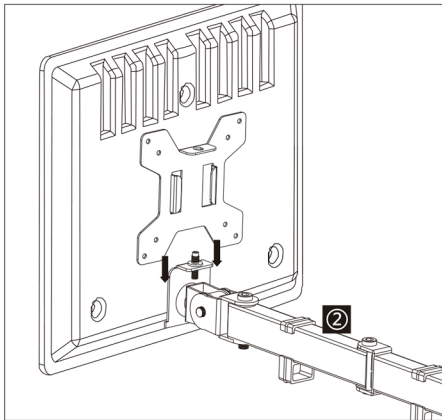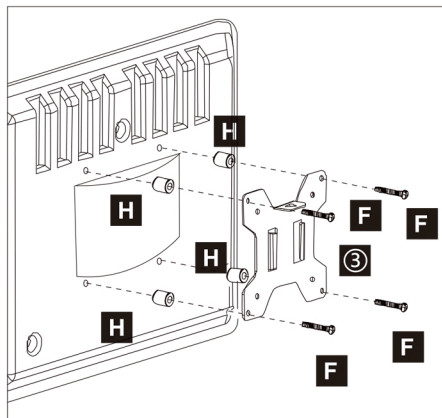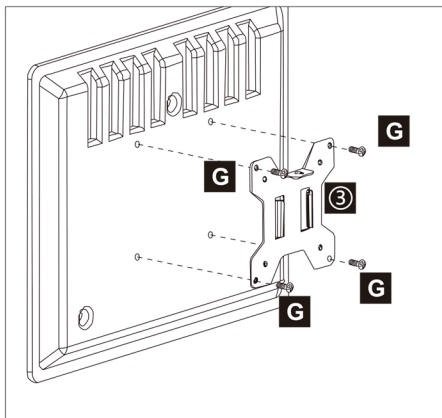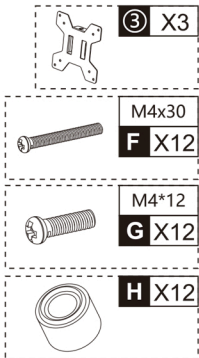



Paso 6

