

PLEASE READ BEFORE USE



HIGH5 E-NAIL

BEFORE USE:

- Read the specifications of the unit on the last page of this manual. Ensure that the electrical specifications are suitable for your outlet or alternative power source.
- Make sure the coiled heater fits over your nail. If the coil fits too tightly into the nail do not force it instead unscrew the dish, insert into the coil and reassemble.
- Plug the coiled heater into the control box. Plug power cord into the control box and connect to a power outlet.
- Press the power switch on the back of the control box to turn the unit ON/OFF.

HOW TO SET TEMPERATURE:

- Unit is preset to reach 680 °F.
- Use the  and  arrows to set the desired temperature. Unit has a temp range of 0 °F to 999°F. Hold the button down to increase number changing speed.
- The numbers will flash ten times indicating desired temperature is set.
- You will never need to press the “set” or  button.

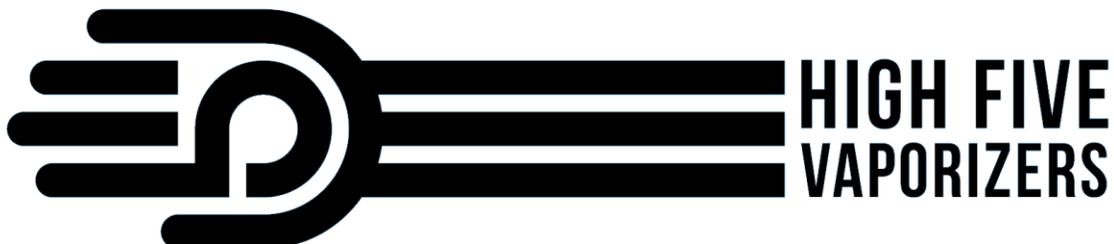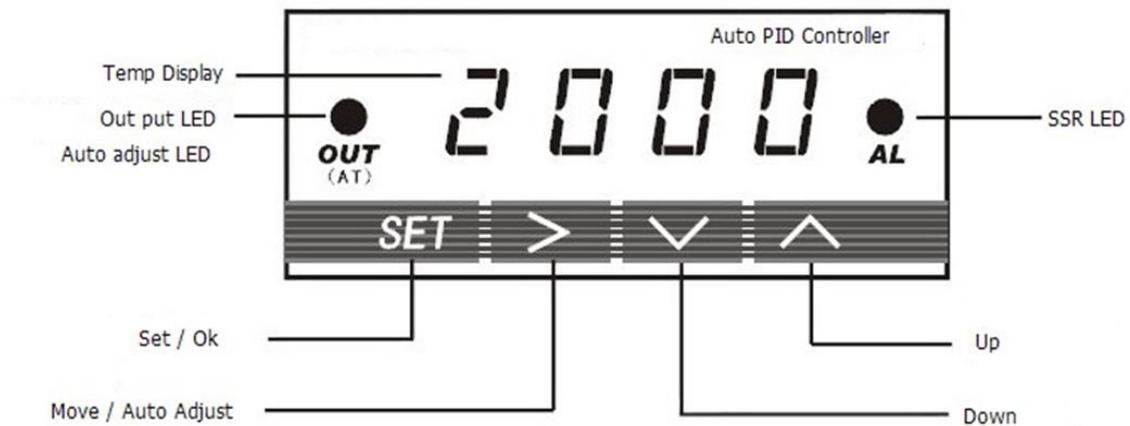

HOW TO CLEAN:

- Unplug the unit and ensure that the coiled heater is safe to touch.
- Gently wipe the digital face and the rest of the control box with a soft cloth. Clean the coiled heater with isopropylene.

PROLONG THE LIFE OF YOUR HEATER:

- We advise never to set the temperature above 999°F as it will reduce the life of the coiled heater over time.
- Never apply water for cooling or cleaning purposes.
- Never pull, twist, bend or put any other forms of stress on the coiled heater. This includes if your glass rig is right in front of you but your control box is out of reach NEVER pull the coiled heater to bring the e-nail closer to you. This will damage the internal wiring/sensors and void the warranty.

WARRANTY:

- HIGH5 provides a 1 year warranty against failure on all electronic components from date of shipment. This warranty does not cover any forms of accidental damage, misuse or neglect. HIGH5 will repair units that break due to forms of accidental damage, misuse or neglect for a fair price. What constitutes as accidental damage, misuse or neglect? The following and any similar forms of the following apply and will void the warranty:
 - Dropping, throwing or any other forms of physical damage to the e-nail.
 - Overuse of force/applying too much stress to the coiled heater in any way whether it be bending, twisting, pulling.
 - Keeping the unit ON for more than five hours continuously.
 - Exposing the unit or its electrical components to any liquids/gels.
 - Setting the temperature above 999°F.
 - Any customization/modifications of the unit internally or externally.



OPERATING SAFELY:

-  **USE WITH CAUTION:** Must be 18 years of age or older to operate. Never leave the unit unattended while powered on or plugged in. The coiled heater will heat and remain hot after usage. Refrain from touching the coiled heater for a minimum of 5 minutes after each usage. Read the specifications of the unit below and ensure that the electrical specifications are suitable for your outlet or alternative power source.

SPECIFICATIONS:

Control Box	
Working Voltage:	AC110V 60Hz
Output Voltage:	AC110V
Power:	135W

Coiled Heater	
Working Voltage:	AC110V 60Hz
Power:	120W
Ground resistance:	Below 2 Ω
Ground potential:	Below 2mv

