

# Quick Start Up Tips!

**To avoid compressor DAMAGE, fridge must sit upright (normal operating position) for 24 hours prior to starting! Failure to follow this instruction may permanently damage the compressor and VOID warranty!**



TB31 – TB31A  
TB41 – TB41A  
TB51 – TB51A

- Plug in the AC or DC power cord. Press the "ON/OFF" button to run the refrigerator. The LED readout will then display the internal temperature.
- To change from °C to °F, press both the "Up" and "Down" arrows at the same time for approximately ½ second.
- To increase the temperature, press the "Up" arrow. To decrease the temperature, press the "Down" arrow. Once the arrow is released, the display will flash for 3 seconds showing

## USEFUL ADVICE

1 – Use this fridge in MAX mode when:

- High ambient temperatures are present;
- For quick cool-down especially when used as a freezer.

2 – Use this fridge in ECO mode when:

- Using the unit as a fridge in low ambient temperatures;
- When the vehicle is parked for an extended period with the engine turned off.

## FILLING

**DO NOT PUT HOT FOODS INTO THE REFRIGERATOR!**

Arrange items in such a way as to avoid breakage, especially where glass bottles are used.

Make sure that the lid is properly closed and avoid excessive opening and closing of the lid to maintain temperature.

## DEFROSTING

Defrosting is necessary when frost is greater than 1/8" thick.

To defrost, simply turn off the fridge and open the lid.

**DO NOT USE SHARP OBJECTS OR A HEAT SOURCE TO DEFROST THE UNIT!**

Once the fridge has defrosted, thoroughly dry the interior before re-use.

## NOTE

The small storage area nearest the thermostat does not receive cooling from the evaporator and will not get as cool as the main body of the fridge. This area is intended to be used to store fruits, vegetables and condiments.

**More information can be found inside the enclosed instruction manual.**