 
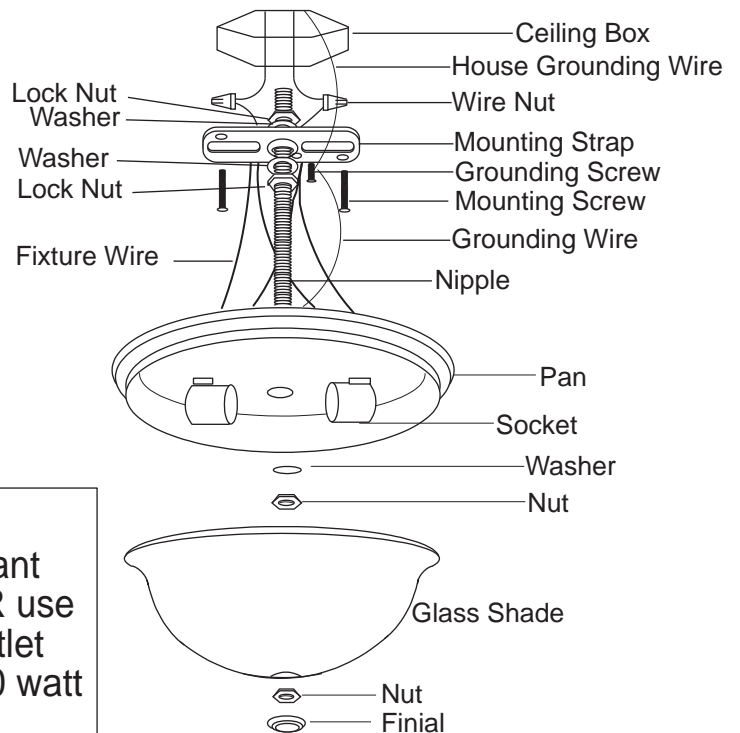 
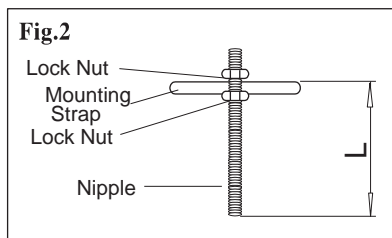 


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

CC1541/CC1543/CC1545/CC1571/CC1573/CC1575/CC1601/CC1603/CC1605/CC1631/CC1633/CC1635/CC1751/CC1753/CC1755

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

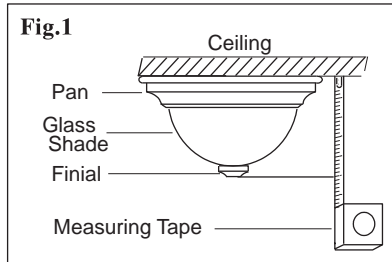

**Caution:**  
**ONLY FOR THREE LIGHTS,** If you want to use 3-60 watt bulbs, please NEVER use them with plastic outlet box. If your outlet box is plastic one, please use the 3-40 watt bulbs.

## Installation Steps:

1. Measure the length from ceiling to the finial. (See Fig.1)
2. Thread the nipple into the mounting strap and adjust the length as you measured (See Fig.2), and then tighten with 2 washers and 2 lock nuts by wrench.
3. Attach the mounting strap to the ceiling box by using 2 mounting screws.
4. Make wire connections with wire nuts:
  - Connect black wire from fixture to black wire from power source.
  - Connect white wire from fixture to white wire from power source.
  - Attach the grounding wire and the house grounding wire to the mounting strap with a green grounding screw.
 Carefully tuck wires back into the ceiling box.
5. Attach the pan to the mounting strap by inserting the nipple, and then secure with a washer and a nut.
6. Install bulbs. (Please do not exceed the maximum capacity which is recommended on the package.)
7. Attach the glass shade to the pan by inserting the nipple, and then secure with the nut and finial.
8. Turn on the power at fuse or circuit box.