

GET STARTED
INSTRUCTION MANUAL



FLOWERMATE.COM

Welcome!

TABLE OF CONTENTS

Introduction	2
What's Included	2
Slick Overview	3
Preparing the SLICK for first-time use	4
How to power on/off the device.....	4
How to load herb into the heating chamber.....	5
How to load oil/waxy into the heating chamber.....	5
Adjusting the temperature	6
How to clean the device	7
Battery & Charging	7
Safety Features	8
Safety Disclaimers	9
Warnings.....	10
Warrenty	11
Deutsches Handbuch	12

Introduction


Flowermate's Slick is the slimmest and sleekest dry herb unit from the Flowermate line. Extremely easy to use, the Slick has three preset temperatures: 385° F , 405° F, and 420°F with a haptic feedback which vibrates to indicate when ready. Its black ceramic chamber can hold up to 0.4 of a gram and the unit comes equipped with a borosilicate glass mouthpiece. It's isolated airflow circumvents upward through top airflow openings to provide cool and pure tasting draws every time. Open up the bottom to swap out the rechargeable and replaceable battery when needed. Try the new Slick to experience the efficiency of the Flowemate line.

What's Included?

- 1 SLICK Dry Herb Vaporizer
- 1 18650 2500mAh High-Drain Battery
- 1 Oil/Waxy Chamber (Made with organic cotton)
- 1 Micro USB Cable
- 5 Stainless Steel Chamber Screens
- 5 Stainless Steel Mouthpiece Screens
- 1 Packing Tool and Dabber
- 1 Cleaning Brush
- 1 Stainless Steel Pod
- 1 Warranty Information Card
- 1 User Manual

Slick

vaporizer

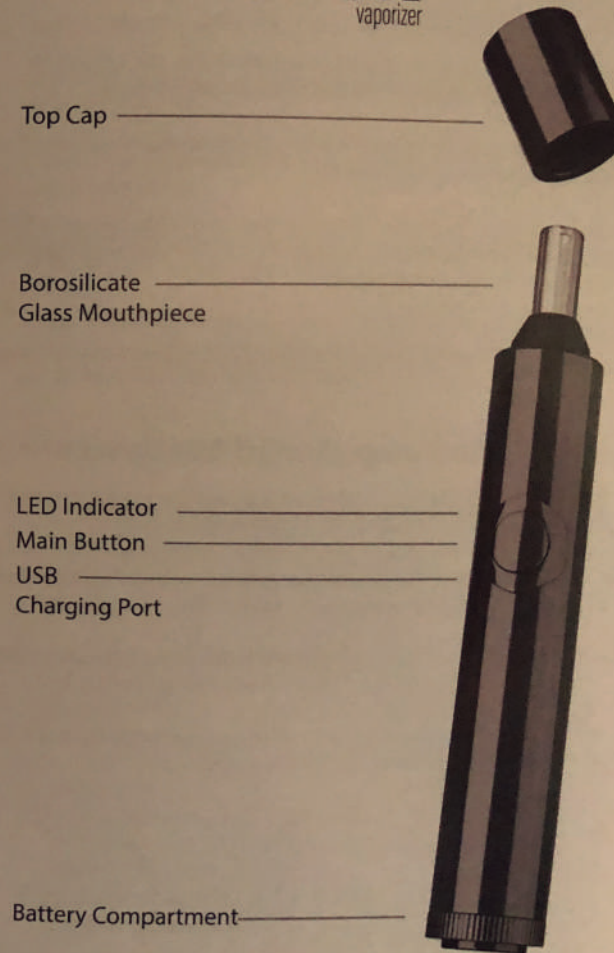

Preparing the SLICK for First-time Use

1. When using the SLICK for the first time, twist off the bottom cap, remove the insulation sheet, and replace cap securely. The battery will then be ready for use.
2. Pull off the top cap, and attach to the bottom. The top cap can be attached to the bottom of the unit to avoid losing the cap.
3. Remove mouthpiece to reveal heating chamber and insert your loaded dry herb pod or waxy/oil chamber.
4. Turn the unit on by clicking the power button 5 times fast and adjust temperature by clicking the power button 3 times fast when powered on. Enjoy the Flowermate SLICK.

How to Power On/Off the Device

1. To power the SLICK on and off, click the power button 5 times fast. The unit will vibrate for 2 seconds when powering on and off.
2. After loading the device, when ready, press and hold the power button to begin your heating cycle.

Note: The unit will vibrate for 2 seconds when the unit reaches your selected temperature.

3. After 5 minutes the heating cycle will be complete and the SLICK will vibrate for 2 seconds and enter sleep mode.

How to Load Herb into the Heating Chamber

1. To load herb into the heating chamber first remove the top cap of the SLICK and secure the cap to the bottom of the unit.
2. Remove mouthpiece to reveal the heating chamber.
3. Grind desired blend to a medium-fine level and insert into the included stainless steel pod.
4. To load the pod, unscrew the lid of the pod and then proceed to fill with your desired blend.
5. Once pod has been loaded, screw the lid back on and proceed to load pod in the SLICK heating chamber.
6. Replace mouthpiece and proceed to turn the unit on by clicking the power button 5 times fast. Set to desired temperature by clicking the power button 3 times fast to change temperature level.

How to Load Oil/Waxy into the Heating Chamber

To load oil or waxy into the heating chamber first remove the top cap of the SLICK and secure the cap to the bottom of the unit. Then, remove the mouthpiece to reveal the heating chamber.

Oil

1. Use the included oil/waxy chamber to enjoy oil.
2. Fill liquid/waxy chamber with at least 5 drops of (0.2 - 0.3ml) oil. Let oil settle for a few seconds.
3. Place oil/waxy chamber into the heating chamber and replace mouthpiece.
4. Turn the unit on by clicking the power button 5 times fast. Set to desired temperature by clicking the power button 3 times fast to change temperature level.
5. It is recommended to use the highest heating level for oils. See example on next page.

Waxy

1. Use the included oil/waxy chamber to enjoy waxy.
2. Unscrew the lid of the oil/waxy chamber and place your concentrate around the recess of the lid. The organic cotton acts as a wick to absorb the oils.
3. Place oil/waxy chamber into the heating chamber with lid facing down and replace mouthpiece.
4. Turn the unit on by clicking the power button 5 times quickly. Set to desired temperature by clicking the power button 3 times fast to change temperature level.



Note: Do not turn on the device while loading oil/waxy into the chamber.

Adjusting the Temperature

The SLICK has three preset temperature levels, each with a 5 minute heating cycle.

Preset Temperature LED Indicator Definition:

- First level: Blue LED color = 385°F (196°C)
- Second level: Green LED color = 400°F (205°C)
- Third level: Red LED color = 420°F (215°C)

How to adjust the temperature setting during heating -

1. Press the power button 3 times in 1.5 seconds to increase a temperature level. The unit will revert to lowest temperature after the third temperature level.
*The temperature levels will follow this pattern:
Example: 1->2->3->1->2->3*
2. LED will flash one time every second during heating. When the unit reaches the desired temperature, the LED will stop flashing and maintain a solid color light.

How to Stop the Heating Process and Power the Unit Off

1. Hold the power button 2 seconds to stop the heating process.
2. Press the power button 5 times quickly to power off the device

How to Clean the Device

1. It is important to keep your device clean for proper function. The best practice for this is to empty your device after every use to avoid resin build-up.
2. Keep in mind that the stainless steel pod and oil/waxy chamber will be hot and uncomfortable to touch after the session has completed.
3. It is best to unload the pod or oil/waxy chamber on a heat resilient emptying or reloading.

Alcohol wipes can be used to clean the inner chamber but keep in mind to properly dry and burn off any excess alcohol prior to use.

4. The mouthpiece can be cleaned using warm water, alcohol wipes, or a quick soak in isopropyl alcohol. Be sure to rinse with water, dry, and burn off prior to use.

Battery & Charging

Specifications

- MICRO-USB 5PIN charger
- Charging voltage: DC 5V;
- Charging current: 800-1000mAh

How to charge the SLICK

To charge the slick insert the included USB cable, the LED indicator light will illuminate red when charging, and it will turn green when fully charged.

Removing and Replacing the Battery

1. Locate the battery cover at the bottom of the SLICK.
Twist to unscrew the cover.
2. At this point you may remove, replace, or insert the battery.
Note: The battery should be inserted positive end first.
3. Once the battery is inserted, simply screw the lid back into place.

Battery Safety Warning

- Do not use the SLICK while charging. This will cause damage to the device.
- To prevent the device from overheating do not leave the charger plugged in overnight.
- Do not leave charger plugged in, or unattended without device.
- Do not charge unit on bare carpet or rug.
- Do not overcharge. Do not short circuit the battery.

Battery Disposal

Take caution and dispose in the correct receptacle. Do not discard in trash.

Safety Features

Reverse Connection Circuit Protection

Reverse connection of the battery does not destroy the circuit. There will be no LED no indication when the battery is reversely inserted.

Overheating Protection

If the ceramic heating chamber encounters abnormalities, the device will not heat. LED light will display red and flash 6 times (1 time/1 second)

Short Circuit Protection

In the case of a short circuit, the device will not heat and the LED light will display red and flash 3 times (1 time/1 second)

NTC (Thermo-sensor) Protection and Short Circuit

If the NTC is not detected by the unit or the NTC encounters a short circuit, the device will not heat and the LED light will display red and flash 6 times (1 time/1 second).

Low Voltage Protection

If the battery voltage is lower than 3.3V (no load) the device will not work and unit will need to be charged.

Safety Disclaimers

- Do not use in extreme environments such as high temperature, high humidity field and avoid contact with any liquids.
- Do not use this device in an extremely hot environment, near open flame, or while in direct sunlight. Otherwise, the device will overheat and can ignite in extreme heat conditions. Performance and age of the unit may also decrease.
- If there is odor, heating, deformation, discoloration (defect appearance) or any other abnormal occurrences, the device should not be used. If it is powered on or charging, please remove it from the charger and refrain from use.
- Do not use a damaged SLICK charger or non-Flowermate Technology charger. Incompatible chargers may carry different voltage, which may be a fire hazard. Use only the charger provided. Failure to do so will void the limited warranty offered on Flowermate Products.
- Use caution when handling the SLICK, the heating chamber area is hot when the device is powered on.
- Intended use environment: Relatively dry, temperature: 50°F - 104°F (10°C - 40°C).
- Do not use under extreme conditions such as high temperature, high humidity, strong magnetic field or electric field.
- Do not clean the SLICK in any other way than instructed by Flowermate Technology, LLC.
- Do not attempt to repair or modify the Slick yourself.
- Do not leave the device unattended when it is powered on or while the device is still hot.

Warning

Failure to follow these safety instructions could result in personal injury or damage. Users of this device do so at their own risk. Neither Flowermate Technology, LLC or its retailers assume any responsibility or liability associated with the use/misuse of the device. Flowermate Technology branded products are intended for adult use and consumption only. Keep this booklet in a safe place for future reference.

Disclaimer

This device is designed as a mobile solution for practitioners of aromatherapy and should be used for dry herbal blends as indicated. This device is not intended for use with illegal substances.

Warnings

- Do not drop, deform, bend, crush, puncture, incinerate, microwave, shred, paint or insert foreign objects into a SLICK unit.
- Do not leave the SLICK in microwave ovens, pressure vessels, and water.
- Keep this device away from children.
- Do not use the SLICK while charging. This will cause damage to the device.
- To prevent the device from over-heating do not leave the charger plugged in overnight.
- Do not charge unit on bare carpet or rug.
- Do not overcharge.
- Do not short circuit the battery.

Battery Disposal

Take caution and dispose in the correct receptacle. Do not discard in trash. Do not overcharge

1 Year Limited Warranty

Flowermate Technology, LLC warrants this Flowermate Technology, LLC branded device against defects in materials and workmanship under normal use for a period of one (1) year from the date of retail purchase by the original end-user. The original bill of sale is required to redeem warranty. The limited warranty covers (1) year of electronics, ceramic heating chamber, structural integrity and attachments. The 18650 2500mAh High-Drain Battery is warranted for a period of ninety (90) days. If a physical defect arises and a claim is made within the warranty period, at its option and to the extent of permitted law, Flowermate Technology will either:

- Repair the product defect.
 - Exchange the product with a product warranty that is new or functionally equivalent device.
 - Refund the purchases price of the device.
- *Please note this refund is only applicable for products purchased directly from our online retail store, Flowermate.com.

Exclusions & Limitations

The limited warranty applies only to products manufactured by Flowermate Technology, LLC. which can be identified by the "Flowermate Technology LLC" trademark, trade name, or logo affixed to the device. The Limited Warranty does not apply to any non-Flowermate Technology, LLC products. This warranty does not apply to (i) damage caused by accident, abuse, misuse, flood, fire, earthquake, acts of piracy, or external causes; (ii) damage caused by operating the product outside the permitted or intended use as described by Flowermate Technology, LLC (iii) a device or part that permission of Flowermate Technology; (iv) cosmetic damage, including but not limited to dents, scratches, and/or broken plastic.

This warranty applies to the original end-user and is non-transferable. Flowermate Technology, LLC warranties only apply to devices that are purchased from authorized retailers serviced by an authorized Flowermate Technology, LLC distributor.

For questions regarding authorized retailers, and additional warranty details.

Please visit: www.flowermate.com