



TENTSILE

# Trilogy Tree Tent

OWNERS MANUAL

It is important that all users read and understand the materials in this manual before any installation and use of the product.

NO MORE THAN 3 MONTHS CONTINUOUS USE AT ANY ONE TIME  
DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.



edenprojects.org  
PLANT TREES | SAVE LIVES



WeForest  
Making Earth Cooler

20  Trees  
Planted

# WARNING

## TENTSILE IS NOT A TOY

### RISK OF SERIOUS INJURY

A VISUAL AND TACTILE INSPECTION OF YOUR TENTSILE'S FLOOR,  
STRAPS AND RATCHETS SHOULD BE MADE BEFORE EACH USE.

FOR SAFETY REASONS, STRAPS AND RATCHETS SHOULD BE  
REPLACED EVERY 2 YEARS.

NO MORE THAN 3 MONTHS CONTINUOUS USE AT ANY ONE TIME  
DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.

THE BASE OF THE TENT IS RATED FOR 2,500 HOURS OF UV EXPOSURE.

CHECK THE HEALTH AND STRENGTH OF THE TREES  
CHOSEN TO BE ANCHOR POINTS BEFORE USE.

---

Recommended set up height 1.2m / 4 feet

MAX LOAD 1,200kg / 2,640lbs.

DO NOT EXCEED MAXIMUM WEIGHT LOAD CAPACITY.

---

# CONGRATULATIONS

YOU ARE NOW THE PROUD OWNER OF A

## Tentsile Trilogy

IT IS IMPORTANT THAT ALL USERS READ AND UNDERSTAND THE MATERIALS  
IN THIS MANUAL BEFORE ANY INSTALLATION AND USE OF THE PRODUCT.

03: Introduction

04: Terms of Use

05: Specifications

06: Warnings & Disclaimers

07-08: Layout & Alignment

09-38: Set up instructions

39: Floor calibration

40: Ratchet usage

41: Policies

42: The small print

# Introduction

The Trilogy provides a unique opportunity for you and your friends to experience the great outdoors with a whole new level of freedom and comfort.

Tentsile invented Tree Tents as treehouses you can take anywhere, combining the versatility of a hammock with the comfort and security of a tent.

The Trilogy comprises of a double hammock, suspended in tension above the ground and enclosed in an elegantly simple insect mesh top and rainfly.

The unique design creates a comfortable base camp, irrespective of ground conditions, as well as providing increased protection from insects, snakes and other predators – if you venture somewhere more exotic.

This product was created because Tentsile loves trees and believes that if we're all hanging out in trees, they can't cut them down!

20 trees are planted for every Tentsile Tree Tent sold.

PLAY, CAMP, EXPLORE...

# Terms of Use

Tentsile Tree Tent should be set up only as outlined in this manual.

NEVER jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops.

DO NOT attempt to use this product for anything another than its intended purpose, and always observe height and weight limits.

DO NOT use walls, fences, street furniture, roof racks, movable platforms, posts or trees less than 25cm/10inches in diameter as anchor points, as they may not be strong enough.

DO NOT use tensioning components other than those supplied with this product.

DO NOT set up higher than 1.2metres / 4 feet from the ground or above hard, sharp or pointy objects. Tactile and visual checks should be made to

ALL tent components and ALL anchor points before each use.

Replace any damaged elements if any are found.

Keep away from fire and sharp objects.

DO NOT use after the consumption of any intoxicating substances.

Children must be supervised by an adult at all times.

DO NOT attach to trees or branches that show signs of structural weakness.

DO NOT adjust/open ratchets whilst tent is occupied.

DO NOT use during lightning, storms, high winds or extreme weather, or in 1in / 2cm of snow or more.

DO NOT use in areas of unstable ground.

Tentsile Tree Tents do not offer protection from all animals.

# Specifications

## Size:

8 x 8 x 8m / 26 x 26 x 26ft

## Floor area:

17.9sqm / 198.3sqf

**Dry porch area  
at ground level:**  
21.5sqm / 233sqf

## Entry Points:

x 12

## Bag Size:

56 x 33 x 25cm / 22 x 12.9 x 9.8"  
(x3)

## Height:

100cm / 3ft

## Tent weight:

30.5kg / 67.2lbs

## Poles:

x6 8.5mm diameter  
anodised aluminium alloy

## Ratchets & straps:

9x Heavy duty, plated, industry  
grade buckles - 2.5 ton minimum  
breaking strength

## Roof:

Tear resistant insect mesh

## Rainflies:

70D PU coated waterproof  
polyester, 5000HH

## Floors:

400D polyester-nylon composite,  
reinforced with  
15 metres of 25mm webbing

## Maximum capacity:

6 adults

**DO NOT EXCEED MAXIMUM LOAD 1,200kg / 2,640lbs**

# Warnings & Disclaimers

Installation and use of the Tentsile Tree Tent may involve heights, can be dangerous and may lead to injury and/or death.

The installation must never be executed by minors, and extreme care and caution must be taken when executed by adults.

Do not use any other components, parts, tools or materials other than those included in the Tentsile Tree Tent package, recommended in this manual or in other Tentsile literature.

A hanging and/or suspension system is only as strong as its weakest link and all instructions and guidelines must be followed.

The Tentsile Tree Tent must only be used in the manner described in this manual. When assembled and installed, the Tentsile Tree Tent places significant force on the anchor points; great care must be exercised when

using it to decrease the risk of injury and/or death.

Overloading the Tentsile Tree Tent with more than 2,640lbs (1,200kg) increases the forces and may cause anchor, Tree Tent and/or any parts to fail, resulting in injury and/or death.

The manufacturer and resellers of the Tentsile Tree Tent explicitly disclaim any and all responsibility and liability for any death, paralysis, injury, and/or damage to any person or property that may occur that arises out of or is in any way related to the use of this product.

Using any equipment that is suspended above ground can be a dangerous activity that may result in serious injury and/or death even when used properly. Use at your own risk and always use common sense.

# Positioning the Trilogy

Tentsile Tree Tents need 3 secure and strong anchor points to suspend from. The distances are marked below. Once the location is found, lay out the Trilogy on the ground with the corners facing your selected trees. Protective tree wraps are provided should you wish to use them.



x3 Connect Body



x3 Connect Rainfly



x6 Poles



x9 Ratchet




x9 Straps



x9 Screw Pegs




Canopy Rainfly

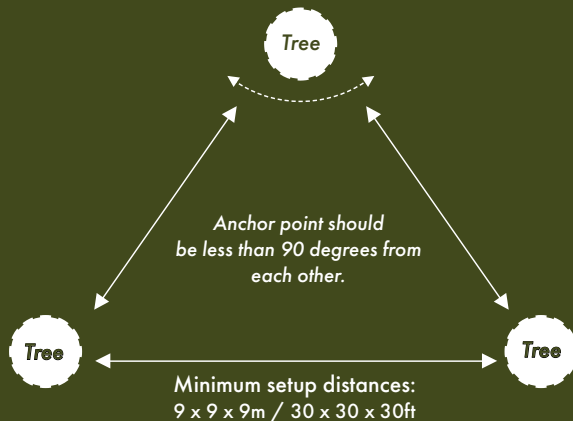


# Alignment Sight Tag

Use the central seam of each Connect unit to properly align the tents. The seam and strap should line up straight with the tree strap at the rear of the Connect.

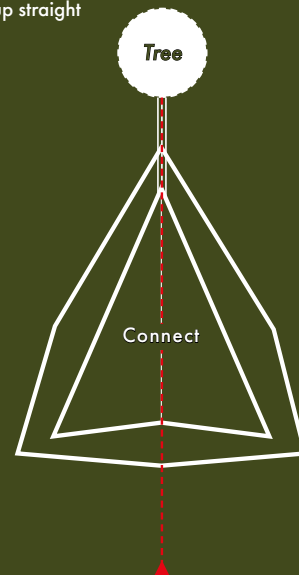


## Tree Straps


With a location found, start by wrapping the tree straps around your selected trees.



1, Wrap the loop end of each strap around your selected trees.




2, Once around, thread the strap and pull it all through towards one of the Connects.



3, Ensure the strap is flat against the tree and not twisted.

## Connecting the tents

With the Connect tent bodies laid out on the floor, carabiners are used to link the three together at the front corner.

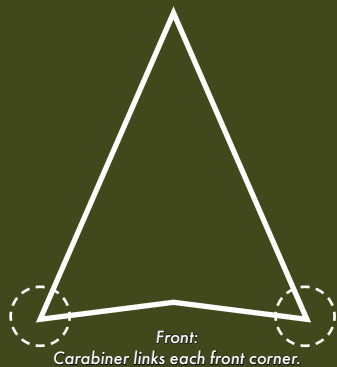

4, Using the screwgate carabiners, clip the front corner D-Rings of the tents together, with the pole socket on the outside of the link.




5, Ensure the carabiner is screwed closed once clipped.



## Attaching The Ratchet

With the tree straps attached and the Connect bodies laid in position, you can now attach the 3 ratchet straps to the rear D-rings on each tent.

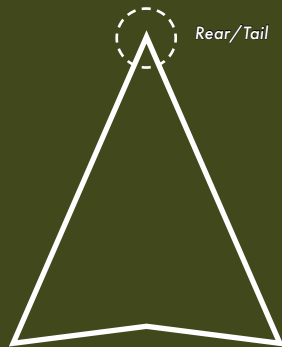

6, The ratchet has a loop in its strap



7, The loop should be passed through the D-ring in the corners of the tent



8, Pass the ratchet through the loop.



9, Pull the ratchet through the loop.



10, Pull tight and dress the Girth Hitch




11, Pushing the strap back into the knot will loosen it.



## Fitting Strap To The Ratchet

With the ratchet strap attached to the rear D-rings, it can now be connected to the tree straps.

Check the Connects are aligned at each anchor point.

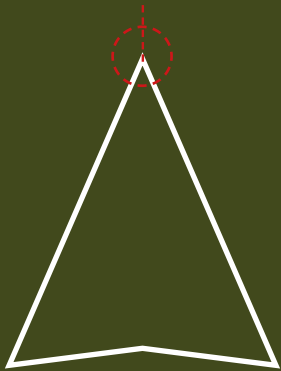

12, Ensuring there's enough length, bring the ratchet and tree strap together.



13, Feed the tree strap end through the spindle.



14, Feed it in and pull it through making sure it does not twist.



15, Lift the Connect off the ground by pulling through excess strap at each point.




16, Give a strong pull before cranking the ratchet.

## Tightening The Ratchet

Cranking the ratchet will give the tension needed and allows for easy adjustment. Ensure the ratchet is correctly in the locked position before entering the Trilogy.

### Attention - Ratchet Locking

Crank the ratchet handle back & forth 7 - 9 times to increase tension to straps.

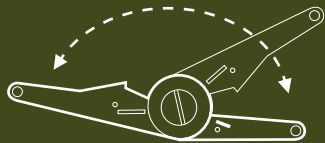

UNLOCKED

LOCKED



17, Release the ratchet lock by pushing the inner latch upwards.



18, This will release the handle and allow it to be cranked.



19, Pull the handle back and begin cranking it back and forth.




20, Do this until the handle has strong resistance.




21, Once achieved, move the handle to the closed position and lock.

### LOCKING RATCHET

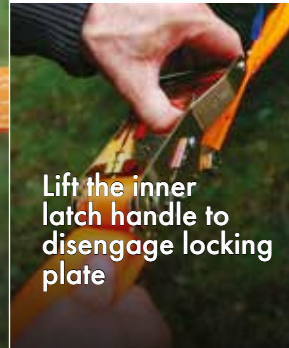

Lift the inner latch handle to disengage locking plate

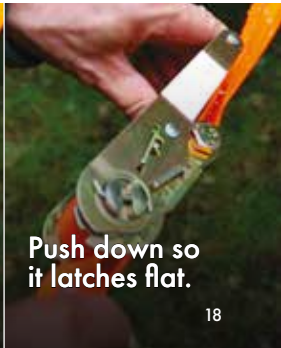


Push down so it latches flat.



## Aligning The Trilogy

Now the Trilogy is raised, it needs to be aligned. This is adjusted by slacking the other ratchets and re-adjusting the tension between them to pull it in the desired direction. Once aligned ensure all ratchets are tight and locked.

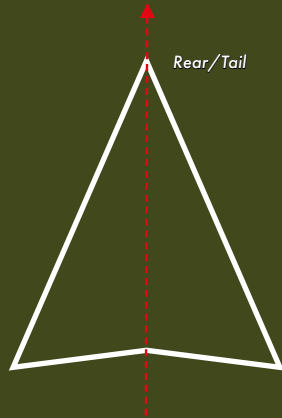

22, With the Connect off the ground, stand at the front to align. The central seam should line-up with the tree strap at the rear.


23, Check each strap angle on the 3 linked Connects, and tweak until they are all aligned correctly.

24, Once all are aligned then tighten the rackets and lock them before inserting the poles.


## Inserting The Poles

Insert the poles into the pole sleeves that run across the top of the mesh.

Once through, secure the ends into the pole sockets and move around to the other side and repeat.

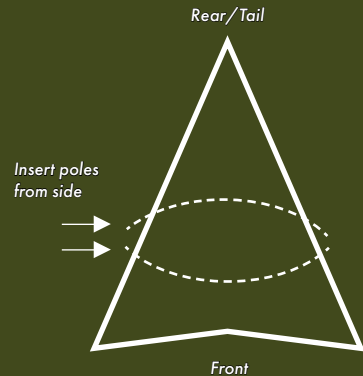


25, Take the 2 poles and unfold them to their full length before inserting.

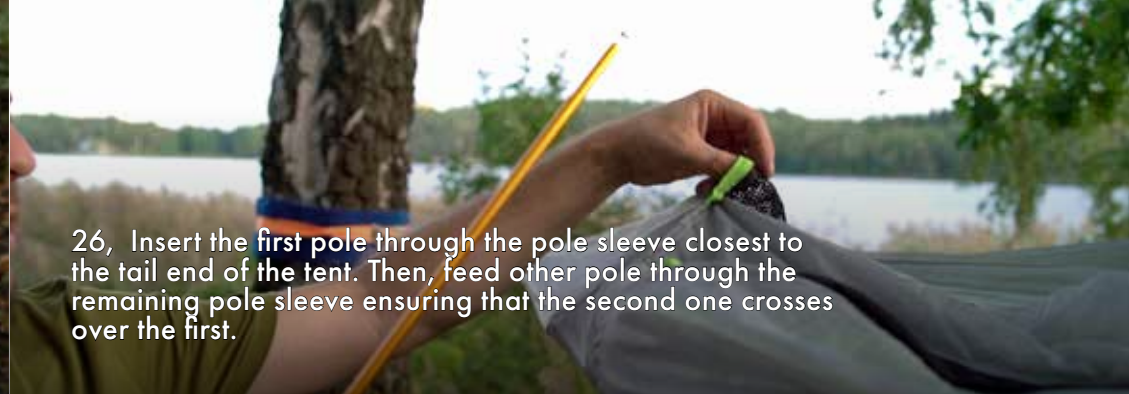

26, Insert the first pole through the pole sleeve closest to the tail end of the tent. Then, feed other pole through the remaining pole sleeve ensuring that the second one crosses over the first.



27, Push them through until they are visible from the other side.

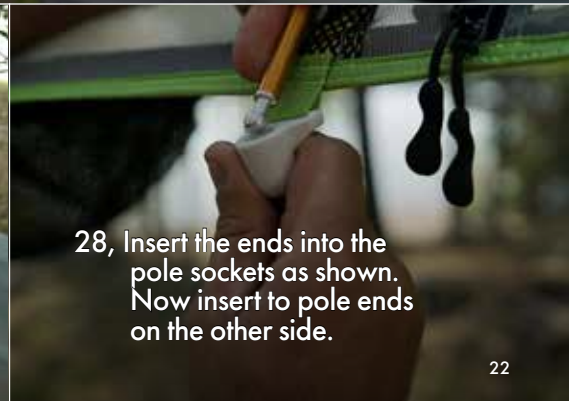




28, Insert the ends into the pole sockets as shown. Now insert to pole ends on the other side.



## Inserting the Poles (Cont.)

Take the pole ends and carefully push them towards the Connect so that the lengths move upwards. Now secure them in the pole sockets.

The main body of the Connect is now complete and ready for the rainfly.

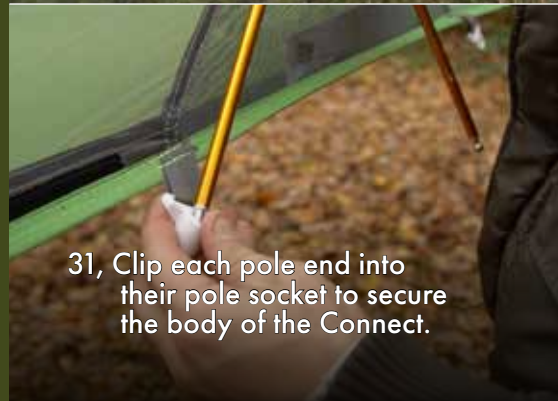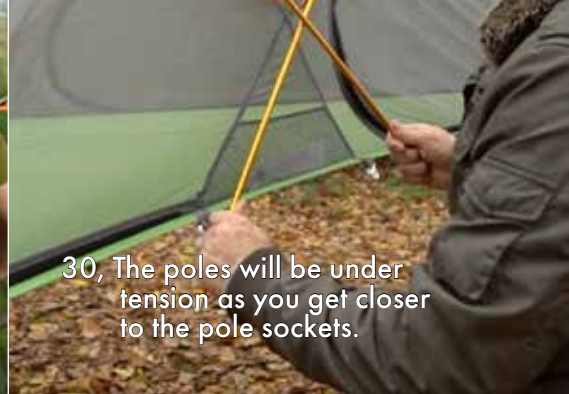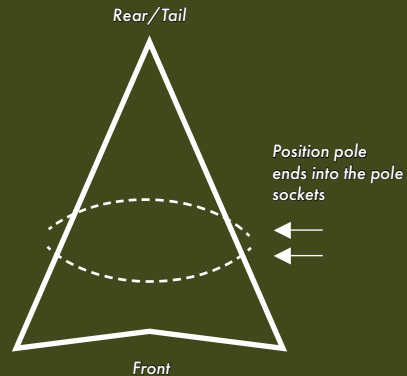




## The central strap

With the ratchet strap attached to the D-rings, it can now be connected to the tree straps.

Check each corner of the Connect is aligned to each anchor point.

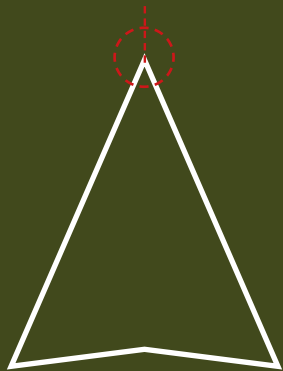

33, Feed the fourth strap through a front tent D-Ring



34, Take the strap tail through the front D-Ring of the second Connect



35, Bring the strap together at the centre of your set up feed the tail in to the loop.



36, Attach a ratchet to the remaining Connect's D-ring.



37, Take the tail of the central strap set-up and feed it into the ratchet.



38, Pull through the slack and then tension by cranking the ratchet.

## Extra Tension

You can add extra support and tension to this central link by using either an extending camping pole, or a stick you find on sight.



39, With either an extending pole, or an on-sight stick, fit the tip into the central fixing.




This will provide additional tension and stop any remaining sag that could come out of the tents being fully occupied.



## Fitting The Rainfly

The rainflies are easily added to the Connects. Each corner of the rainfly has C-clips that simply clip onto the ratchet handle for easy installation. Start at the rear to begin fitting.

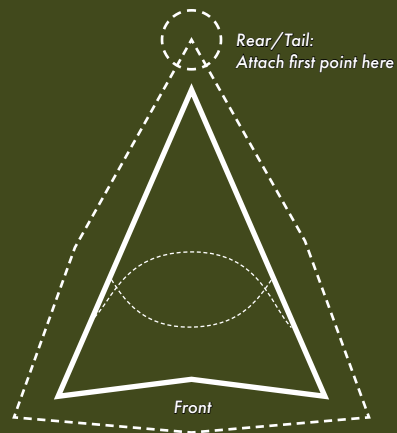

40, Locate the rear of the rainfly. This is where the 3 seams meet.




41, Start at the rear and place the rainfly 6" / 15cm along the strap. Then attach the C-clips to the ratchet handle.



42, Pass the rainfly over the top and follow it along the edge to the front corner.



43, Overlap the strap again with the rainfly and ensure it covers the Connect.

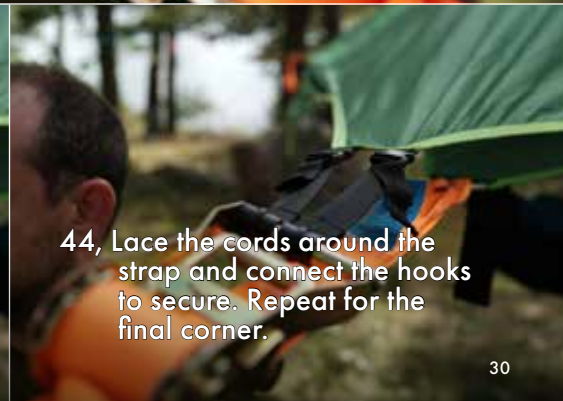


44, Lace the cords around the strap and connect the hooks to secure. Repeat for the final corner.

## Pegging Out

The final part is to peg it out using the bungees and pegs provided.

Simply attach the bungee loop to the peg, pull until firm and then screw them into the ground to secure.

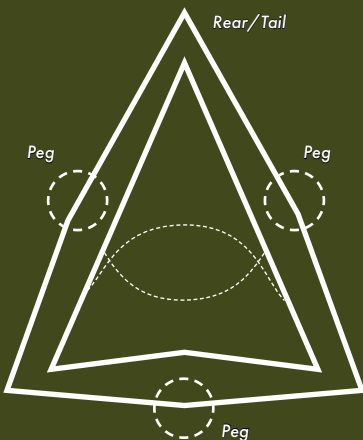

45, In the middle of each edge is a loop with a bungee attached.



46, Loop the bungee on to the peg so that it will securely hold it.




47, Position so the rainfly can have good water runoff and minimise sagging.



## Rainfly complete

At each corner underneath the rainfly are hooks that allow it to be pegged out to provide the best rain protection.

Check all ratchets are in the locked position before entering.

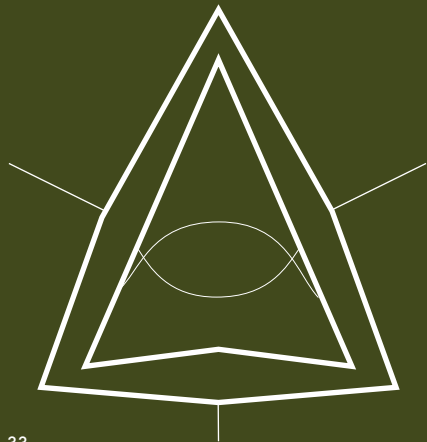

48, At each corner, connect the rainfly hooks together to secure it down.



49, Double check the tree straps, ratchet locks and poles are secure before entering the Trilogy.




## Fitting the central canopy

You can use the Trilogy with the central canopy left open, but for extra rain cover the canopy can be used as a fully waterproof cover.



50, Assemble the central poles into the pole hub.

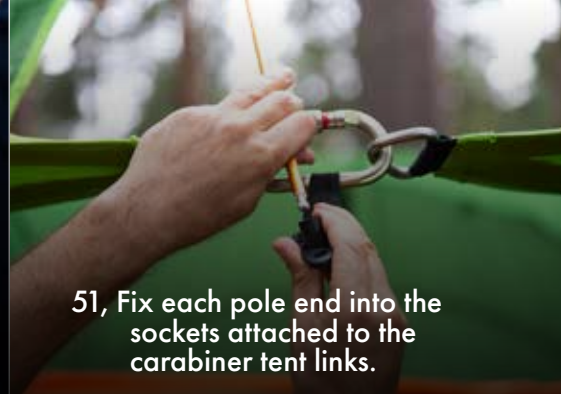


51, Fix each pole end into the sockets attached to the carabiner tent links.



52, Position the rainfly net triangle in the centre of the poles.



53, Clip the central fastenings onto the poles.

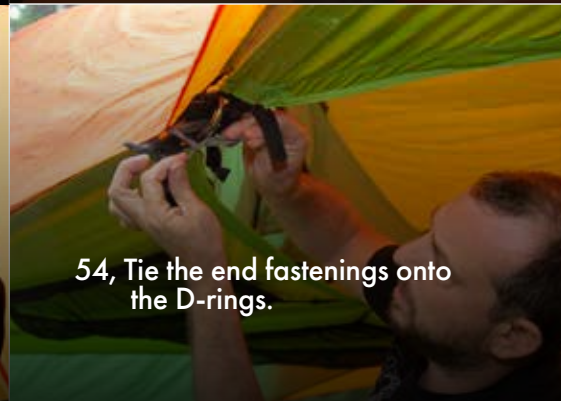


54, Tie the end fastenings onto the D-rings.




55, Pull the canopy fly up and eventually over the tent pole arches.

## Fitting the central canopy

When the central canopy is attached, always remember to do a full check of the tent to make sure that nothing is going to come loose in mild winds.



56, Take the corner bungee on each side and fasten to the Connect rainfly loops.



57, This will hold the fly out taut and cause any rain to run off.



58, Enjoy a good nights sleep!






# Floor Strap Calibration

Tentsile Trees Tents come pre-calibrated, but stretch over time so will need you to tighten the underfloor strap, using the buckle every so often. Here is how:

When the Connects are up, the centre (underfloor) strap should provide a clear delineation between both hammock berths. To increase this tension (and therefore separation between the two hammocks) just tighten or loosen the adjuster buckle strap on the underside of the Connects.

This re-tensioning will need to take place every so often as the materials can stretch over time.

If you are using the Connect, you can slack off this strap completely and have the whole floor as a large single hammock berth to yourself.

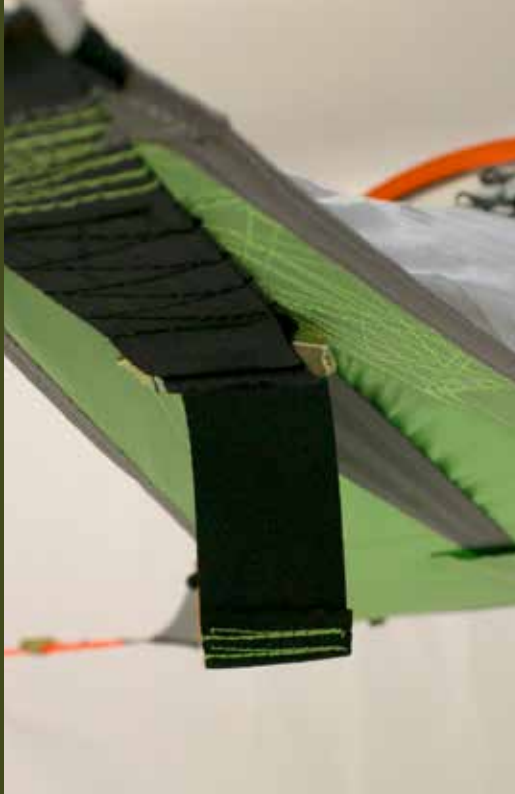

# How to use the Ratchet

1) Take tail end of the long strap around your trees and thread through the loop and away from tree, towards your Tentsile Tree Tent.

2) Thread loop of the ratchet through the D-Ring at each corner of your Tentsile Tree Tent and take the buckle through the loop.

3) Take long strap tail and thread it through the ratchet buckle spindle, pulling through all excess orange strap. Crank ratchet until the orange strap has gone around the spindle at least 1.5 full revolutions to underlock it. This will prevent any slippage before moving to the next corner.

4) Repeat step 3 at each corner, trying as much as possible to keep the corners pointing towards their respective anchor points.


5) Revisit all corners and adjust as necessary. Use line of sight down each strap to centralise your Tentsile Tree Tent between your chosen anchor points. You have about a 7° degree margin of tolerance in each direction.

6) Tighten ratchets as much as you can.

ENSURE RATCHETS ARE IN LOCKED POSITION BEFORE ENTERING THE TENTSILE TREE TENT.

7) Roll and tidy up strap ends to avoid any possible trip hazards.

Crank the ratchet handle back & forth 7 - 9 times to increase tension to straps.

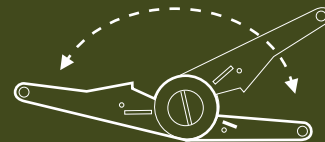

UNLOCKED



LOCKED



# Policies

## Maintenance

Visual and Tactile inspection of all components for structural damage before every use and dry out Tentsile Tree Tent thoroughly before packing away. Tentsile Tree Tent should be stored safely in a dry environment.

## Returns

If a customer wishes to return a Tentsile product within 30 days, they need to pack the unit clean and dry, with all components included. Retailer can choose to resell this item or send it back to Tentsile for a credit note. A restocking fee will be applied (charged to customer) if the tent is wet, dirty or missing parts. Return shipping will be at customer's expense.

## Weather

The Tentsile Tree Tent is not intended to be used in severe weather. If there is weather that creates dangerous conditions, such as storms, heavy rain, snow, high winds, and/or lightning, do not use or remain in the Tentsile Tree Tent in or during those conditions. It is recommended that the Tentsile Tree Tent is taken down and stored to avoid remaining inside and being subject to such conditions. Leaving the Tentsile Tree Tent out and installed in bad weather can lead to potential destruction and/or damage to it (not covered by warranty). If the Tentsile Tree Tent is subject to such conditions, it and its anchor/hanging system should be inspected in detail prior to any future use. Be sure to thoroughly dry the Tentsile Tree Tent before storing.

## Customer Service Charter

**Quality first** – We will manufacture, sell and distribute the best possible quality Tentsile Tree Tents in the World.

**Customer focus** – We will provide prompt, courteous and efficient service, with honesty and integrity and expert, clear, and timely information to customers and colleagues.

**Tentsile Promise** - We will strive for a 'get it right first time, every time' in all our dealings in manufacturing, distribution, sales, and service.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

## Contact us

info@tentsile.com

*\*use as intended and outlined herein and no more than 3 months continuous use.*

# The small print

The Tentsile Tree Tent is designed for play, relaxation, and camping/sleeping. Never jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops. Do not attach or secure the Tentsile Tree Tent to a movable platform or anchor; it is not intended to be used for such recreation or activities. Do not attempt to use this product for anything other than its intended purpose, and always observe height and weight limits.

## Warranties

### Manufacturing Warranty

Tentsile will accept and replace any product with a manufacturing warranty straight out of the box. These units should be marked as defective and repairs@tentsile.com should be contacted, so that we can pick up these items and replace them. Poles, ratchets, and straps are not covered under the warranty. Safety checks to the product must be made every month and the product must never be left unattended in adverse weather.

### WARRANTY DOES NOT COVER COMMERCIAL USES.

For information on commercial warranties please contact support@tentsile.com.

### Claims of Defects under 1 Year Warranty

Any damage, breakage or defect found after customer use needs to be assessed on a case-by-case basis. Tentsile will accept any fault considered to be manufacturer's defect if the product is used within

Terms of Use, as set out in Owner's Manual. Tentsile will not accept any damage, breakage or defect caused by customer outside these Terms of Use. This would include setting up product outside guided Owner's Manual instructions, recklessness, carelessness, misuse product or misunderstanding of product set up instructions provided. Photos of damage should be sent to support@tentsile.com for assessment. Our team will assess if the damage is covered by warranty, of customer error. In cases of warranty, Tentsile will ask to be put directly in touch with customer and we will pick up the unit and replace it directly with them. In cases of customer damage, the retailer can pass customer directly over to talk to our team. Tentsile will then organise for customers to send their unit in for repair.

Please note:

All Tentsile products are fabric structures which will degrade over time due to wear and tear. This includes environmental conditions such as user care, storage conditions, packing conditions and UV exposure. Tentsile products comes with care instructions including; not to be left unattended for more than 1 week. Do not leave set up for more than 3 months at a time ( product needs to be taken down and inspected every 3 months for damage and wear and tear to components). Products have differing levels of UV protection. Trilogy – 2,500UV hours.

Tentsile will not be held liable for environmental damage caused by high winds, falling branches, damage made by animals or any other environmental factors.



# 20 Trees Planted

## Tree Planting Mission

For every tent purchased we make a donation to plant 20 trees with our partners: WeForest, Eden Projects, and Arbor Day Foundation. So far, we have planted over 560,000 trees in projects located across Zambia, India, Madagascar, and Oregon.

Follow our #BecomeOneOfTheMillion campaign and keep up with our progress as we work with each of these organisations to plant 1 million trees over the next 5 years.

## Where Do We Plant Them?

Tentsile's tree planting partners all meet a number of strict criteria; from regular updates and tracking donations, to working with local communities, training residents, planting native species and protecting saplings to maturity.





TENTSILE

[www.tentsile.com](http://www.tentsile.com)

All rights reserved Tentsile Ltd  
Patent Approved