



TENTSILE

UNA Tree Tent

OWNERS MANUAL

It is important that all users read and understand the materials in this manual before any installation and use of the product.



edenprojects.org
PLANT TREES | SAVE LIVES



20 Trees
Planted

WARNING

TENTSILE IS NOT A TOY

RISK OF SERIOUS INJURY

A VISUAL AND TACTILE INSPECTION OF YOUR TENTSILE'S FLOOR, STRAPS AND RATCHETS SHOULD BE MADE BEFORE EACH USE.

FOR SAFETY REASONS, STRAPS AND RATCHETS SHOULD BE REPLACED EVERY 2 YEARS.

DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.

CHECK THE HEALTH AND STRENGTH OF THE TREES CHOSEN TO BE ANCHOR POINTS BEFORE USE.

Recommended set up height 1.2m / 4 feet

MAX LOAD 120kg / 265lbs.

DO NOT EXCEED MAXIMUM WEIGHT LOAD CAPACITY.

CONGRATULATIONS

YOU ARE NOW THE PROUD OWNER OF A

Tentsile UNA Tree Tent

IT IS IMPORTANT THAT ALL USERS READ AND UNDERSTAND THE MATERIALS IN THIS MANUAL BEFORE ANY INSTALLATION AND USE OF THE PRODUCT.

03: Introduction

04: Terms Of Use

05: Specifications

06: Warnings & Disclaimers

07-08: Layout & Alignment

09-26: Set-Up Instructions

27: Policies

28: The Small Print

29: 20 Trees Planted

Introduction

The UNA is our first single-person Tree Tent with removable rainfly, offering you the chance to hike into the outback even further for a whole new level of freedom.

This single person model is the lightest Tree Tent solution in the world, perfect for hikers and backpackers so they can walk further, carry less weight and get the most comfortable night's sleep imaginable.

It features a tensioned hammock bed with a large pocket on each side, full no-see-um mesh top with a fold away door and a removable rainfly for unbeatable views. The rainfly can be pegged out towards the ground, creating a large 30ft² / 3m² covered area so you can use the ground to store your gear beneath the UNA.

This product was created because Tentsile loves trees and believes that if we're all hanging out in trees, they can't cut them down!

20 trees are planted for every Tentsile Tree Tent sold.

PLAY, CAMP, EXPLORE...

Terms of Use

Tentsile Tree Tent should be set up only as outlined in this manual.

NEVER jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops.

DO NOT attempt to use this product for anything another than its intended purpose, and always observe height and weight limits.

DO NOT use walls, fences, street furniture, roof racks, movable platforms, posts or trees less than 20cm/8inches in diameter as anchor points, as they may not be strong enough.

DO NOT use tensioning components other than those supplied with this product.

DO NOT set up higher than 1.2metres / 4 feet from the ground or above hard, sharp or pointy objects.

Tactile and visual checks should be made to ALL tent components and ALL anchor points before each use.

Replace any damaged elements if any are found.

Keep away from fire and sharp objects.

DO NOT use after the consumption of any intoxicating substances.

Children must be supervised by an adult at all times.

DO NOT attach to trees or branches that show signs of structural weakness.

DO NOT adjust/open ratchets whilst tent is occupied.

DO NOT use during lightning storms or high winds.

DO NOT use in areas of unstable ground.

Tentsile Tree Tents do not offer protection from all animals.

Specifications

Size:

2.8 x 2.8 x 1.6m / 9 x 9 x 5ft

Floor area:

2.2sqm / 24sqf

Entry Points:

x1

Height:

50cm / 1.7ft

Maximum capacity:

1 adult and their gear

Poles:

x1 8.5mm diameter
anodised aluminium alloy

Straps:

x3 4m/13ft polyester straps

Roof:

No-see-um insect mesh and
YKK zips

Rainfly:

20D coated nylon, 3000HH

Floor:

20D Nylon. Uncoated.

Tent body weight:

1.27kg / 2.12lbs

Tent strap weight:

470g / 1lb

Full pack weight:

1.74kg / 3.13lbs

DO NOT EXCEED MAXIMUM LOAD 120kg / 265lbs

Warnings & Disclaimers

Installation and use of the Tentsile Tree Tent may involve heights, can be dangerous and may lead to injury and/or death.

The installation must never be executed by minors, and extreme care and caution must be taken when executed by adults.

Do not use any other components, parts, tools or materials other than those included in the Tentsile Tree Tent package, recommended in this manual or in other Tentsile literature.

A hanging and/or suspension system is only as strong as its weakest link and all instructions and guidelines must be followed.

The Tentsile Tree Tent must only be used in the manner described in this manual. When assembled and installed, the Tentsile Tree Tent places significant force on the anchor points;

great care must be exercised when using it to decrease the risk of injury and/or death.

Overloading the Tentsile Tree Tent with more than 280lbs (120kg) increases the forces and may cause anchor, Tree Tent and/or any parts to fail, resulting in injury and/or death.

The manufacturer and resellers of the Tentsile Tree Tent explicitly disclaim any and all responsibility and liability for any death, paralysis, injury, and/or damage to any person or property that may occur that arises out of or is in any way related to the use of this product.

Using any equipment that is suspended above ground can be a dangerous activity that may result in serious injury and/or death even when used properly. Use at your own risk and always use common sense.

Positioning the UNA

Tentsile Tree Tents need 3 secure and strong anchor points to suspend from. The distances are marked below. Once the location is found, lay out the UNA on the ground with the corners facing your selected trees. Protective tree wraps are provided should you wish to use them, wrap around trunk before attaching the tree straps.



UNA Body



UNA Rainfly



x1 Pole




x1 Webblock



x3 Straps




x3 Pegs

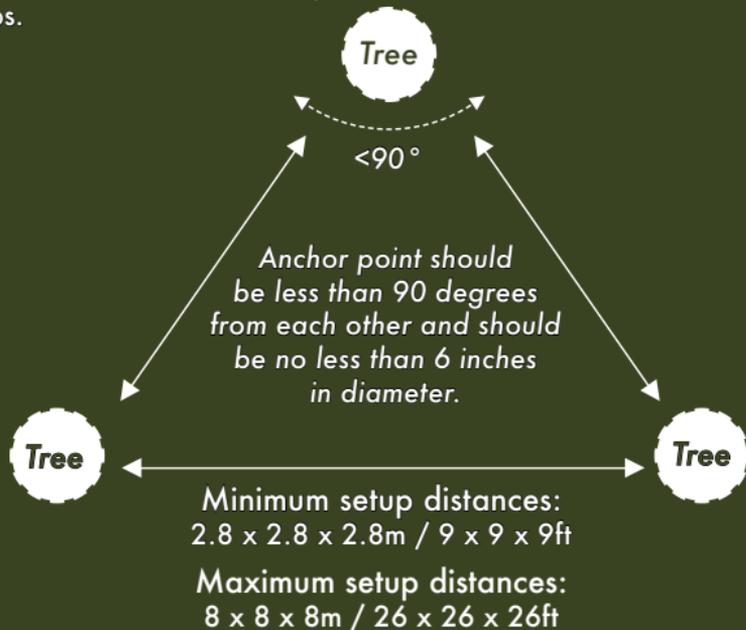

Strap Alignment Tag

Use the strap alignment tag on the side of the UNA. Look along the tag and ensure it and the strap are inline with the tree.

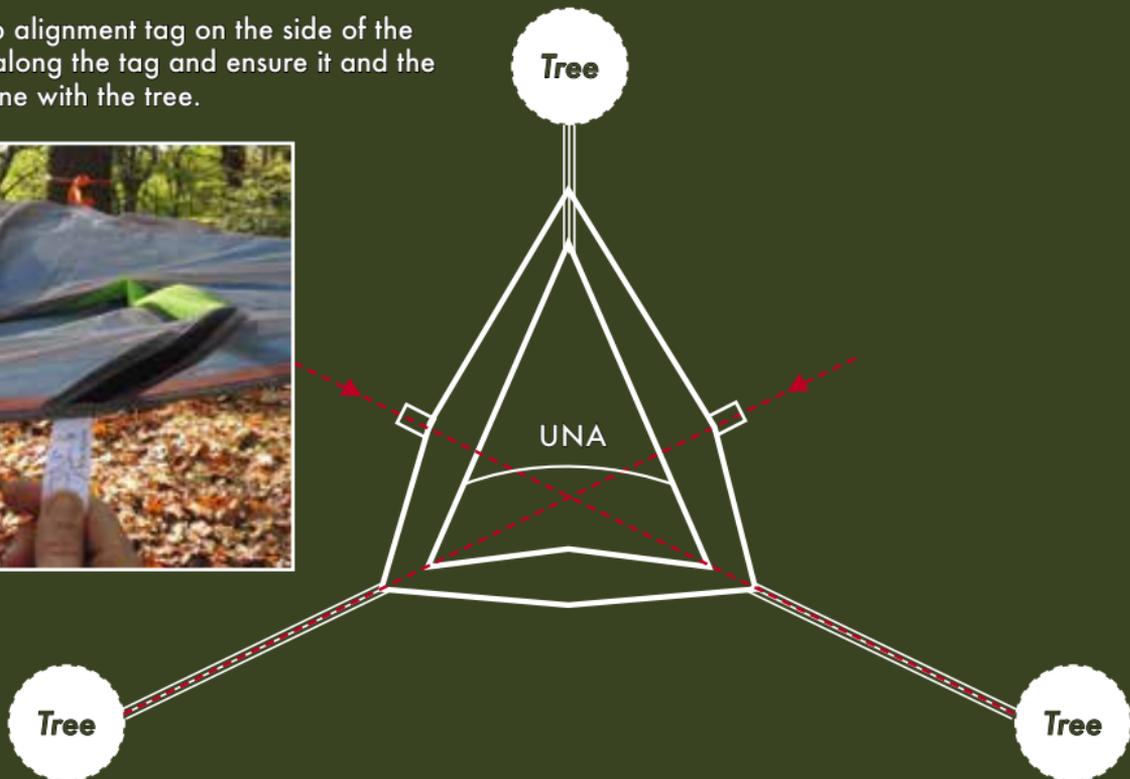


Tree Straps

With a location found, start by wrapping the tree straps around your selected trees.

1, Find your three anchor points.



2, Feed the tail of the strap through the square ring and pull out the slack.

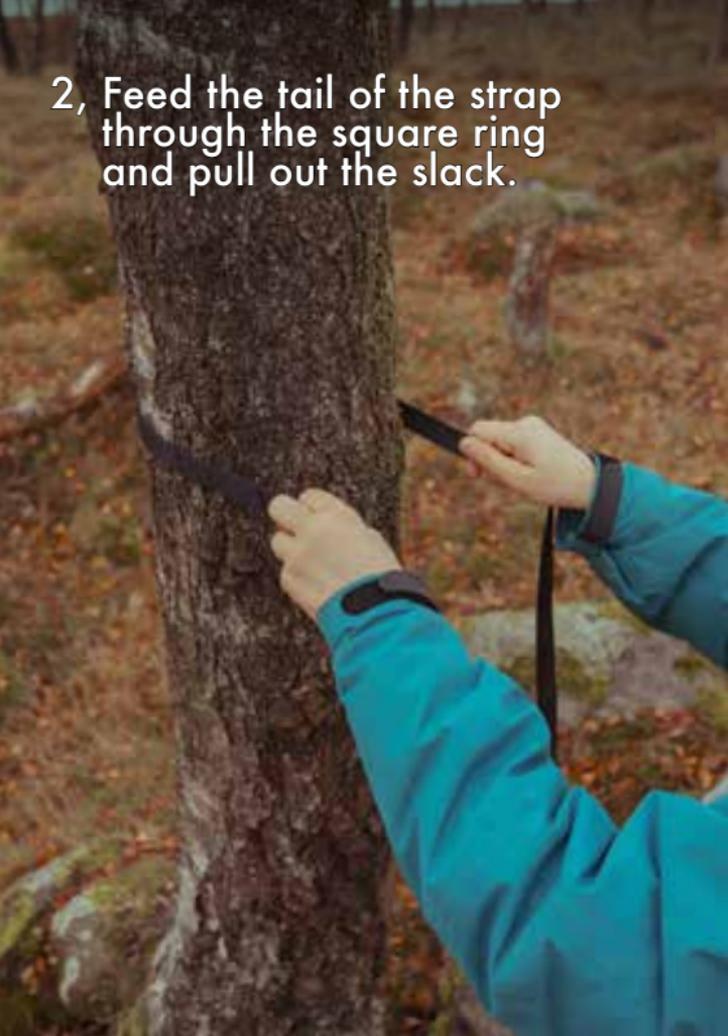


3, Pull tight so that the strap stays in place on the tree when released.




Positioning The UNA

Take the UNA and lay it out on the ground between your selected trees.

Ensure it is the right way up with the green pole sleeve facing up.

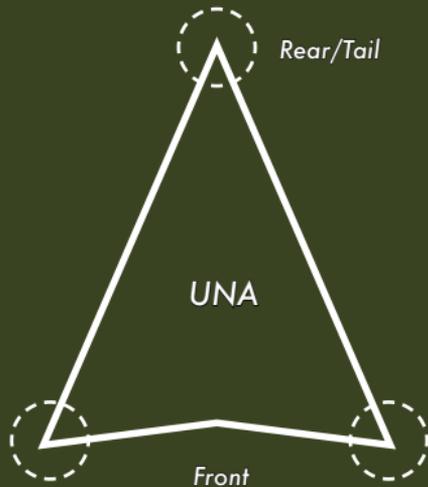

4, Lay the body of the UNA out inbetween your three chosen trees.

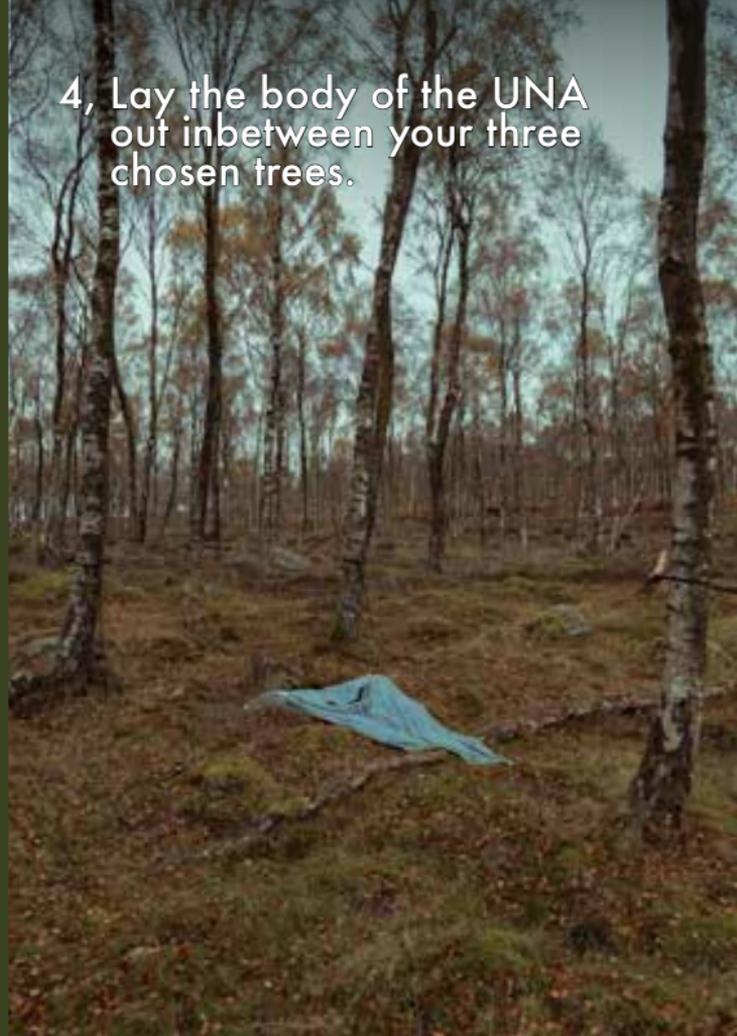

5, The tail and one of the front corners require carabiners to be attached.



6, The remaining corner requires the weblock to be attached.



Tying The Half Windsor Knot

Two of the corners require Half Windsor knots, one at the rear/tail and the other at either front corner. For a more tensioned set-up use optional ratchet.



7, Loop tail through the carabiner.



10, Pass a folded length of the strap back up through the carabiner.



8, Pass tail around the back.



9, Loop around making sure to keep the loop open.



11, Pull this tail loop through the first loop, leaving a tail behind.



12, Pull tight. To release pull the tail above the knot.



Tentsile Weblock

The lightweight weblock is used to provide easy tension through the tent.

It is attached to which ever front corner you have not clipped a carabiner to.



13, Feed the strap up the back of the weblock



14, Fold the strap over the top bar of the weblock.




15, Feed strap behind and under lower bar, pulling slack through to raise the tent body and ensuring the weblock holds tight.




Aligning The UNA

With the UNA now raised, you must ensure it is correctly aligned with the anchor points. Use the strap alignment tags on both sides to ensure the tree straps are in line with the trees and the tag. There is a 5° tolerance.

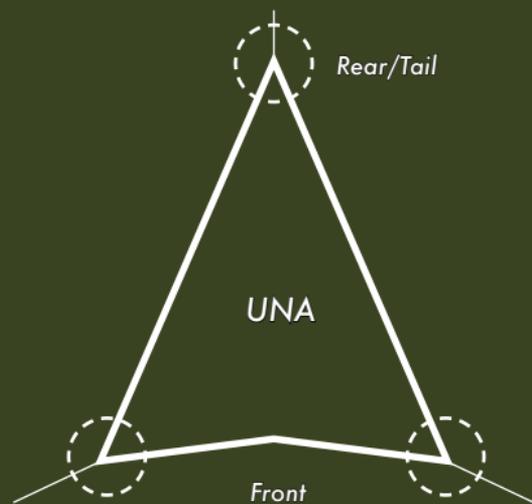


16, Raise the tent so all straps are tight, making sure you have the base level.

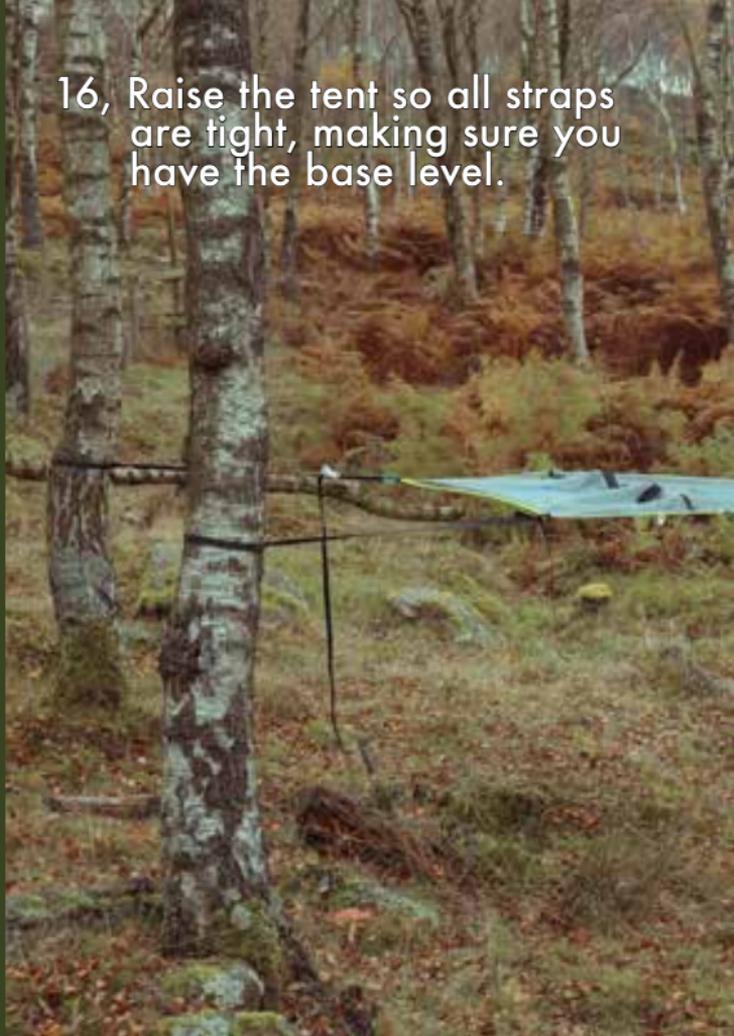




17, Use the strap alignment tag on either side of the body to check the strap alignment.

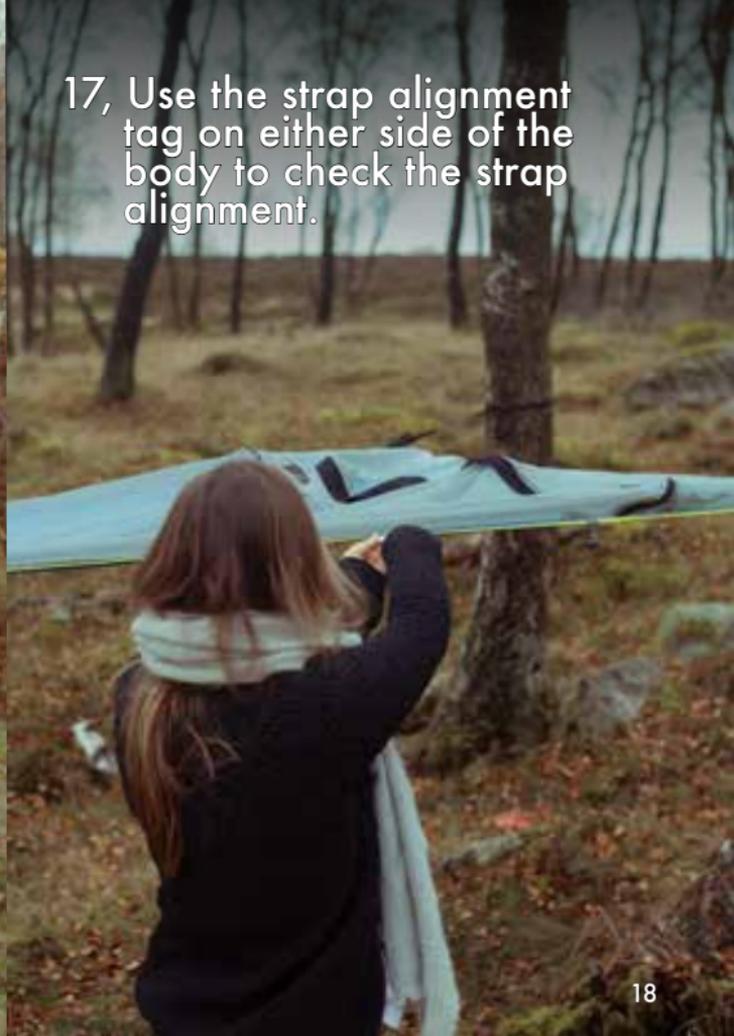

Inserting The Pole

The UNA has only one pole which spans the width and creates the arch to raise the roof. Simply connect the pole sections and feed through the green pole sleeve.


Once through, insert the pole ends into the pole sockets on either side as shown.

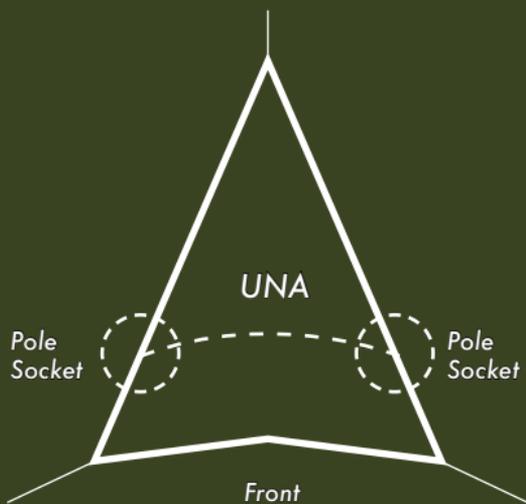

18, Unfold the curved pole.



21, On the opposite side, push against the pole to gently raise the tent structure.

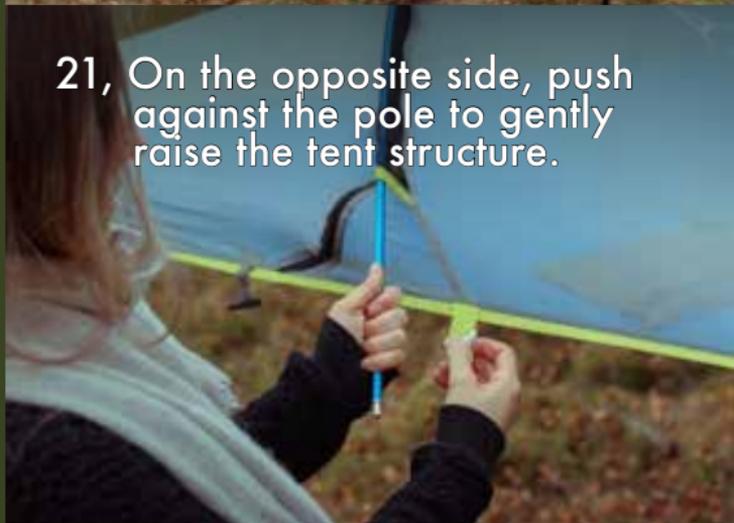

19, Carefully feed the pole through the pole sleeve until even amounts are exposed on each side.



20, Fix one side of the pole into the pole socket



22, Fix this side of the pole into its pole socket.




23, Check both sockets to ensure pole is securely in place.



Tidying The Straps

The remaining strap can be left loose, but for both practical, safety, and aesthetic reasons we like to roll them up and keep them neatly out the way.

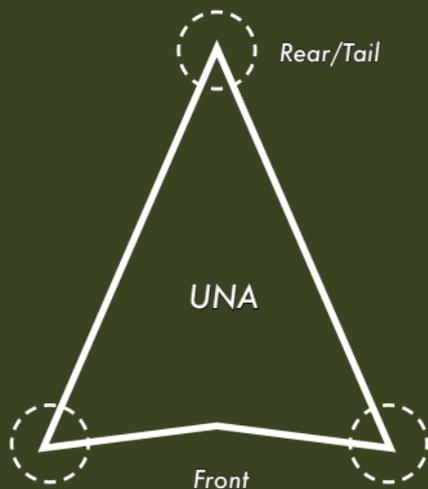

24, Straps can be tidied by simply rolling them up and passing a loop of slack around the roll.




25, The body of the UNA
is now complete.

Adding The Rainfly

Start at any front corner, then the rear/tail and finally the other front corner.

Make sure the rainfly is not twisted when attaching and that the lace at least 6" along the strap.

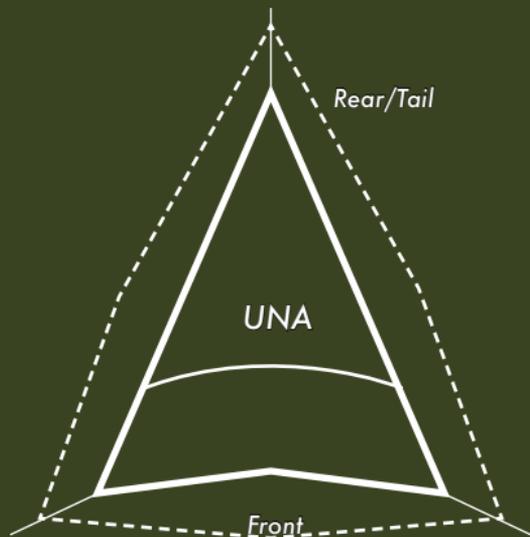

26, Starting with one corner, cross the Rainfly bungee cords around the strap.



27, Repeat these crosses around the strap until tight, then fasten the hooks together.




28, Pull the rainfly over the tent body and fasten again in the remaining corners.



Roof Bungee & Peg Out

To peg out, attach a bungee to each wing and loop to a peg. Pull until firm and push into the ground.

TIP: On the top of the rainfly there is a loop. For extra head height attach a bungee to this loop and secure to a branch above.

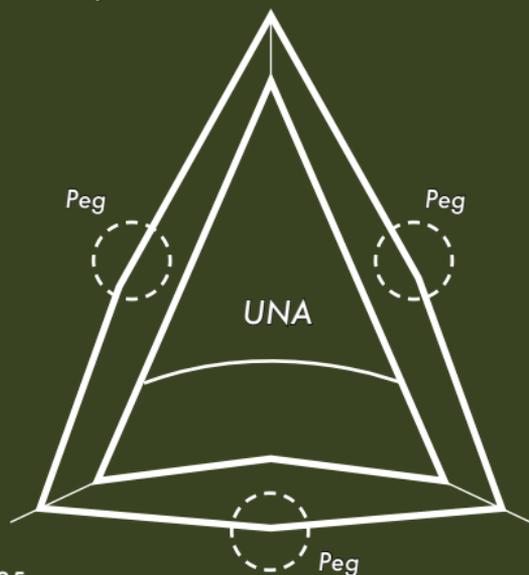


29, Push or hammer the lightweight pegs into the ground.



30, Using the bungees attached to the Rainfly, hook around the pegs to give more structure.



31, The UNA is now complete. For extra height on the Rainfly, bungees can be attached from the loops on top of the cover to branches or trees above.

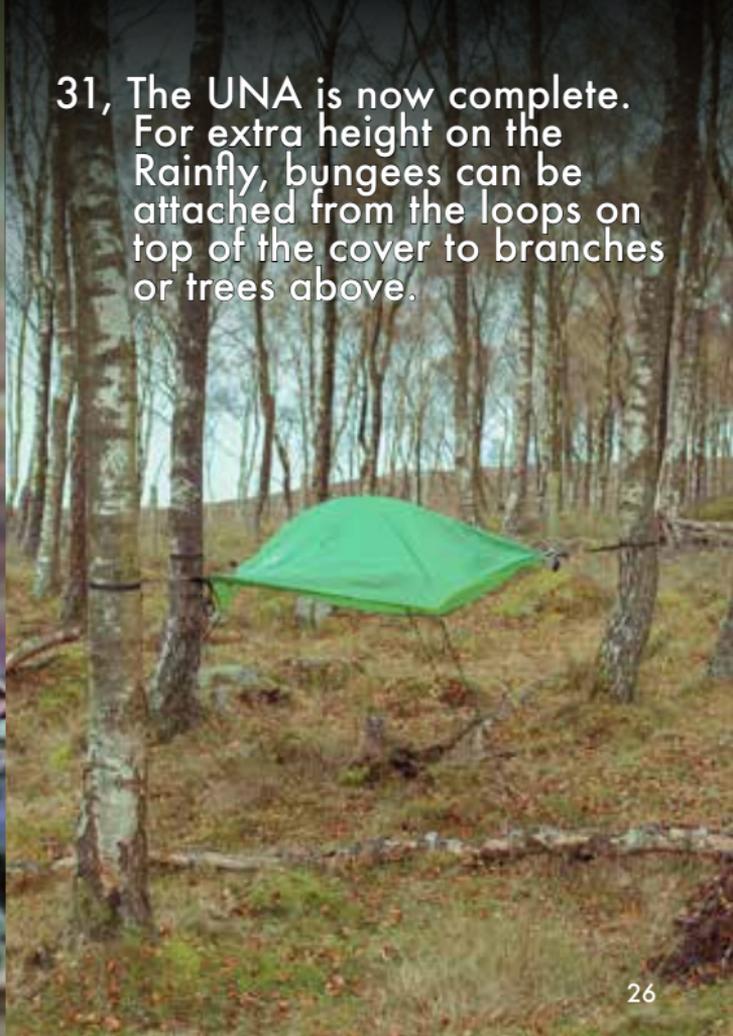

Policies

Maintenance

Visual and Tactile inspection of all components for structural damage before every use and dry out Tentsile Tree Tent thoroughly before packing away. Tentsile Tree Tent should be stored safely in a dry environment.

Returns

You can return this product, in a clean and dry condition, within 4 weeks of purchase and expect a full refund or replacement. If a manufacturing defect occurs within 1 year of reasonable* use, the product can be returned for repair or exchange.

Weather

The Tentsile Tree Tent is not intended to be used in severe weather. If there is weather that creates dangerous conditions, such as storms, heavy rain, high winds, and/or lightning, do not use or remain in the Tentsile Tree Tent in or during those conditions. It is recommended that the Tentsile Tree Tent is taken down and stored to avoid remaining outside and being subject to such conditions. Leaving the Tentsile Tree Tent out and installed in bad weather can lead to potential destruction and/or damage to it (not covered by warranty). If the Tentsile Tree Tent is subject to such

conditions, it and its anchor/hanging system should be inspected in detail prior to any future use. Be sure to thoroughly dry the Tentsile Tree Tent before storing.

Customer Service Charter

Quality first - We will manufacture, sell and distribute the best possible quality Tentsile Tree Tents in the World.

Customer focus - We will provide prompt, courteous and efficient service, with honesty and integrity and expert, clear, and timely information to customers and colleagues.

Tentsile Promise - We will strive for a 'get it right first time, every time' in all our dealings in manufacturing, distribution, sales, and service.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

Contact us
info@tentsile.com

*use as intended and outlined herein and no more than 3 months continuous use.

The small print

The Tentsile Tree Tent is designed for play, relaxation, and camping/sleeping. Never jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops. Do not attach or secure the Tentsile Tree Tent to a movable platform or anchor; it is not intended to be used for such recreation or activities. Do not attempt to use this product for anything other than its intended purpose, and always observe height and weight limits.

Warranties

This one year warranty covers all manufacturing faults of fabrics, parts and workmanship. This warranty covers the functionality of the product for its normal, intended use as specified in Tentsile's consumer literature, incl. website.

It does not cover poles or malfunction of any component that has resulted from improper or unreasonable use or neglectful maintenance, the user's use of undersized or unhealthy trees, sharp objects or fire near the Tentsile Tree Tent or the use by more than the recommended number of persons, at the recommended set up height.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

The warranty herein will not be honoured for products that are purchased through an unauthorised dealer or secondary reseller.

Unauthorised and/or resold products are not backed up by the high quality standards and dependability of original products sold by authorized dealers. By buying from an unauthorised dealer you could get a product that is counterfeit, stolen, or re-manufactured, and being listed as new.

To redeem any potential warranty you will need to provide proof of purchase with the product.

Other than as described above, the manufacturer, sellers, and resellers of this product make no other representations and/or warranties, either express or implied, regarding the product, including without limitation, any warranties as to merchantability, quality, or fitness for a particular purpose.

The manufacturer, sellers, and resellers shall not be liable in any way whatsoever for special, indirect, consequential, or incidental damages, whether based on breach of contract, breach of warranty, tort (including negligence), product liability or otherwise, even if they have been advised of the possibility of such damages. Violation of the instructions and warnings herein operates as a waiver of claims by the user.

The Tentsile Tree Tent user agrees that his or her full remedy against the manufacturer, sellers, and resellers for any liability, claims, or damages, shall be limited to the purchase price of the Tentsile Tree Tent, and irrevocably waives all claims for any other damages that such user may have.

20 Trees Planted

Tree Planting Mission

For every tent purchased we make a donation to plant 20 trees with our partners: WeForest and Eden Projects. We have planted trees in projects located across Zambia, India, Madagascar, and Oregon.

Follow #Tentsile to keep up with our progress as we work with each of these organisations to plant 1 million trees over the next 5 years.

Where Do We Plant Them?

Tentsile's tree planting partners all meet a number of strict criteria; from regular updates and tracking donations, to working with local communities, training residents, planting native species and protecting saplings to maturity.





TENTSILE

www.tentsile.com

All rights reserved Tentsile Ltd 2020
Patent: US D829,840 / EU 004646008-0001