Throttle replacement













A0. Unscrew and open up the bottom cover of the dashboard and disconnect the 8 pins connector.



A2. Release the 4 screws on the dashboard.



A3. Take the throttle out of the handle.



A4. Find out the break bottom signal wire and cut the cable tight.







A5. Disconnect the break signal wire, then take out the throttle.

B





B1. Connect the break signal wire and arrange it back to cable tight.



B2. Put the throttle back and lock it by 4 screws.



B3. Connect the dashboard 8 pins connector.









B5. Installation done.