



Brunton TruArc Compass—Align the Circles and Find Your Way

Parts of the Compass:

1. Azimuth ring w/ 2° graduations (TruArc 10, 15, 20 - 1° graduations)
2. Orienting Needle Outline
3. Global Needle
4. Rotating Dial
5. Bearing Index line
6. Direction of Travel Arrow
7. Map Magnifier
8. Inch/mm Scale
9. Liquid Filled Vial for Smoother Needle Movement
10. Ergonomic Base Plate
11. Declination Adjustment Scale
12. Declination Adjustment Index Line
13. On the Map Meridian Lines (models 5, 7, 10, 15, and 20 only)
14. Lanyard lash point
15. Protective Mirror Cover (models 7, 15, and 20 only)


Magnetic Declination

The difference between True North and Magnetic North (which attracts your compass needle) varies depending on your location on the globe. To find your current declination visit NOAA's online declination calculator here: www.ngdc.noaa.gov/geomag-web

Your Brunton TruArc Compass features tool-free declination adjustment. To adjust, place your thumb in the center of the liquid filled vial, then pinch the vial with your fore-finger on the bottom through opening in the center of the vial base. Hold the rotating dial (part no 4


above) still with you other hand, and then twist the liquid filled vial within the outer dial (fig 1). Adjust to the appropriate declination setting according to your location using the red hash mark at the tail of your magnetized needle. When complete, the compass will automatically compensate for declination.

For example, if your current declination is 20 degrees West (or 20°W) the compass should adjust 20 degrees toward the West to compensate. The figure here shows the factory setting at zero declination, and then compensated according the declination scale (Fig 2a & 2b)

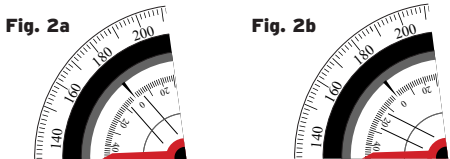


Finding your heading/bearing without a map

1. Select a visible landmark along the route you wish to travel such as a rock formation or mountain top. With the compass held level, point the direction of travel arrow on the compass base plate at the landmark. (Fig 3a) **If you're using a mirrored compass, center the landmark in the sighting window, and position the mirror so that a top view of the compass dial is visible in the reflection.**

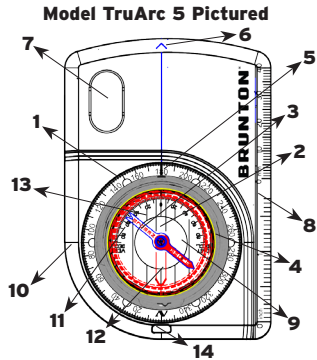


2. Rotate the dial until the red outline aligns with the north-seeking needle. Read your heading/bearing at the index line. (Fig 3b) **When using a mirrored compass, keep your landmark centered in the sighting window, and align the needle with the orienting arrow using the reflection shown in the mirror.**
3. Keep the needle aligned with the red orienting outline as you travel to your landmark. Repeat procedure until your destination is reached.

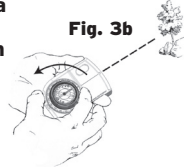


If you know your bearing

1. If you have been given a bearing in degrees to follow, turn the dial so that the index line aligns with the correct bearing degree number. Hold the compass level with the direction of travel arrow pointed straight ahead.
2. Turn your body until the needle is aligned with the red needle outline. You now face your correct direction of travel (fig 4)
3. Pick out a landmark along your direction of travel and move towards it, checking periodically that your needle and red needle outline are aligned. Repeat this procedure until your destination is reached.

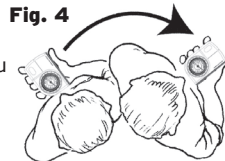

Finding your way using a map


1. Place compass on map with the straight edge along your desired direction of travel. Make sure that the direction of travel arrow points toward your destination.
2. Keeping the compass in place along your desired direction of travel, reposition the map until red needle outline and the needle are aligned (fig 5a & 5b).
3. In the landscape, pick out a landmark along your direction of travel and move towards it, checking periodically that your needle and red needle outline are aligned. Repeat this procedure until your destination is reached.

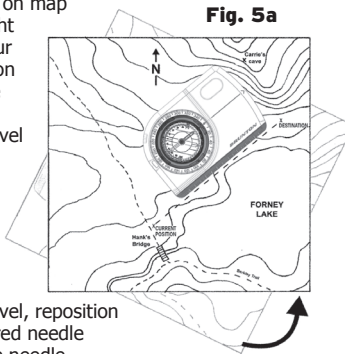

Degree	Tan.	Degree	Tan.	Degree	Tan.	Degree	Tan.
Degré	Tangente	Degré	Tangente	Degré	Tangente	Degré	Tangente
2°	.035	14°	.249	26°	.488	38°	.781
4°	.070	16°	.287	28°	.532	40°	.839
6°	.105	18°	.325	30°	.577	42°	.900
8°	.141	20°	.364	32°	.625	44°	.966
10°	.176	22°	.404	34°	.675	45°	1.00
12°	.213	24°	.445	36°	.727		

Fig. 6

4. Draw a line along the straight edge of the compass base plate, extending it as needed (fig 6).
5. Repeat this process for landmark #2 and again for #3.
6. The triangle formed by the three lines crossing will approximate your position on the map.

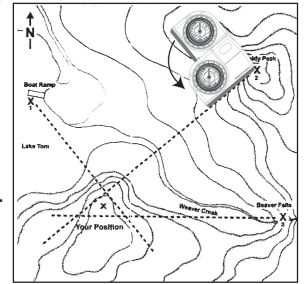


Use of inclinometer to measure vertical height (models 7, 15, and 20 only)

1. Rotate dial until West (270°) is at the index line.
2. Turn the compass on its side with mirror open out to the left. Position the mirror until you can see the reflection of the graduated dial.
3. Sight to the top of the tree or rock formation you are measuring through the mirror's sighting window.
4. In the reflection, read the incline where the red clinometer arrow points at declination scale.
5. Use the sloping ground illustration and tangent table to calculate vertical height (fig 7)

Height On Level Ground - (fig 7) left
 $Height = (\tan A + \tan B) \times distance$
 $= (\tan 30^\circ + \tan 14^\circ) \times 66'$
 $= (.577 + .249) \times 66'$
 $Height = (.826) \times 66' = 54.516 = 54.5'$

Height On Sloping Ground - (fig 7) right
 $Height = (\tan C - \tan B) \times distance$
 $= (\tan 42^\circ - \tan 4^\circ) \times 66'$
 $= (.900 - .070) \times 66'$
 $Height = (.830) \times 66' = 54.780 = 54.8'$

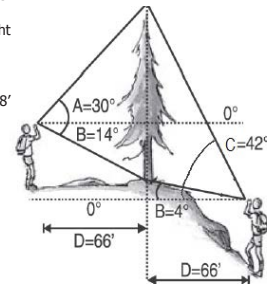

NOTE: Never expose your compass to extreme temperatures exceeding 140°F or below -30°F. Remember that your compass functions using a magnetic field. Prolonged exposure to electronics, stereo speakers, knives, metals or other magnets (anything with a magnetic field) can cause your compass to lose or reverse polarity. Always check the functionality of the compass before relying on it in the field. Brunton recommends avoiding contact with insect repellents or sunscreens containing DEET. These can damage clarity of the compass and wear off necessary scales and markings.

Warranty

Please register your TruArc Compass by visiting www.brunton.com. Brunton has taken every effort to ensure years of trouble-free use from your new product. This product is guaranteed to be free of defect in material and workmanship according to local regulatory requirements. This product is not subject to guarantee from third-parties and is subject to change. Brunton will repair or replace with a new equivalent, without charge for parts or labor, per Brunton's discretion. Brunton cannot be held responsible for accidents, damages or injury occasioned by the use of this product. Warranty will be rendered invalid if product is damaged by tampering, negligence, or misuse.

BRUNTON
 1900 Taylor Ave.
 Louisville, CO 80027
www.brunton.com
info@bruntongroup.com