



BNB-1BM



Smartplanet

PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE REFERENCE.

CONGRATULATIONS

You are now a proud new owner of a
SMART PLANET Bacon Master
model no. BNB-1BM

Before using it for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. If you pass this Bacon Master to a third party, please include the operating instruction manual as well.

PARTS DESCRIPTION

- A. Cook Dial
- B. Hot Plate
- C. Bacon Cover
- D. Handle
- E. Drip Tray
- F. Cord



Electrical Specifications

VOLTAGE	FREQUENCY	WATTAGE
120 V	60Hz	800 W

READ ALL INSTRUCTIONS BEFORE USING THE BACON MASTER

FOR HOUSEHOLD USE ONLY

ELECTRICITY PRECAUTIONS

- To protect against electric shock, do not immerse cord, plugs, or other electric parts in water or other liquids.
- Do not operate any appliance with a damaged cord or plug.
- Do not use this appliance outdoors.
- After cooking, unplug cord from wall outlet. Let appliance cool before removing cord.
- Do not leave the appliance plugged in when it is not being used.
- Always unplug the appliance from outlet before cleaning or between batches. Allow to cool before cleaning.
- A Bacon Master that is plugged into an outlet should not be left unattended.
- A short power cord is provided with this appliance to reduce the risk of entanglement or tripping. While we do not recommend it, extension cords may be used if care is exercised. If an extension cord is used, ensure that the marked electrical rating of the extension cord is equal to or greater than the appliance. If the plug is of the grounded type, the extension cord must be a grounding-type 3-wire cord. To avoid pulling, tripping or entanglement, position the extension cord so that it does not hang over the edge of the counter, table or any other area where it can be reached by children.

IMPORTANT SAFEGUARDS

- Lift the Bacon Master by the bottom when not in use. The handle will only lift the Bacon Cover.
- Never touch hot surfaces. Always use hot pads or oven mitts.
- To protect against fire, electric shock or injury, do not immerse cord, plug or Bacon Master in water or other liquid.
- Close supervision is necessary when this appliance is used near children.
- Before use, unwind the power cord completely and keep the cord away from the hot parts of the appliance.
- Do not let the power cord hang over the edge of a table, counter, or touch hot surfaces.
- Do not place the Bacon Master on or near hot gas, or electric burner, or heated oven.
- Do not operate the Bacon Master with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Contact the Smart Planet Service Center for examination for repair or replacement.
- Do not attempt to repair this appliance yourself.
- The use of accessory attachments is not recommended and may result in fire, electric shock or injury.
- Always unplug the Bacon Master from the electrical outlet when not in use and before cleaning to avoid accidental electrical shock. Allow it to cool before adding or removing parts and before cleaning.
- As long as the appliance is hot, even if unplugged, there is the danger of getting burned. Do not touch the appliance and do not place it into storage while hot.

- Do not use the Bacon Master other than for its intended use.
- For use only with 120V, 60HZ power. Use a socket with a good ground connection. Do not use a two-way adapter on the three prong power cord provided. NOTE: the plug is polarized (one prong is wider than the other) and should be used in a polarized outlet.
- For interior household use only. Do not use this appliance outdoors.

CAUTION

To prevent burns or other personal injuries to children, read and follow all instructions and warnings.

Save these instructions in a safe place for future reference

PRECAUTIONS FOR USE AROUND CHILDREN

- Close supervision is necessary when this appliance is used near children.
- Do not allow cord to hang over any edge where a child can reach it. Arrange cord to avoid pulling, tripping or entanglement.

BEFORE INITIAL USE

1. When using for the first time, remove all packaging materials and unwind the power cord from the appliance.
2. Open the unit by lifting the Bacon Cover.
3. Clean the appliance with warm soapy water using a damp cloth, then dry it. DO NOT immerse the whole unit in water at any time.
4. Before using the Bacon Master, make sure it is at least 4-6" away from any obstacles.
5. There may be a slight smell and some smoke the first time the Bacon Master is used. This is normal and temporary. Make sure there is sufficient ventilation.

DO NOT put the Bacon Master into the dishwasher. This will permanently damage the product and will void the warranty.

CLEANING & CARE

- Always disconnect the power plug before cleaning.
- Clean the unit only when it has completely cooled down.
- Clean the housing surface and the outer surfaces of the unit with a soft, damp cloth.
- Remove plug and clean with a dry cloth. A build-up of dust on the plug could cause cable damage or a malfunction.
- Never use abrasive cleaning agents or sharp objects (i.e. scrubbing brush or knife) for cleaning.
- CAUTION: To avoid electric shock DO NOT immerse the Bacon Master in water or other liquids.
- Clean the Drip Tray after each use.

USING YOUR BACON MASTER

Enjoy healthier bacon by using your new Bacon Master to drain the grease away from the bacon during cooking without splattering or burning. Bacon comes in many thicknesses and types so it's important to experiment to make your bacon perfect.

1. Place the Bacon Master on a flat, dry surface.
2. Plug the power cord into a standard 120 volt AC electrical outlet. NOTE: the plug is polarized (one prong is wider than the other) and should be used in a polarized outlet.
3. If you want to use the "Pre-Heat" setting for thicker bacon or crisper bacon, turn the knob to the "Pre-Heat" setting and wait for the chime to sound.
4. If you do not use the "Pre-Heat" setting, simply hang bacon strips over the Hot Plate arranging them so they do not touch.
5. Lower the Bacon Cover over the bacon and adjust the Cook Dial to the desired cooking level. Do not touch the Hot Plates while the unit is cooking.
6. The bacon is done cooking when the chime sounds. More time may be added to the Cook Dial if bacon is undercooked for your taste. Note that different brands and thicknesses of the cut will vary the cooking times.
7. Allow to cool and then use a wooden or silicone utensil to remove the bacon. To avoid scratching the non-stick surface of the Hot Plates do not use sharp utensils to remove the bacon.
8. To cook additional bacon, remove the Drip Tray, drain the fat and repeat the above steps. Do not touch the Hot Plates.
9. When finished, unplug the Bacon Master from the electrical outlet. Allow the unit to cool before cleaning.



* COOKING GUIDELINES *

PLEASE NOTE THE SIZE AND SHAPE OF THE BACON BEFORE COOKING! ADDITIONAL TIME MAY BE REQUIRED FOR THICKER BACON TO COOK PROPERLY.

HELPFUL HINTS

- Place cooked bacon on a cooling rack, paper towel or empty egg carton to cool down.
- To maintain proper cooking temperature, close the Bacon Cover immediately after checking for desired cooking level if the bacon is under cooked.
- Increase cooking time when using thicker cut bacon.
- When making additional bacon, check if the Drip Tray is full. Do not let the Drip Tray overflow. Clean the Drip Tray after each use.

90 DAY LIMITED WARRANTY

Smart Planet warrants this appliance from failures in the material and workmanship for 90 days from the date of original purchase with proof of purchase, provided the appliance is operated and maintained in conformity with the provided instruction manual. Any failed part of the appliance will be repaired or replaced at Smart Planet's discretion.

This warranty does not cover any damage, including discoloration, to any non-stick surface of the appliance. This warranty is null and void, as determined solely Smart Planet if the appliance is damaged through accident, misuse, abuse, negligence, scratching, shipping or if the appliance is altered in any way.

If you think the appliance has failed or requires service within its warranty period, please email the Bacon Master Service Department at service@smartplanet.net for further instructions. Please include a description of the defect along with the date you purchased the product and the original receipt with the original purchase date. A receipt proving the original purchase date will be required for all warranty claims, hand written receipts are not accepted. You may be instructed to return the appliance for inspection and evaluation. Return shipping costs are not refundable. Smart Planet is not responsible for returns lost in transit.

Valid only in the USA and Canada



Smartplanet

www.smartplanethome.com

Copyright 2015 Smart Planet Canoga Park: CA 91304
Bacon Master Service Center: service@smartplanet.net
copyright v.20150805



SmartPlanet
www.smartplanethome.com