

**INSTRUCTION MANUAL
AND RECIPE STARTERS
THE ORIGINAL POPCORN FACTORY**

PF-1



Smartplanet

www.smartplanethome.com
Copyright 2011 | Smart Planet | Canoga Park, CA 91304
v.20110214

SMART PLANET


**PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE REFERENCE.**

CONGRATULATIONS

You are now the proud new owner of a SMART PLANET Popcorn Factory model no. PF-1

Before using it for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. If you pass this Popcorn Factory unit to a third party, please include the operating instruction manual as well.

PARTS DESCRIPTION

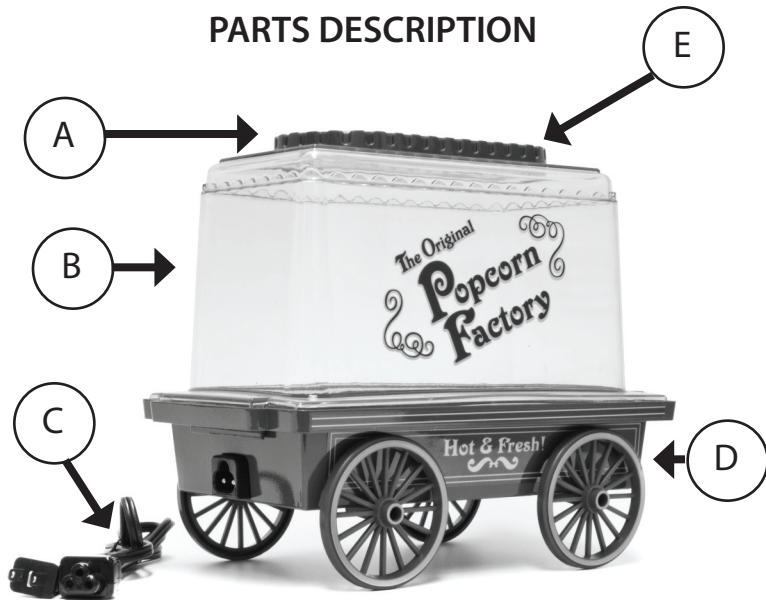

- A. Plastic Cap
- B. Lid
- C. Power Cord
- D. Popper Base
- E. Butter well (under plastic cap)

IMPORTANT SAFEGUARDS

- Read all instructions before using the Popcorn Factory.
- Do not touch hot surfaces. Always use the plastic handles on lid and do not touch the metal popcorn tray when hot.
- To protect against fire, electric shock and injury, do not immerse the cord, plug or expose Popcorn Factory in water or any other liquid.
- Always supervise children when appliance is in use.
- Before use, unwind the power cord completely and keep the cord away from the hot parts of the appliance.
- Do not let the power cord hang over the edge of the table or counter or to touch any hot surfaces.
- Do not place the Popcorn Factory in a heated oven or near any hot gas/electric burner.
- Do not operate the Popcorn Factory with a damaged cord or plug. If this product malfunctions, or has been damaged in any manner, contact the Popcorn Factory Service Center.
- The use of accessory attachments is prohibited and may result in fire, electric shock or injury.
- Always unplug the Popcorn Factory from the electrical outlet when not in use and before cleaning to avoid accidental electrical shock. Allow it to cool completely before cleaning.
- As long as the appliance is hot, even if unplugged, there is the danger of getting burned. Do not touch, handle or store while hot.
- Do not use the Popcorn Factory for anything other than its intended use.
- For use only on 120V, 60HZ power supply. Use a socket with a grounded connection. Do not use three to two-way adapter on the three prong power cord provided.
- For interior household use only.

- Extreme caution must be used when unloading popcorn. Always turn the unit away from you and over a countertop so that residual hot oil or steam will not cause a burn.

ELECTRICITY PRECAUTIONS

- To protect against electric shock, do not immerse cord, plugs, or other electric parts in water or other liquids.
- Do not operate any appliance with a damaged cord or plug.
- Do not use this appliance outdoors.
- Always attach the cord to the appliance first, then plug cord into wall outlet. After popping, unplug cord from wall outlet. Let appliance cool before removing the cord from the base unit.
- Do not leave the appliance plugged in when not in use.
- Always unplug the appliance from outlet before cleaning. Allow unit to cool completely before putting on or taking off parts and before cleaning.
- Never leave the appliance unattended while plugged into an outlet.
- A short power supply is provided with this appliance to reduce the risk of entanglement or tripping. While we do not recommend it, extension cords if available may be used if care is exercised. If an extension cord is used, the marked electrical rating of the extension cord should be at least 15 amperes. The longer cord should not hang over the countertop or tabletop where it can be pulled by children or pets or tripped over.

CAUTION

To prevent burns or other personal injuries to children, read and follow all instructions and warnings.

PRECAUTIONS FOR USE AROUND CHILDREN

- Close supervision is necessary when this appliance is used near children.
- Do not allow cord to hang over any edge where a child can reach it. Arrange cord to avoid pulling, tripping or entanglement.

SAVE THESE INSTRUCTIONS

DO NOT USE POPCORN FACTORY IF ALL FOUR WHEELS ARE NOT PROPERLY ATTACHED.

BEFORE USING FOR THE FIRST TIME

1. When using for the first time, remove all packaging materials and unwind the power cord from the appliance.
2. Clean the appliance with warm soapy water using a damp cloth, and then dry all parts completely.
3. Before using the Popcorn Factory, make sure it is at least 1" away from any flammable surface.

USING YOUR POPCORN FACTORY

- Place popper base on flat, dry surface.
 - Preparing popcorn
1. With the unit unplugged, add 3 tablespoons of vegetable oil and 1/2 cup of corn into popper base. Do not add more corn and oil than recommended. Spread corn evenly over popping surface. Do not substitute butter, margarine, shortening, olive oil, or lard for vegetable oil as these will burn or smoke excessively.
 2. Place cover on popper base making sure handles of cover fit into handles of popper base. Remove the cap from the butter chamber. If buttered corn is desired, divide recommended amount of refrigerated butter into 6 equal sized parts and place in a single layer over

butter holes in butter well. (If unrefrigerated butter is used, add to butter well after the first kernel of corn pops.) Popcorn will be buttered as it pops. Do not add salt to the butter as it will prevent proper melting.

3. Do not place plastic cap on butter well until after corn is popped. If unbuttered corn is desired, do not add butter to the butter well and do not place cap onto butter well until after corn is popped.
4. Insert cord into popper base. Plug cord into a 120 volt AC outlet. Do not shake popper during popping cycle. In 4-6 minutes (depending on quantity of corn being popped) the popping cycle will be completed. Unplug cord from wall outlet. Use a hot pad to remove cord from popper base.
5. If butter is not completely melted in butter well, use a spoon to push any remaining butter through the buttering holes.
6. Snap plastic cap securely onto butter well. This cap must be on cover before popper is inverted. Make sure handles of popper cover are placed into handles of popper base. Grasp handles firmly and turn popper upside down, away from you. Lift popper base away from cover, being careful of escaping steam. The use of hot pads is recommended as the handles may be hot to the touch.
7. Popcorn is now ready for serving. Sprinkle popcorn with salt if desired.

Popping Additional Batches of Popcorn- if you plan to pop more corn immediately, transfer popcorn from serving cover to another serving bowl. Follow steps 1 through 7 above.

CLEANING YOUR POPCORN FACTORY

- Clean popper after every use. Always allow popper to cool before cleaning.
- Cleaning Popper Cover- Wash cover and plastic cap in warm, soapy water, with a dishcloth or sponge. Rinse thoroughly and dry. Do not use scouring pad or abrasive powder on cover as this could cause scratching.
- Cleaning Popper Base- Clean non-stick surface of base with a damp, soapy dishcloth, sponge or nylon-scouring pad. Wipe surface with a damp cloth and dry. Do not use abrasive scouring pads or powders on non-stick finish as scratching may occur. After consistent use, the non-stick finish may discolor. To remove discoloration, use a soft cloth saturated with lemon juice or vinegar and rub over finish. Then wipe the finish with a damp cloth and dry.

DO NOT PLACE POPPER COVER, PLASTIC CAP, BASE, OR CORD IN AN AUTOMATIC DISHWASHER.

90 DAY LIMITED WARRANTY

If there are any defects in material or workmanship during the first 90 days of purchase, the Popcorn Factory will be repaired/replaced at our option. This warranty excludes any damages to the product resulting from accident or misuse. Please read instructions carefully.

The warranty also excludes damage caused by shipping, mishandling, or unit being dropped. To obtain service under the warranty, send an email to the Popcorn Factory Service Center at service@smartplanet.net.



GOURMET SWEET POPCORN RECIPES

CARAMEL CORN

- ¼ cup butter
- 1 cup brown sugar
- ½ cup light corn syrup
- ½ cup sweetened condensed milk
- ½ teaspoon vanilla
- 5 quarts popped corn

Make popcorn in the Popcorn Maker as listed in the instructions. Combine butter, brown sugar and corn syrup in a heavy saucepan. Cook over medium heat, stirring well. Bring to a boil. Stir in milk. Turn to low heat and stir constantly until the mixture reaches a soft ball stage. Stir in the vanilla. In a large bowl, pour syrup over popped corn. Mix well until all the popcorn is coated.

CHOCOLATE POPCORN DELUXE

- ½ cup butter
- 5 cups miniature marshmallows
- 1 ½ quarts popped corn
- 1 ¼ cups semi-sweet chocolate chips

Make popcorn in the Popcorn Maker as listed in the instructions. Next step is to melt the butter and marshmallows in a 2-quart saucepan over medium-low heat. Stir until all the ingredients are smooth.

Combine the popped popcorn and all the chocolate chips in a big bowl. Pour marshmallows mixture over the popcorn mixture. Make sure all the ingredients are mixed well together. Transfer contents into a greased 9X9 pan. Chill until firm. Cut into squares and enjoy.