


VIII. Parts list

1. Power Screed drawing

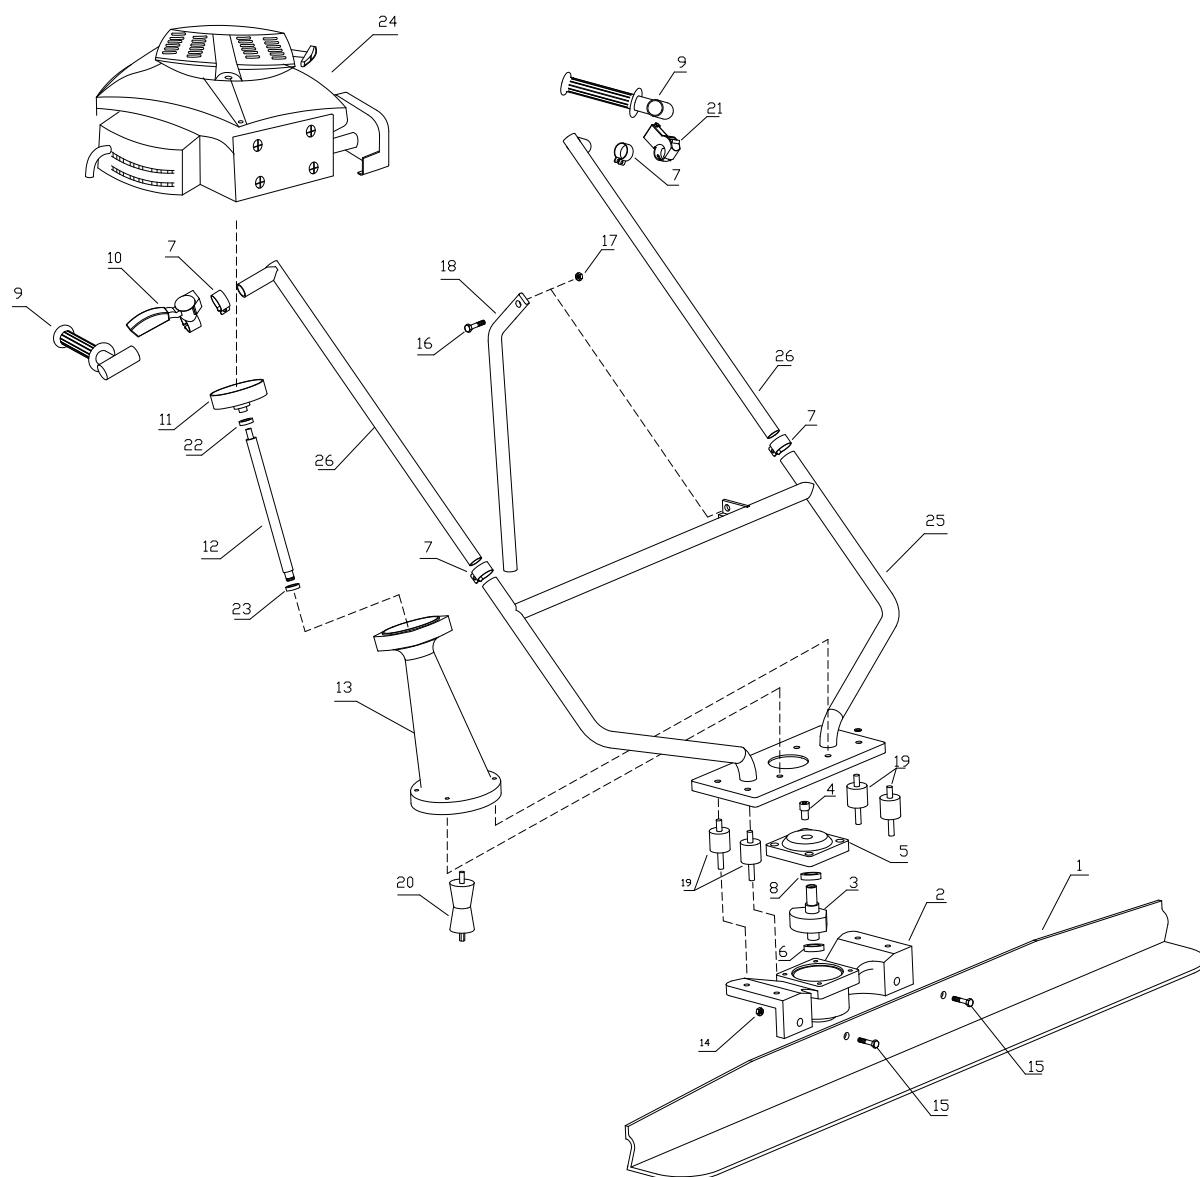

Power Screed spare part name

No.	Parts No.	Name	Qty	Remarks
1	10001	Blade	1	
2	10002	Vibrating Box	1	
3	10003	Eccentric Shaft	1	
4	10004	Linkage nut	1	
5	10005	Cover of Gearbox	1	
6	10006	Bearing	1	
7	10007	Lock	4	
8	10008	Bearing	1	
9	10009	Grip Handle	2	
10	10010	Throttle Control lever	1	
11	10011	Shell of Clutch	1	
12	10012	Connecting Shaft	1	
13	10013	Connecting housing	1	
14	10014	Screw	2	
15	10015	Bolts	2	
16	10016	Bolts	1	
17	10017	Screw	1	
18	10018	Support Shaft	1	
19	10019	Shock Mount	4	
20	10020	Connecting Flex Shaft	1	
21	10021	Flameout switch	1	
22	10022	Bearing	1	
23	10023	Bearing	1	
24	10024	Engine	1	
25	10025	V-Frame	1	
26	10026	Upper Handle	2	