



## Sewing Machine Carry Case

Safeguard your sewing machine both at home and while travelling with the SINGER® Sewing Machine Carry Case. The bag is ideally proportioned to fit your SINGER® portable sewing machine or overlocker.

Crafted to ensure secure, dust-free storage of your sewing machine or equipment, the bag provides protection against impacts, bumps and scratches.

It functions as both a carrying case and a storage bag, allowing you to conveniently transport your sewing machine to a class, meeting or vacation.



### Features:

- Safe and Dust-Free Storage
- Padded carry handles can be joined for a more secure hold
- Full zip makes it easy to get your sewing machine in and out
- Front zippered pouch for storing belongings and notions
- Available in 4 colours: Black, Brick Red, Teal and Cream
- Protects your machine when in storage and on-the-go
- Fits all SINGER machines, except the EM9305.
- Internal Bag Dimensions: L 33cm H, 46cm W, 26cm

### Shipping Specifications:

Length (cm)	Width (cm)	Height (cm)	Weight (kg)
14	10	8	0.310

### Product Specifications:

Length (cm)	Width (cm)	Height (cm)	Weight (kg)	SKU	Barcode
14	10	8	0.310	S617-BLACK	9311138047876
14	10	8	0.310	S617-BRICK RED	9311138047883
14	10	8	0.310	S617-TEAL	9311138047890
14	10	8	0.310	S617-CREAM	9311138048859