



## Full Control Trigger Gun

New Full Control trigger gun comes with an LED display to guide you to the correct pressure setting for the surface you are trying to clean. Helping you achieve the best results for your home.

### 1 For Kärcher full control K4 to K5 pressure washers

- For easy replacement of your trigger gun.

### 2 Easy-to-read LED display for indicating the pressure levels and detergent mode

- For easy selection of the best pressure setting for the surface you are trying to clean.

### 3 Quick connect connector

- Quick-Connect system for easy connection of your trigger gun and high-pressure hose.

### 4 Bayonet connection

- Allows all Kärcher accessories to be connected.



## Full Control Trigger Gun

### Technical data

<b>Order Number</b>		2.643-634.0
<b>EAN code</b>		4054278159812
<b>Weight</b>	<b>kg</b>	0,59
<b>Weight incl. packaging</b>	<b>kg</b>	0,79
<b>Dimensions (L x W x H)</b>	<b>mm</b>	552 × 43 × 223