



(GB)


48344 - BC1000 48346 - BC2000

 
48347 - BC3000 48348 - BC5000

OPERATION AND USE

Note: For details of our full range of accessories and consumables, please visit drapertools.com

Stock No.	Safe Working Load	Girder Beam Width A	Girder Beam Width B	Steel Plate Width C
48344	1000kg	75mm	220mm	4.8mm
48346	2000kg	75mm	220mm	5.5mm
48347	3000kg	80mm	320mm	7.5mm
48348	5000kg	80mm	320mm	9.5mm

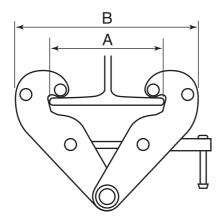



SAFETY INSTRUCTIONS

Always ensure that the load to be slung does not exceed the rated capacity of the equipment being used. Also ensure that the structure to which the trolley or winch is attached meets or exceeds the safety parameters which are specified by the HSE. Do not allow the load to swing during operation and do not subject winches, pulleys, beam clamps and straps to shock loads.

Helpline: +44 (0) 23 8049 4344 Sales Desk; +44 (0) 23 8049 4333 General Enquiries: +44 (0) 23 8026 6355 internet: drapertools.com email: sales@drapertools.com