

Threading instructions for CPU holder strap

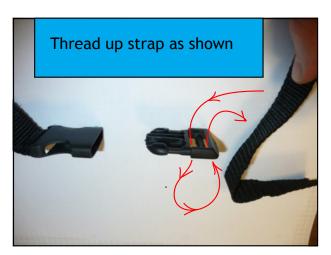

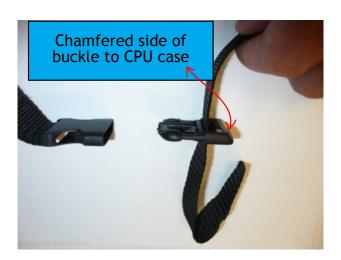



Do not adjust by pulling the strap with the buckle done up