

Safe use of rules

Must by adults on the local assembly, please check whether the device and circuit assembly assembly process correctly.

Default of banned in the streets, highways, landslides and other dangerous places.

Children must be under the custody of adult use.

When used on the local, please do not casually change device.

When use, shall not be frequently switch forward backward function.

Please check the battery, line, plugs, and other parts for damage and found damaged, please stop using in time.

Until the restored can be reused.

The rechargeable battery can't charge.

Should be in the right electrode in the battery.

Run out of battery should be removed from the toy.

The power terminals shall not be short

Charging matters needing attention


- Using electric vehicles for the first time to charge first! Charging in car tail, charging charger Cover first then put the plug in the charging socket, then the charger plugged in. (charging must Be made into do, do not let your children's access to power supply)
- please recharge immediately when electric vehicle driving speed slowed significantly, continuous Charging 8 to 10 hours, not more than 10 small at the night time.
- in the process of charging the charger or battery have fever phenomenon (under 60 °) are Normal.
- the electric car must use local car equipped with dedicated charger and battery, so as not to Damage the charger and battery and electric circuit.
- the electric vehicle charging shall not do any operation.
- please a mixture of old and new or different types of batteries.
- electric vehicle charging, please check whether the circuit connection is correct.
- when the electric conductor time when not in use, must charge at least once every month.

Warning: electric car used in non private places, may lead to drowning, burns, falls and other hazards.

ELECTRIC CAR

Install and use the manual

Manual has an important information, read, please keep for future reference.

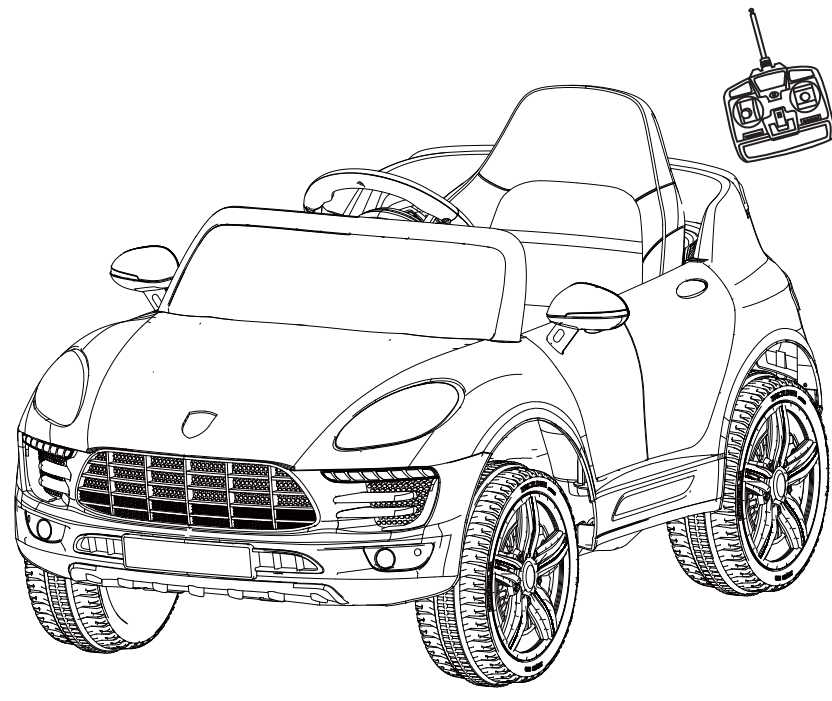


STANDARDS:EN71、EN62115


TROUBLESHOOTING

PROBLEM	ANALYZE	SOLUTION
Car doesn't work	• Low power	Recharge the battery
	• Damage of thermic fuse	Change with new thermic fuse
	• Lose of wheel nut	Use new nut
	• Loose of battery connector	Put on the connector
	• Exhaust & bad battery	Change with new battery
Battery can't be recharged	• Damage on electrical parts	Go to repair shop
	• Damage on motor	Go to repair shop
	• Loose of the battery connector	Tighten the connector
Short of run time	• Charger doesn't plug the power	Plug charger with power
	• Damage of charger	Change new charger
Noise & Heat during recharge	• Battery with lower power	Recharge the battery fully
	• Battery is old	Change new battery
Low Speed	• It's chemical process	It's normal & safety
	• Old battery	Use new battery
Noise of gear box	• Low power	Recharge the battery fully
	• Over burden	Reduces burden under 25KG
	• Run on not-flat ground	Run on flat ground
Car shake when running	• Damage of gear box	Go to repair shop
	• Damage on motor	Go to repair shop
No sound & light when running	• Bad connect of motor wire	Reconnect the wire
	• Motor doesn't work well	Go to repair shop
Car can't stop in run	• Loose of sound & light wire	Connect the wire
	• Damage of sound & light board	Go to repair shop
Unusal working condition under Remote control	• Damage of electrical parts	Go to repair shop
	• Remote control battery exhaust	Change battery
	• Remote control out of distance	Keep your distance between car and remote control
	• Damage of remote control	Damage of remote control
Remote control	• Damage of receiver board	Change receiver board
	• Disturb of magnetic filed	Far away from magnetic filed


UNIT MOUNT

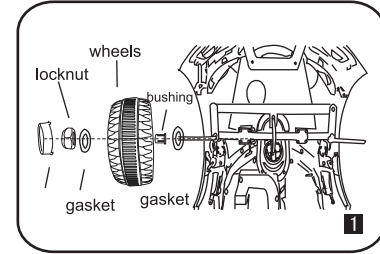

Install the front wheel
On the gasket, the lining of the conrod into the front axle, then the front wheel set into the front axle, and then set into the gasket and the locknut, with nut wrench should be fixed, cover the cap. About the same installation (as shown in figure 1)

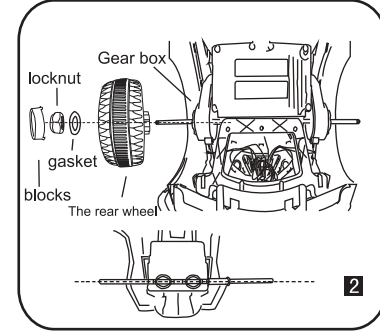


Install the rear wheel
Will first car body over, remove manual damping spring and bushing inside, and then put a spring in car suspension hole, then set into the sleeve, and then use 10 mm rear axle through the sleeve and body, in turn will spring is fixed inside the car. Then through the rear axle, gear box positioning on the car, and then the connections on the gear box connected to car connector, then insert the wheel shaft, set into the big gasket, then it fixed with a locknut, finally cover the wheel cover. (as shown in figure 2)

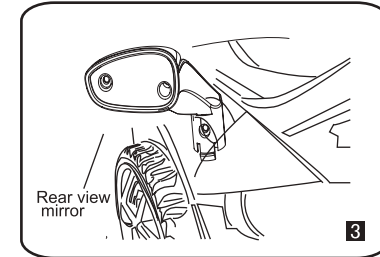


Install the rear view mirror
Classify the rearview mirror around first, and then corresponding insertion on the car body, hear clicks shows that Ann Put in place. (as shown in figure 3)


UNIT MOUNT

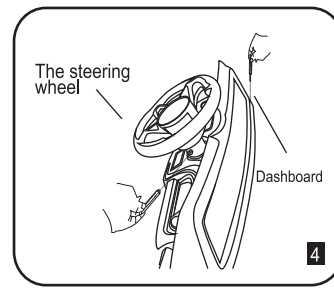

Install the steering wheel
Will line connectors and direction in the direction of dish stem line connectors are connected (note that connect the positive and negative), Then put the steering wheel in the direction of the pole, with the M5 inner hexangular set screw rod through the steering wheel and direction in turn, (as shown in figure 4)

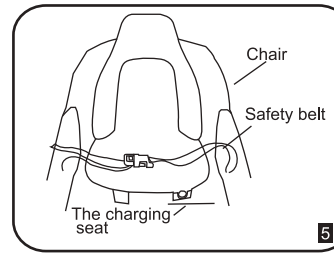


Charging instructions
Before installing seat first connect the positive, and then put seat in the specified location, card hook body card slot, then put the front seat fixed on both sides of the hole with the screw clockwise tightened when charging, open cover charge first, and then insert the charger to charge hole, when charging the vehicle without any function. (as shown in figure 5)

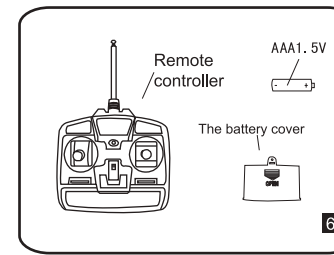


Remote control battery installation
First use the screwdriver to unscrew the screw on the battery cover, then take out the battery cover and remote control into two AAA1.5 V batteries, and battery cover and screw locking. (see figure 6)

Install know that

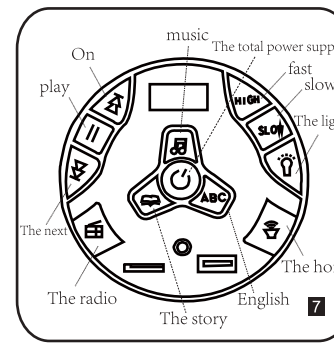

- Function of the instructions
- Open the dashboard right measuring total power supply first, the control panel lights light up.
 - Some dynamic music symbol key, the music sounded. Located in the upper left is the play button and the first switch button up and down. Sound size adjustment will switch first bond length according to the up and down, just can achieve.
 - The key point moving story, play the story at this time.
 - ABC at key, broadcasting English at this time.
 - Move the radio icon, you can search the radio channel.
 - Light icon at the vehicle lights light up at this time.
 - Some dynamic speaker icon, vehicle delivered when the horn.
 - Some HIGH and missile icon, at this point the vehicle can be realized according to the prompt instruction of fast and SLOW.
 - The radio on the top left corner of the USB interface, the following for the memory card inserted into the mouth. And next to the MP3 jack.
 - Puts forward backward switch forward, stepping on foot switch the car to drive forward. Puts forward backward switch back, stepping on foot switch backwards moving vehicle. Back switch is set forward, stepping on foot switch state of the car to stop at this time.
 - A red circle switch to swing start button, turn on the switch can realize the swing function.

Note: the remote control is preferred. (as shown in figure 7)

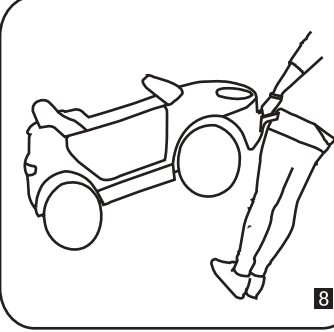

The use of hand in hand and pulley
When the vehicle has no power, first of all your children from the car, and then the rear support of the pulley to open, and then pull the front support of the handle. You can easily bring the car home. (as shown in Figure 8)

release switch to eliminate the obstacles and foot before you ride.
6 In the car was pulled, the device, such as a block, please immediately
5 Cycle shall not leave the seat to prevent operation resulting in injury.

- It's suitable for children for about 7-96 months.
- Clamp down on the screws, roads, slope, waiting for over a backward, to eliminate obstacles to ride.
- Driving, we must by adults, and the intelligence use.
- Be charged by an adult, don't let the children touch.

SAFE RULES
Non-transportation, must be care of adult!
Warning Before using the child for education, safety!

R/C Distance	15 ± 5M
R/C Battery	AAA 1.5V 2
Age	37 months - 96months
Speed	3-5 KM/H
Work Time	Recharge 8-12h, use for 1-2h
Maximum load	30 KG
Charger	Imp:420V-240V, 50Hz-60Hz, Output:DC12V1A
Battery	12V30W, 12V15W
	2#6V4.5AH

DECLARATION:
1) Manual used in illustrations to explain the product or the operations and products, with the installation of structure in the existence of a small difference in kind, please standard the object.
2) In order to improve product quality, not on notice, we may change the part of the structure, and appreciate, please forgive.
3) This package contains important information that must be to keep.
4) (cannot be used in rainy days.
5) (Can not use water to clean.
6) Protective equipment should be worn. Not to be used in traffic.

USE CAUTIONS
1 First to use please open the cushion 1, and the battery connections with methods of operation of this product damage or injury and your baby.
Manual should be placed to take good care of.
2 Charging socket the cushion down side, and needs recharging, charger 2 hours, or cause a short-circuit.
3 Please don't on the polished surface, such as marble, tile on the surface.
4 In the first to use the deposit, we must ensure that the cell battery up to 10 hours.
5 Don't run in an electric switch with on deposit in the back of the light switch.
6 Shall not be altered the car circuit or device to additional charged.
7 The remote control and not to let it get caught in the hair or otherwise made in water and keep away from sources of ignition to avoid causing the damage.
8 Met with obstruction, the baby stop, please leave the obstacles to ride, battery, in the case of broken the cell phone chargers and the counter-voltage or an electric circuit.
9 Can't insert the battery which has a lever (60 °) are normal.
10 When the battery is not use for a long time, at least once every month to charge.
11 Toys can't connect to the supply on the use of the recommended amount.
12 When the car is charging, can't use it.

* Car wheel, blocks	4PCS	* Remote controller	1PC
* Chair	1PC	* Manual	1PC
* The steering wheel	1PC	* MP3 connector	1PC
* Car body (polypropylene)	1PC	* Charger	1PC

PACKING LIST

19. Batteries are to be inserted with the correct polarity.
18. Different types of batteries or new and used batteries are not to be mixed.
17. Rechargeable batteries are to be removed from the toy before being charged.
16. Rechargeable batteries are only to be charged under adult supervision for toys supplied with a battery charger for use by children.
15. Non-rechargeable batteries are not to be recharged.
14. How to remove and insert the batteries.
13. The types of batteries that may be used.
12. Not in use, please turn off the switch, no, please unplug the battery, a battery!
11. When the remote control battery power is low, the car on the remote control and turned back, a short distance, shake, please replace the battery.
10. Not in use, to avoid hitting the child.
9. Don't use in the water, water and other liquids in the car.
8. Met with obstruction, the baby stop, please leave the obstacles to ride, battery, in the case of broken the cell phone chargers and the counter-voltage or an electric circuit.
7. Have to exchange the batteries to be recharged from the toy the use of battery.
6. Charging device or battery which has a lever (60 °) are normal.
5. Don't run in an electric switch with on deposit in the back of the light switch.
4. In the first to use the deposit, we must ensure that the cell battery up to 10 hours.
3. Please don't on the polished surface, such as marble, tile on the surface.
2. In the screws, roads, slope, catch and the danger area.
1. In the first to use the deposit, we must ensure that the cell battery up to 10 hours, or cause a short-circuit.

USE CAUTIONS

1. In the first to use the deposit, we must ensure that the cell battery up to 10 hours, or cause a short-circuit.
2. In the screws, roads, slope, catch and the danger area.
3. Please don't on the polished surface, such as marble, tile on the surface.
4. In the first to use the deposit, we must ensure that the cell battery up to 10 hours.
5. Don't run in an electric switch with on deposit in the back of the light switch.
6. Shall not be altered the car circuit or device to additional charged.
7. The remote control and not to let it get caught in the hair or otherwise made in water and keep away from sources of ignition to avoid causing the damage.
8. Met with obstruction, the baby stop, please leave the obstacles to ride, battery, in the case of broken the cell phone chargers and the counter-voltage or an electric circuit.
9. Can't insert the battery which has a lever (60 °) are normal.
10. When the battery is not use for a long time, at least once every month to charge.
11. Toys can't connect to the supply on the use of the recommended amount.
12. When the car is charging, can't use it.
13. The types of batteries that may be used.
14. How to remove and insert the batteries.
15. Non-rechargeable batteries are not to be recharged.
16. Rechargeable batteries are only to be charged under adult supervision for toys supplied with a battery charger for use by children.
17. Rechargeable batteries are to be removed from the toy before being charged.
18. Different types of batteries or new and used batteries are not to be mixed.
19. Batteries are to be inserted with the correct polarity.

Using The Matters Needing Attention

Products should be assembled by adult right before use.
Battery charging should be carried out by adults, must first be charged before using this product.
The first use of electric vehicles, must ensure that the battery full 10 hours! Otherwise it would be permanent damage
Foot and beyond repair.
Please don't in the street, the road, landslides and other dangerous places, and be sure to use under adult supervision.
This product is limited to a person, do not overload, the largest capacity of 30 kg.
Please fasten your seat belt, and make sure that your baby is always sat on the bench, at the same time, please do not let the baby in
Runtime stand or do some dangerous action.
Please don't suddenly change in the process of electric vehicles run forward backward switch. To prevent collisions with vehicles, please do not use in a relatively narrow space, in order to avoid damage to electric vehicles.
Please check the product and the charger, check the wires, plugs, shell packaging and other components
Damaged, found that the damages should stop using, to be repaired before use.
When not in use for a long time, please turn the power off and remove the battery connector.
Children must use under adult supervision.
Safe use period: three years.