


baridi

Baridi 27 Bottle Dual Zone Drinks Wine Cooler, Fridge, Touch Screen, LED, Black

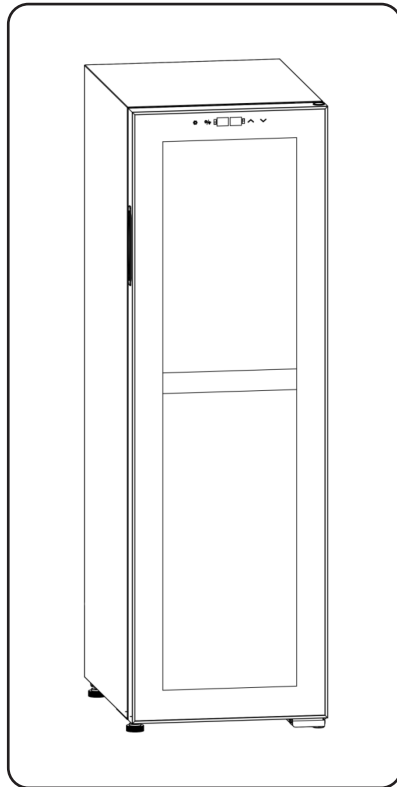

Model No. DH90

Thank you for purchasing a Baridi product from the Dellonda range. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully and note any safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to
instructions




Indoor use
only

• ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
 - Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Dellonda recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local domestic stockist. If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.
- **Electrical safety information:** It is important that the following information is read and understood.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- This product is fitted with a BS1363/A 13 Amp

- 3 pin plug. If the cable or plug is damaged during use, switch off the electricity supply and remove from use. Ensure that repairs are carried out by a qualified electrician.
- Replace a damaged plug with a BS1363/A 13 amp 3 pin plug. If in doubt contact a qualified electrician.

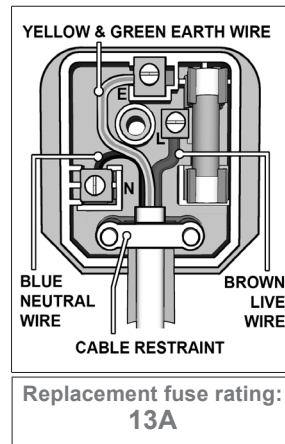

- A) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
- B) Connect the BROWN live wire to the live terminal 'L'.
- C) Connect the BLUE neutral wire to the neutral terminal 'N'.

- Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
- Dellonda recommend that repairs are carried out by a qualified electrician.
- **GENERAL SAFETY**
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING:** Ensure the supply cord is not trapped or damaged.

- **WARNING: DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; holiday homes, hotels and other residential settings; and catering and similar non-retail applications.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• INTRODUCTION

- Sleek design with tempered mirror glass door to reflect UV light and help protect your wine. Dual zone design means you can control the temperature of each zone individually, with the upper zone and the lower zone ranging from 5-18°C. Soft white LED light. Features stylish wooden shelves made of beech with space for up to 12 bottles of wine in the upper zone and 15 bottles of wine in the lower zone. Compressor cooling technology with automatic defrost feature to make this unit as easy as possible to use. Ventilation Space - a minimum space of 50mm is required for the rear of the fridge and 30mm for the top and both sides. This will maximise the efficiency, performance and life of the fridge and ensure that there is sufficient space for the hinge to operate effectively.


• SPECIFICATION

- **Model no:** **DH90**
- **Capacity:**27 bottles
- **Max. bottle height:** 320mm
- **Volume:** 74L
- **Temperature range:** 5 -18°C
- **Rated Current:** 0.6A
- **Voltage:** 230V
- **Frequency:** 50Hz
- **Net weight:** 28.5kg
- **Energy: efficiency class:** G
- **Noise level:** 47dB
- **Dimensions:** 345 x 480 x 1110mm

• INSTALLATION

- The unit is designed to be free-standing. Ventilation Space - a minimum space of 20mm is required for the rear and top of the fridge, 30mm for both sides and 50mm under the base. This will maximise the efficiency, performance and life of the fridge and also ensure that there is sufficient space for the hinge to operate effectively. **DO NOT** locate the unit in a damp or moist location.
- **DO NOT** locate the unit in direct sunlight.
- Ensure that the floor surface is strong and stable enough to support the unit when it is fully loaded.
- Level the unit when in location by using the adjustable levelling feet in each corner.
- Once in position allow the unit to rest for an hour before turning it on.
- Allow the unit 2 - 3 hours to reach set temperature after switching on before placing any items in the compartment.



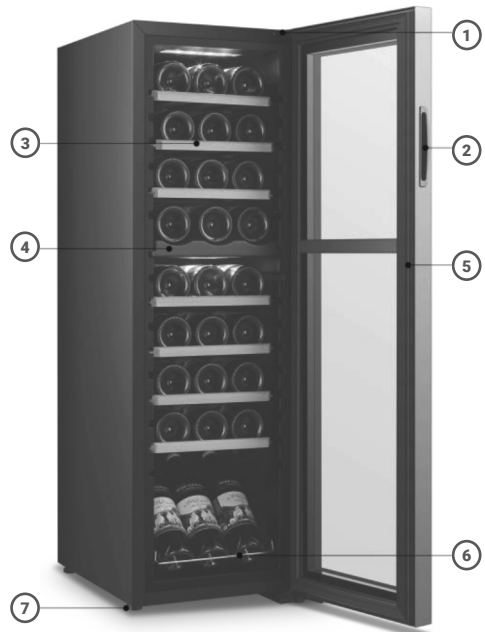




• PARTS AND FEATURES



- 1: Upper Hinge
- 2: Door Gasket
- 3: Shelves
- 4: Partitions
- 5: Door Gasket
- 6: Display Shelves
- 7: Adjustable feet

• OPERATION



- To unlock settings for the upper section give one short press on the  symbol.
- To unlock settings for the lower section give one long press on the  symbol (2 seconds).
- To turn the light on and off press give one short press on the  symbol for on and again to turn off.
- The light in the unit will turn off automatically after 10 minutes if the unit is not used.
- To switch between Celsius and Fahrenheit press on the  symbol for 2 seconds.
- Use the  symbol to increase the temperature setting in either the top or bottom compartments.
- Use the  symbol to lower the temperature setting in either the top or bottom compartments.
- When you have set the desired temperatures leave the keypad for 20 seconds and it will lock and retain those settings.
- The light and temperature setting button will work as normal.
- To unlock the keypad press the  symbol again.
- Temperature in the upper section can range from lowest 5°C/41°F to maximum 18°C/64°F.
- Temperature in the lower section can range from lowest 5°C/41°F to maximum 18°C/64°F.
- Upper and lower sections operate independently of each other.

• MAINTENANCE

- Remove the power plug from the supply when performing cleaning or maintenance.
- **DO NOT** use abrasive or chemical cleaning materials on any surface of the unit.
- Wipe interior and exterior surfaces with a damp cloth and dry thoroughly with a clean dry cloth.
- For more soiled surfaces use a neutral detergent, wipe down with a clean damp cloth and dry thoroughly with a clean dry cloth.

Troubleshooting

Symptom	Solution
Unit does not operate.	Not plugged in. Fuse/circuit breaker failure.
Turns on and off frequently. Poor cooling.	Room temperature higher than normal. Door opened too often. Door not properly closed. Temperature control incorrectly set. Door gasket not sealing. Not enough space around unit.
Vibrations	Check to assure unit is level.
Noisy unit	Contraction/expansion of panels. Unit not level. Check fan operation. Check heat pump.
Door will not close properly	Unit not level. Gasket distorted. Internals out of position.



Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Dellonda Limited, Sole UK Distributor of Baridi

Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757575



support@dellonda.co.uk



www.dellonda.co.uk