 




---

**Dellonda 2000W Outdoor/Patio/Garden  
Infrared Heater, Speakers for Music -  
Black**

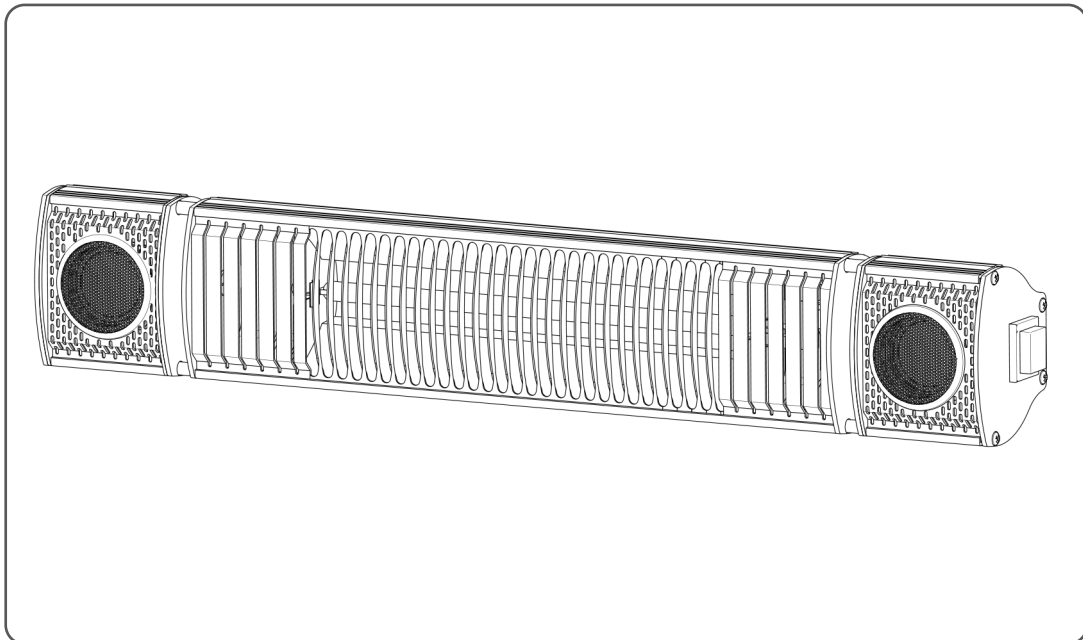

**Model No. DG125**

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

## Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to  
instruction  
manual



Electrical shock  
hazard



 
Hot surfaces



**DO NOT** cover

## Electrical Safety

- **WARNING!** It is the responsibility of the owner and the operator to read, understand and comply with the following:
- You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (**RCCB**) should be incorporated in the main distribution board. You must also read and understand the following instructions concerning electrical safety.
- Ensure that cables are always protected against short circuit and overload.
- Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none are loose.
- **IMPORTANT:** Ensure that the voltage marked on the appliance matches the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating at right.
- **DO NOT** use worn or damaged cables, plugs or connectors. Have any faulty item repaired or replaced immediately by a competent electrician.
- This product is fitted with a **BS1363/A** 13 Amp 3 pin plug. If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Replace a damaged plug with a **BS1363/A** 13 amp 3 pin plug.
- If in doubt contact a qualified electrician.
- Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
- Dellonda recommend that repairs are carried out by a qualified electrician.
- Fit a new plug according to the following instructions (**UK** only).
  - a) Connect the **GREEN/YELLOW** earth wire to the earth terminal 'E'.
  - b) Connect the **BROWN** live wire to the live terminal 'L'.
  - c) Connect the **BLUE** neutral wire to the neutral terminal 'N'.

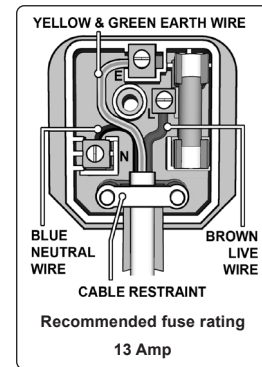

## General Safety

- **WARNING!** This product is for outdoor use only!
- **WARNING!** Ensure the heater is at least 1m from any object, 500mm from the ceiling and 2400mm from floor level.
- **WARNING!** This heater is not equipped with a device to control the room temperature. **Do not** use this heater in small spaces when they are occupied by persons not capable of leaving the area on their own, unless constant supervision is provided.
- **WARNING!** If a fuse blows, ensure it is replaced with an identical fuse type and rating.
- **WARNING!** Never touch the element directly with fingers. Use a soft cloth, otherwise the tube may get damaged.
- **WARNING!** In order to avoid overheating, do not cover the heater.
- Familiarise yourself with the applications and limitations of the heater.
- Ensure the heater is in good condition before use. If in any doubt do not use the unit and contact your supplier.
- Only use recommended attachments and parts. Using unauthorised parts may be dangerous and will invalidate your warranty.
- Check that element guards are in place, undamaged and firmly attached.
- Keep curtains, furnishings or any combustible material well away from the heater or its installation location.
- Keep children and unauthorised persons away from the heater, as it gets very hot.
- Disconnect from mains and allow to cool before moving or attempting any cleaning or maintenance.
- **DO NOT USE WITH AN EXTENSION CABLE.**
- **DO NOT** use this heater with timers or other devices which switch the heater on automatically.
- **DO NOT** immerse the heater in water.
- **DO NOT** locate the heater below the power outlet.
- **DO NOT** move the heater whilst in operation or even when still warm.
- **DO NOT** use the heater to perform a task for which it has not been designed.
- **DO NOT** use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **NOTE:** Two dark points may exist on the surface of the heating element, or the surface of the heating element may turn white during the first few minutes of operation. This is normal and will not affect the performance of the heater.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- **NOTE:** Children of less than 3 years should be kept away unless supervised continuously. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- **NOTE:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## About the Product

 
This Dellonda infrared heater with wireless speakers is perfect for socialising with family and friends whatever the season. A totally dry heat, no condensation, no gas, no fumes and no smell. Plays your favourite music easily from your smart phone or tablet by wireless technology, controlled by push-on/off switch or via remote control (batteries not included). Ideal for domestic and commercial settings. Outdoor use only (IPX5). Mounting brackets and fixings included.

### • SPECIFICATION

- **Model no:** ..... **DG125**
- **Product Dimensions (WxDxH):** ..... 755 x 130 x 110mm
- **Speaker Output:** ..... **RMS: 6W**
- **Power:** ..... 2000W
- **Supply:** ..... 230V
- **Cable Length:** ..... 1.5m
- **IP Rating:** ..... **IPX5**

### Installation

- A wall mounting bracket is provided with the heater which has been specifically designed to allow this product to be fitted to a wall or ceiling.
- Before drilling for the bracket check that the wall is solid and that there are no hidden water pipes or electric wires. The heater must be installed no less than 500 mm from side walls and no less than 2400 mm off the floor (Fig. 1)
- **WARNING!** Ensure that the supply cable is well positioned and will not come into contact with the reflector of the heater or that it does not trail into the heated area, the supply cable can be fixed to the wall mounting bracket behind heater with cable ties and then run flush along the wall.
- The heater must be installed at least 2.4m above the floor.

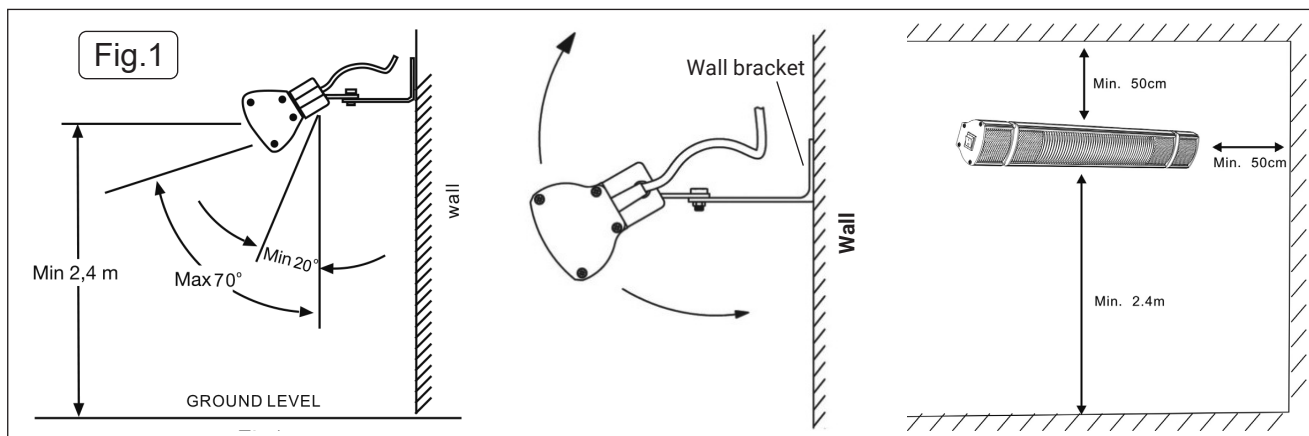

### Operation

#### • REMOTE CONTROL

 
- **NOTE:** It may be possible to control several heaters with one remote.
- **INSERTING BATTERIES (NOT INCLUDED)**
- Insert 2 AAA/ Alkaline type batteries into your remote control.
- Turn to the backside of your remote control and pull out battery cover. Insert the batteries in accordance with the instructions and polarity of the batteries.
- Push the battery cover into place after changing the batteries.
- **DO NOT** use an extension cable.
- The Heater and wireless speakers can be operated independently of each other using the remote control.
- The unit must be connected to a mains power source and be switched on (Fig. 2).

#### • HEATER ON/OFF

- **TURN ON** the power to the unit on the end of the heater unit (Fig. 2), then use the remote control to control the unit (Fig.3).
- **TURN ON** the heater by pressing the red **HEAT** button.
- **TURN OFF** the heater by pressing the red **HEAT** button.


#### • WIRELESS SPEAKERS ON/OFF

- **TURN ON** the power at the end of the heater unit (Fig. 2), then use the remote control to control the unit (Fig.3).
- **TURN ON** wireless connectivity by pressing the **Bluetooth** button the speakers will sound.
- Pair the wireless speakers to your device as you would via the menu on your device.
- The speaker name will appear as **"XFW-M38"** when connecting/pairing in your device menu.
- **TURN OFF** wireless connection by pressing the **Bluetooth** button.

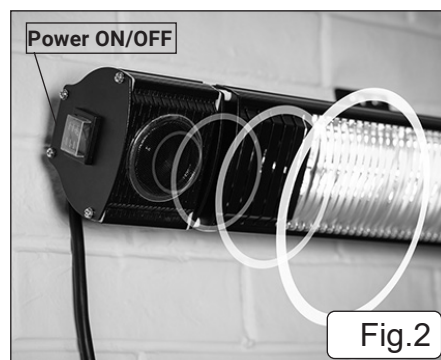

## Maintenance

 - **WARNING!** Disconnect from the mains power supply before undertaking any cleaning or maintenance
  - Regular and careful cleaning helps your infrared heater operate efficiently. To clean your heater follow steps below. Unplug from the mains for your safety before cleaning the appliance.
  - Make sure the heater is cool before continuing.
  - To keep the heater clean, the outer shell maybe cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
  - **WARNING! DO NOT** let liquids enter the heater.
  - **DO NOT** use alcohol, gasoline, abrasive powders, furniture polish or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
  - **DO NOT** immerse the heater in water.
  - Wait until the heater is completely dry before use.
- 
- **CHANGING THE HEATING ELEMENT**
  - Ensure you have plenty of space to work and a clean flat surface, cover the surface with a sheet of card or cloth to ensure the unit is not damaged as you work on it.
  - 1) Unscrew the 4 screws in either end plate (do not remove) and leave them loose in the units to keep the components aligned.
  - 2) Tilt the two loose speaker units back gently to gain access to the front grill sections in the main heater unit.
  - 3) Slide out the two black slotted end grills sections to gain access to the heater element connectors.
  - 4) Slide out the main front heater grill (if the grill slides out easily move to No 9 and resume, if not carry onto No 5). Try not to force the grill as it may deform if too much force is used.
  - 5) Using a crosshead screw driver remove the screw holding the earth ring straps at the back of both ends of the main section.
  - 6) Remove the two screws retaining the end reflectors supporting the heating element.
  - 7) Using a small flat bladed screwdriver open up the bent over retaining tabs to 90° on the element retainers in the reflector end panels and remove these tabs.
  - 8) Open the insulating cover for the heater element connections, disconnect the spade connectors.
  - 9) Either slide the heating element out of the slots in the reflector ends towards you out of the unit or slide the heating element out from one end of the reflector housing, **DO NOT** handle the heating element when hot always use clean gloves as bare hands will leave marks on the element which will burn into the surface and affect the lifespan (Fig. 4).
  - 10) Using a dry cloth wipe the reflector clean and begin reassembly.
  - Follow the sequence detailed above in reverse (9-1) to install a new heating element and re-assemble the unit.

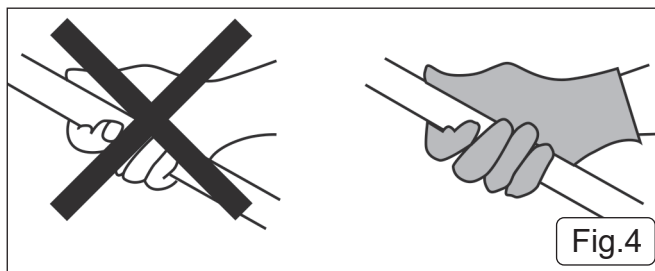

## Troubleshooting

- If heater will not turn on. Check the cable is plugged into an electrical outlet, if not, plug in.
- Check if electricity to the building is working.
- Bulb is lit, but no heat: Bulb is damaged. Contact your supplier to source a replacement.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.



### Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations.

It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

## Dellonda Limited

Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757575

support@dellonda.co.uk

www.dellonda.co.uk