



***Le Griddle Electric Manual  
GEE40 - GEE75***

# ***Instructions Manual***

Dear Customer,

Thank you for purchasing this Le Griddle product. It is very easy to use, but we strongly recommend that you carefully read these instructions which include advice on how to use and install your appliance in order to obtain optimum and safe results.

## **Reception and unpacking**

Should you notice any damage when unpacking, please contact your retailer.

## **General rules applicable to electric equipment**

### **WARNING:**

- 1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.**

#### **CALIFORNIA PROPOSITION 65 WARNING**

The burning of gas cooking fuel generates some by-products, which are on the list of substances, which are known by the State of California to cause cancer or reproductive harm. California law requires businesses to warn customers of potential exposure to such substances. To minimize exposure to these substances, always operate the unit according to the use and care manual, ensuring you provide good ventilation when cooking.

### **When using electric appliances, safety measures must always be taken: Please read all the instructions carefully.**

This appliance is not designed for use by people (including children) whose physical, sensorial or mental capacities are impaired or by people with no experience or knowledge, unless they have been supervised or given training in the use of the appliance beforehand by a person responsible for their safety.

Some parts can be hot, keep the children away from the Griddle. The appliance must never be left without supervision during use.

Do not move the appliance during operation.

Do not use the appliance for anything other than the purpose which is described.

There is a risk of accidents if accessories used are not recommended by the manufacturer of the appliance.

This appliance must be kept away from flammable materials.

Use protective gloves when handling particularly hot parts of the appliance.

Allow the appliance to cool down before handling or cleaning.

The underneath of the appliance must be kept well ventilated to ensure good air circulation.

Place the appliance on a stable, dry surface, slightly away from the edge and more than 8in (20cm) away from any walls or heat-sensitive objects.

Recommended hot plate height: 33 to 37in (85 to 95cm) from the ground for a comfortable working position.

Any modification of the appliance may be dangerous. Please do not modify.

Do not obstruct the ventilation openings on the frame.

Warning: Do not use or store any flammable liquids or vapors in the vicinity of the Griddle.

Store the appliance in a dry place.

We recommend you to keep the original packaging in order to store the appliance.

The appliance must be connected to a power outlet with an earth contact.

The appliance must be powered by means of a residual current device with a rated residual operating current of 120 volts (30mA) or below.

We recommend that you inspect the power cable regularly for any sign of damage.

To guard against electric shocks, do not immerse the wire, connector or body of the appliance in water or any other liquid. Do not handle with wet hands or use in rain.

Do not leave the wire hanging from a table or counter.

Do not place the appliance and its wire on or near a surface which is likely to become hot (cooking plate, gas burner, oven, etc.).

Do not obstruct the ventilation holes in the bottom plate under the frame.

Do not obstruct the frame's ventilation inlets.

Do not clean the appliance with a high- or low-pressure water spray.

Do not connect or use an appliance with a damaged lead or plug. If the power supply cable is damaged it must be replaced by the distributor, its after-sales service or qualified persons to avoid any danger.

In the event of a failure, inspection and repairs must be performed by an approved technician. Any maintenance operations must be performed by an approved technician.

The appliance is not intended to be operated using an external timer or a separate remote-control system.

When installing this appliance observe all local codes and ordinances. If no local codes are valid, wire unit in agreement with the latest Nation Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.1, whichever is valid.

When not in use and before cleaning unplug your appliance from the outlet.

Never disconnect the grounding plug or use with an adapter of 2 prongs.

**KEEP THESE INSTRUCTIONS**

Le Griddle cannot be held responsible for any damage incurred to objects or people resulting from incorrect installation or operation of the appliance.

## Technical description

### Characteristics

- 304 Stainless steel frame
- 304 Stainless steel cooking plate certified for contact with food
- Heating zone - 1800W
- Adjustable thermostats 0 to 100% of temperature
- Safety thermal cut
- Removable tray for liquid and waste recovery
- Outdoor and indoor use

Reference	Size WxDxH	Weight	Power	Cooking surface	Cooking material	Plug
GEE40	16 1/2" x 18 3/4" x 10"	50 lbs	1 x 1800 WATTS	16" x 15"3/4	304 Stainless Steel	3 Prong Grounded plug 120V 16A 60Hz
GEE75	30 x 18 3/4 x 10"	100 lbs	2 x 1800 WATTS	29 3/8" x 15"3/4	304 Stainless Steel	3 Prong Grounded plug 120V 16A 60Hz

## Operation

### Installation

Install the Griddle on a flat surface coated with an inflammable material (tiles, fire brick, etc.). The distance between the Griddle and the adjacent walls must be at least 2ft (2m).

**IMPORTANT MUST BE USED WITH A GFCI EQUIPPED OUTLET OR CIRCUIT, THE DEVICE IS DELIVERED WITH A THREE PRONG GROUNDED PLUG.**

### POWERING ON

Connect the device to the nearest power source (see technical specifications of the appliance).

Push power button On, turn the Power control knob.

### EXTINCTION

Turn the power control knob to zero, push the power button OFF and disconnect the appliance. Ensure unit is completely cooled before storing.

# Use

## COOKING

Choose the cooking temperature according to the food. Preheat the device for 10 minutes by setting the selected temperature.

If necessary, coat the plate evenly with cooking oil using a pad or brush. Place the food on the plate and cook according to your taste.

With time, you will come to learn the most suitable temperatures for the items to be cooked according to their thickness, texture and your personal tastes.

## Cleaning and maintenance

Before cleaning operation unplug the device

### The frame

To avoid any risk of burns, you are advised to always allow the hot plate to cool down before cleaning the frame. Clean with a sponge soaked in warm water and detergent. Never use abrasives or steel wire brushes.

### The hot plate

The plate is easier to clean when the Griddle is still slightly warm. Beware of the risk of burns.

The stainless-steel plate on the Griddle is shiny before use. The surface is likely to become dull and scratched once utensils have been used. After a while, the scratches will fade and the plate will have a brushed, weathered look.

After the appliance has been used several times, grease residues may appear on the hot plate; this is perfectly normal.

To remove these, pour a glass of cold water or place ice cubes on the hot plate and scrape off residue with a spatula or scraper.

During use, these residues may become detached by themselves; this does not mean that the hot plate has been damaged.

With a rigid spatula, remove most of the sticky residue on the hot plate by pushing it towards the drip tray.

Then pour a small amount of water on the hot plate to soak the remaining residue (use a wet sponge or ice cubes).

Leave for a few minutes.

With a rigid spatula, remove the water and sticky residue and push it towards the drip tray. Clean with a scouring pad and then a soft sponge.

Pour some vinegar on the plate to remove smells and strong tastes.

Clean the plate promptly after preparing salty food to avoid any risk of corrosion. **Do not use chlorine-based cleaning products as they can also cause corrosion.**

## **Exterior -**

Stainless steel surfaces will change color when exposed to temperatures produced by the grilling process. The stainless steel will alter color from silver to brown and blue. You can remove this by using stainless steel cleaner.

Use grill cleaner to remove grease and dirt clean your appliance. Always wipe with the grain. Next, to restore the stainless-steel color use stainless steel cleaner. Finish by using polish wipes to wipe your appliance down.

If your appliance is installed near a seaside (salt air) or poolside (chlorine) site, it will be more prone to corrosion and must be maintained/cleaned more often. Do not stock chemicals (such as chlorine or fertilizer) close to your appliance.

Surface iron oxide deposits may appear due to the nature of stainless steel. Do not be worried- these deposits are removable with stainless steel cleaner through quick and periodic maintains. If not attended to quickly, permanent pitting may occur.

By following these recommendations, you will enjoy your appliance for many years to come.

To protect your appliance from the weather, use an optional cover when not in use. (Allow to cool before covering.)

For cooking and cleaning videos and tips, go to [LeGriddleUS.com](http://LeGriddleUS.com)


## BUILT IN:

The bottom of the appliance must be kept well ventilated to ensure good air circulation under the Le Griddle.

Place the appliance on a stable, dry surface, slightly away from the edge and more than 2ft (2m) away from any walls or heat-sensitive objects (Plastic, Wood, ....)

Recommended Le Griddle height: 33 to 37in (85 to 95cm) from the ground for a comfortable working position

Do not build into a combustible cabinet.

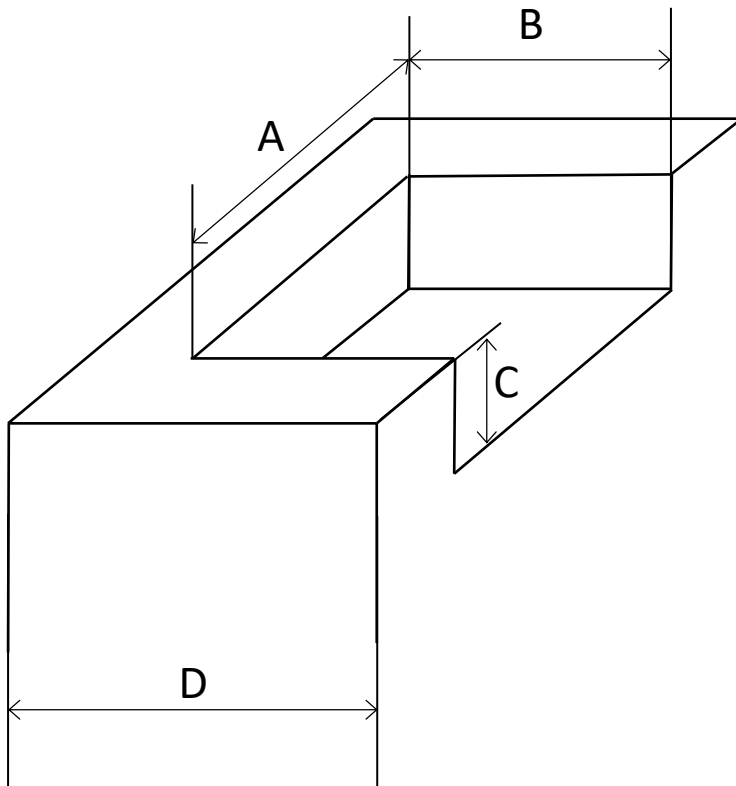

	GEE40	GEE75
A	14" 3/4	28" 3/4
B	16" 3/4	16" 3/4
C	5" 3/4	5" 3/4
D	24" Minimum	24" Minimum

# Guarantee and after-sales service

This appliance is guaranteed for:

- Lifetime against perforation of stainless steel
- 1 year for all parts

The warranty starts from the date of purchase.

We take great care to ensure that each of our appliances reaches the user in perfect operating condition. If you do find a problem when unpacking your appliance, please report it to the retailer within 48 hours, or contact us by email below.

If you notice that the appliance is not working properly during the guarantee period, please contact your retailer.

The following are not covered by the guarantee:

1. Normal wear of the product that does not affect operation of the appliance (scratches, impacts, change of color, etc.).
2. The presence of rust, cracks, or other deformation of cast iron radiators, not detrimental of Griddle utilization.
3. Damage caused by abnormal events or use, modification of the product or not following the instructions for use (in particular, the use of chlorine-based cleaning products).
4. Damage resulting from professional, industrial or collective use.
5. Damage resulting from a fall or impact.

Please do not hesitate to contact us should you have any suggestions at [cs@legriddleus.com](mailto:cs@legriddleus.com).