

## User manual

# Reuss OD-02 'Germanium Dirt'

**Rich and complex sounding distortion pedal with solid lows. The Reuss Germanium Dirt offers a new and different take on the classic distortion pedal. Gritty, grainy, fuzzy and blissfully noisy**

### Controls

- 'LEVEL' is the level control. Turning it clockwise increases the output level of the pedal
- 'DIRT' is the distortion control. Turn it clockwise for an increasing amount of dirt.
- 'TONE' is the tone control. Turning it clockwise will bleed off more high-end, but it will never muffle your tone completely.

### Switches

- The footswitch turns the effect on and off, indicated by the red LED

### Connectors

- 'IN' is the input of the pedal. Connect your instrument here. The Germanium Dirt is great with both guitar and bass.
- 'OUT' is the output
- There is a 9V DC connector for an external power supply at the right side of the pedal. This is a standard guitar pedal 'negative centre'-type jack. ONLY use this type. Reversing the polarity can damage the pedal. The pedal can also run on a 9V battery (not included)

*Please note: The pedal is drawing power from the battery, when there is a jack in the input connector. Always remove the input jack when the pedal is not in use, if you are running it with a battery*

### Features and Specifications

- Distortion pedal with expanded low-end response and a rich, complex and gritty sound texture
- Vintage new old stock LM308H metal can IC and four vintage 1969 US made germanium diodes (rare and expensive parts)
- 100% handmade in the European Union
- True bypass switching
- Silk screen printed aluminium enclosure in a gloss seafoam pearl finish
- High quality Neutrik jacks, wired by hand
- Mammoth Electronics 'pro' upgrade footswitch (good for at least 15000 stomps - the standard blue footswitches that you see in most 'boutique' pedals is only rated for 6000 stomps)
- Red LED
- 24 months warranty against manufacturing faults
- Powered by a 9V battery (not included) or a standard 'Boss-type' guitar pedal power supply



### Battery access

Remove the four screws at the bottom side of the pedal with a philips head screwdriver to remove the bottom plate and gain access to the battery

### Warranty

All Reuss pedals comes with a limited 24 months warranty against manufacturing faults. The warranty is not covering normal wear and tear or abuse

Circuit and design copyright 2017  
Reuss Musical Instruments / Good Guy's Media & Music  
DK-2860 Søborg, Denmark