

Programming Mini Controller / Master Card



Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New 6-Digit Master Code) # Repeat New 6-Digit (Master Code) #
3. Exit Program Mode	*

Master Card Usage

Using Master Card to add and delete users	
Add Card/PIN Users	1. Input (Master Card) 2. Input (Card) or (PIN) Repeat step 1 for additional users 3. Input (Master Card) again
Delete Card/PIN Users	1. Input (Master Card) TWICE within 5 seconds 2. Input (Card) or (PIN) Repeat step 1 for additional users 3. Input (Master Card) again