

TWIN TOWER PARTY SPEAKER



MODEL: LG1220

INSTRUCTION MANUAL



Accessories

Speaker unit	x2
Instruction manual	x1
Remote control	x1
Power cable	x1
Wireless microphone	x2
Line-in cable	x1

PRECISIONAUDIO.COM.AU

Safety Information

 
Please read this manual carefully before using the product. Keep in a safe place for future reference.

- a. There are high voltage zones inside this unit that can cause injuries.
Please do not open the unit. In case of technical failure, please contact the authorised service centre.
- b. Never place the unit in the rain or in moist zones so as to avoid a fire or electric shock.
- c. If technical maintenance is required, please contact the authorised service centre.
- d. If the power cable is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

Caution


- a. Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets
- b. Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays. Use only a soft, damp cloth.
- c. To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for an extended period of time.
- d. Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid on the speaker.

Top panel operation

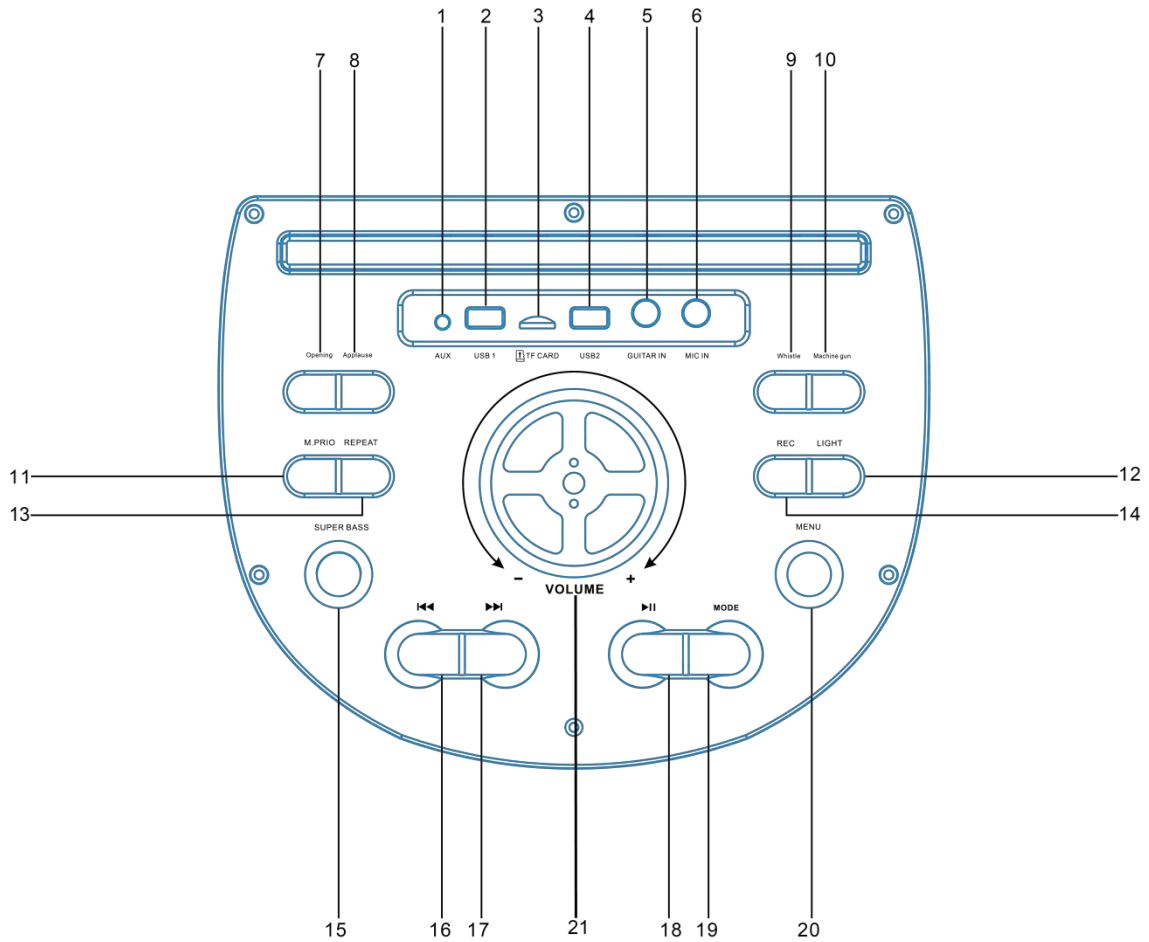

- | | |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. AUX input | 14. Record |
| 2. USB-1 input | 15. Super bass |
| 3. TF card input | 16. Previous song |
| 4. USB-2 input | 17. Next song |
| 5. Guitar input | 18. Pause & play |
| 6. Microphone input | 19. MODE: AUX in, USB, TF card, FM, Bluetooth
Optical, Coaxial |
| 7. Sound effect (opening) | 20. MENU: (control Bass / Treble / Microphone
Volume / Echo / Microphone delay /
Microphone Bass / Microphone Treble /
Guitar volume) |
| 8. Sound effect (applause) | 21. Main volume (increase or decrease) |
| 9. Sound effect (whistle) | |
| 10. Sound effect (machine gun) | |
| 11. Microphone priority | |
| 12. Light mode | |
| 13. Repeat | |

 Back panel operation

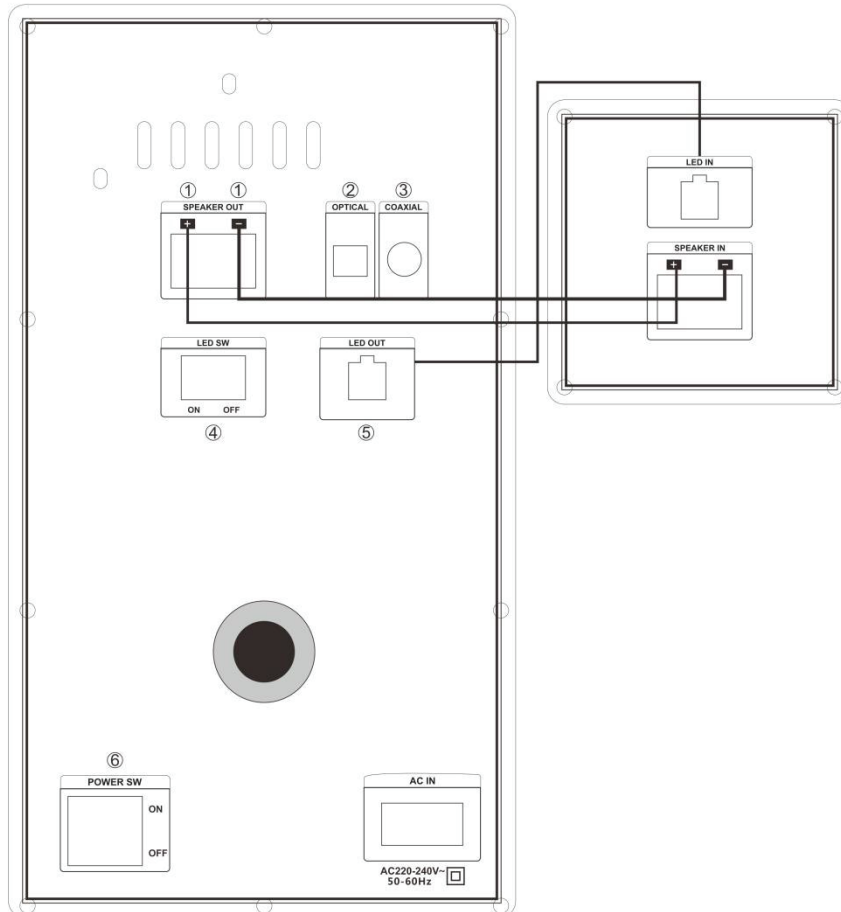

1. Speaker output: to connect with passive speaker "Speaker In" (red is +, black is -)
2. Optical input
3. Coaxial input
4. LED power on/off
5. LED output: to connect with passive speaker "LED In"
6. Power on / off

Remote control

1. Standby

2. Record function

Under USB / TF card mode, short press to record
long press to delete recording.

3. Previous song

4. Pause & play

Short press to play / pause and press once to scan
all stations and store automatically in FM mode.

5. Repeat function

6. Number function

7. Mode button

Short press to skip to BT / AUX In / USB / TF card /
FM / Optical / Coaxial mode

8. Record play

9. Main volume +

Press to increase the main volume

10. Next song

 
Short press for next sound, long press to remove vocal
(remove singer's voice, only keep background music), resume vocal

11. Main volume -

Press to decrease the main volume




12. EQ function

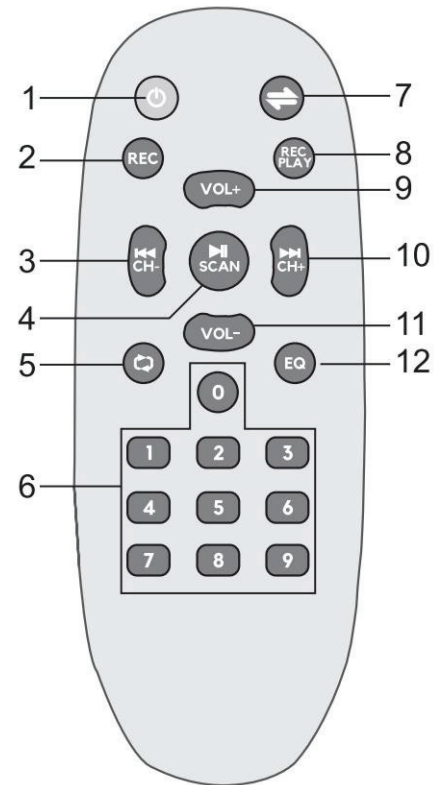Press to switch between the different EQ settings



Bluetooth pairing mode

Press the **MODE** button on the unit or on the remote control until Bluetooth is selected.

1. Place phone within 10m of speaker
2. Within the Bluetooth settings on the phone, search for nearby devices
3. From the found devices list select **LG-1220**
4. Short press the Play / Pause button  to play music. Short press  or  to select previous or next track.

AUX in / Optical / Coaxial mode

Press the **MODE** button on the unit or on the remote control until AUX in / Optical / Coaxial is selected.

Play the music of the device connected to the Line In / Optical / Coaxial

USB / TF card mode

Press the **MODE** button on the unit or on the remote control until USB / TF card is selected OR insert USB or TF card. The unit will automatically read and play music from the drive.

1. Short press the Play / Pause button  to play music. Short press  or  to select previous or next track.

FM radio mode

Press the **MODE** button on the unit or on the remote control until FM radio is selected.

Press the play button to activate the automatic memorisation (the tuner searches for stations available and memorises automatically)

The number of memorised stations depends on the reception in your area.

Use the   buttons to listen to memorised stations.

To select a memorised station directly, press the corresponding number key on the remote control.