


## Tiverton Gazebo Replacement Canopy

style # C-SA-585

dpci # 242-13-7528

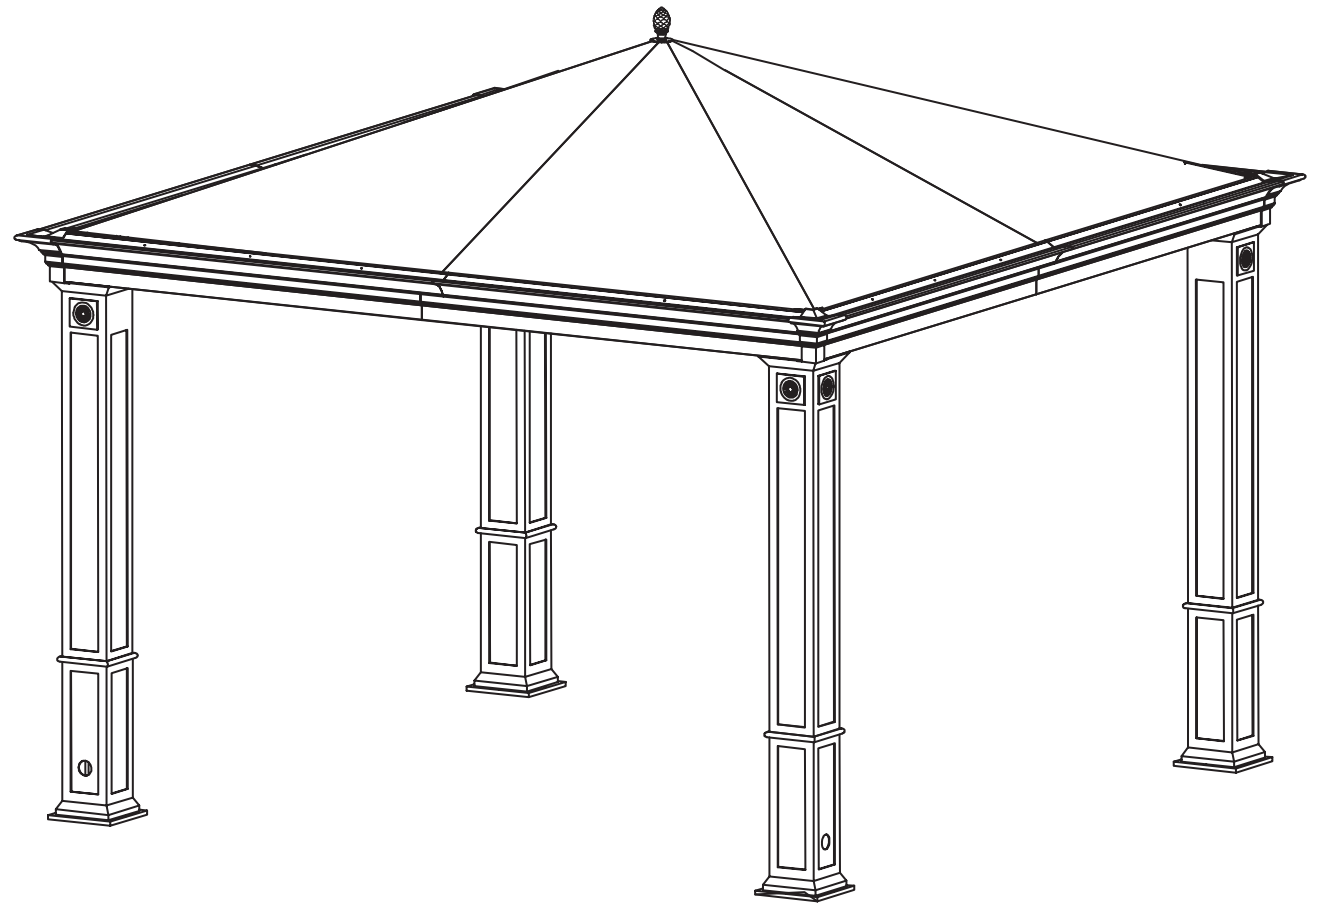

>> assembly instruction



Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you.

All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck-though we're confident you won't need it.

## before you begin

1. Check for damaged or missing parts. Call 1- 800-457-4652 to order missing supplies.
2. Use the carton as a working surface to prevent damage during assembly.
3. Gather all tools prior to assembly.

## KEEP ALL FLAME AND HEAT SOURCES AWAY FROM CANOPY FABRIC

**The canopy is made with flame-resistant fabric which meets CPAI-84 specifications. It is not fireproof. The canopy fabric will burn if left in continuous contact with flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective.**

### Care and maintenance

Wash with mild soap, rinse with water, and let air dry.

### Warranty

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your patio furniture provided your furniture is maintained with care and used only for personal, residential purposes.

**Cushion, Straps and/or Wicker Weaves** are covered for a period of one (1) year against defects in material or workmanship. Sling fabric is covered for a period of one (1) year against defects in material or workmanship.

**Exclusions:** Items used for commercial, contract or other non-residential purposes; display models; items purchased "as is;" or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered. Discoloration or fading of the finish or fabrics as a result of exposure to the elements, chemicals or spills is not covered. Tabletop breakage, corrosion or rusting of hardware and damages to frames or welds caused by improper assembly, misuse or natural causes are not covered.

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

# table of contents




introduction	2
parts list	4
assembly	5-8



**ITEM DESCRIPTION QUANTITY**

---


- A finial top  
(not included in this package ) 1
- B canopy 1

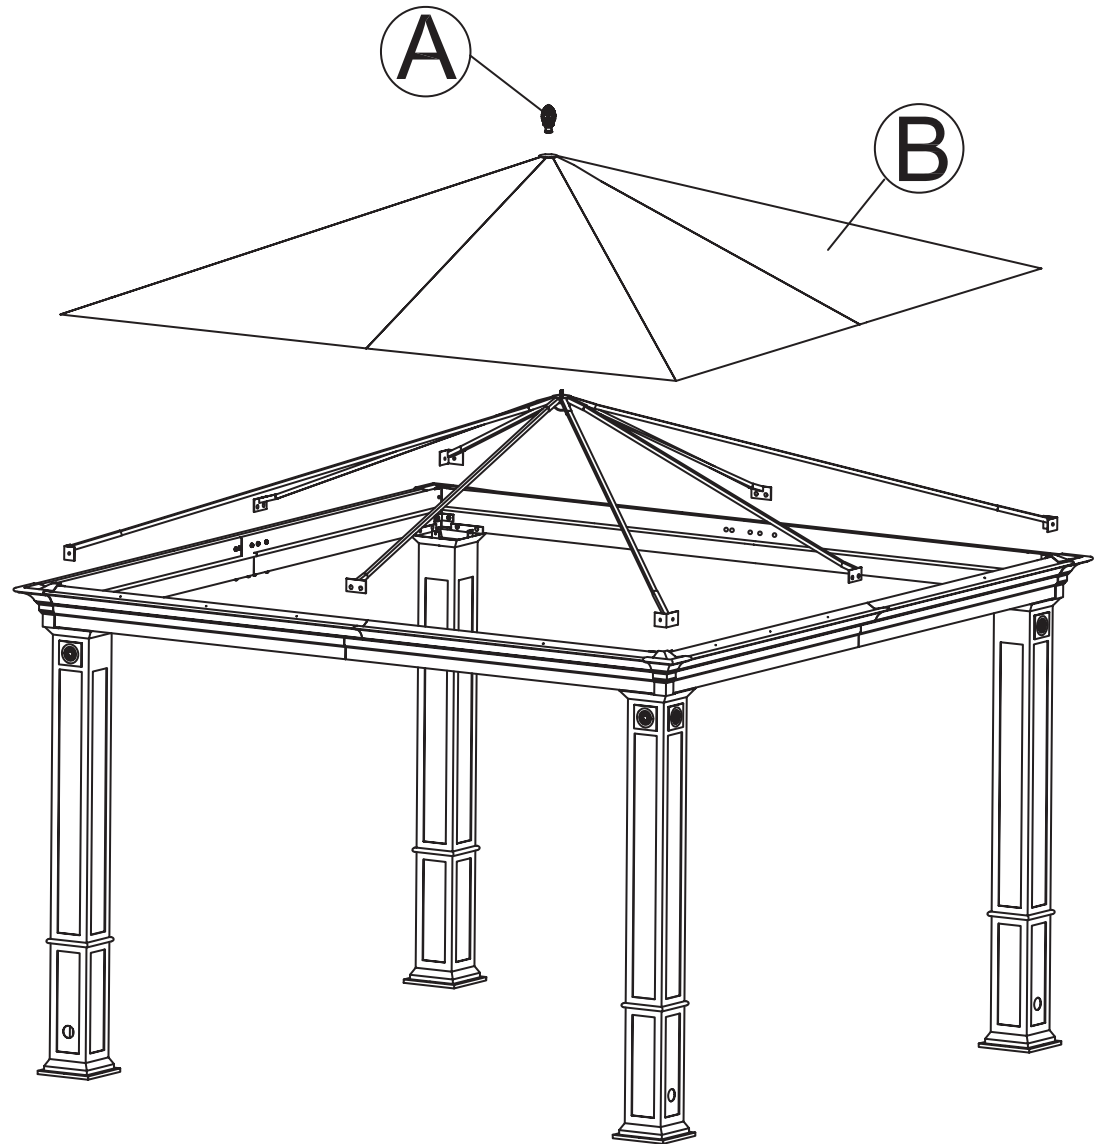

step 1.

---


## Process of removing gazebo canopy

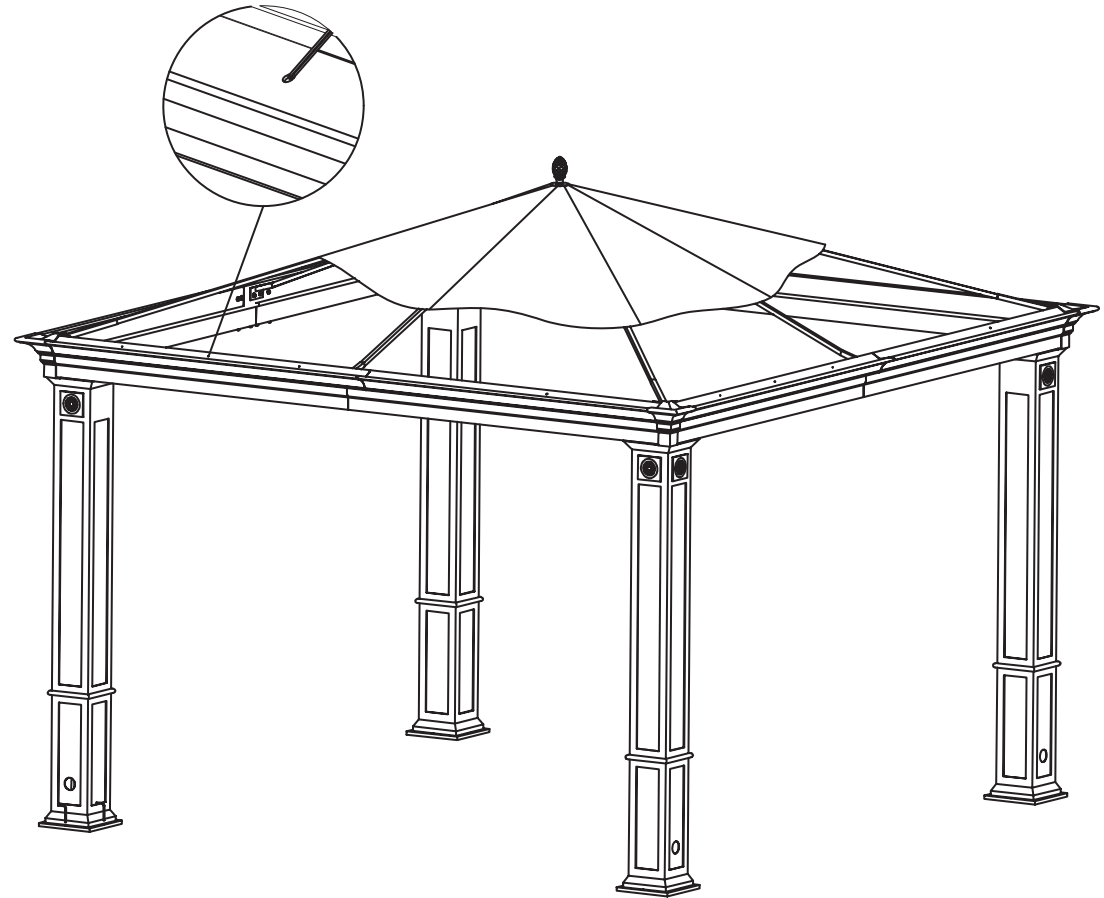

1. Draw the hooks out of the holes of the top frame crossbars, pull the canopy up.

## step 2.

---

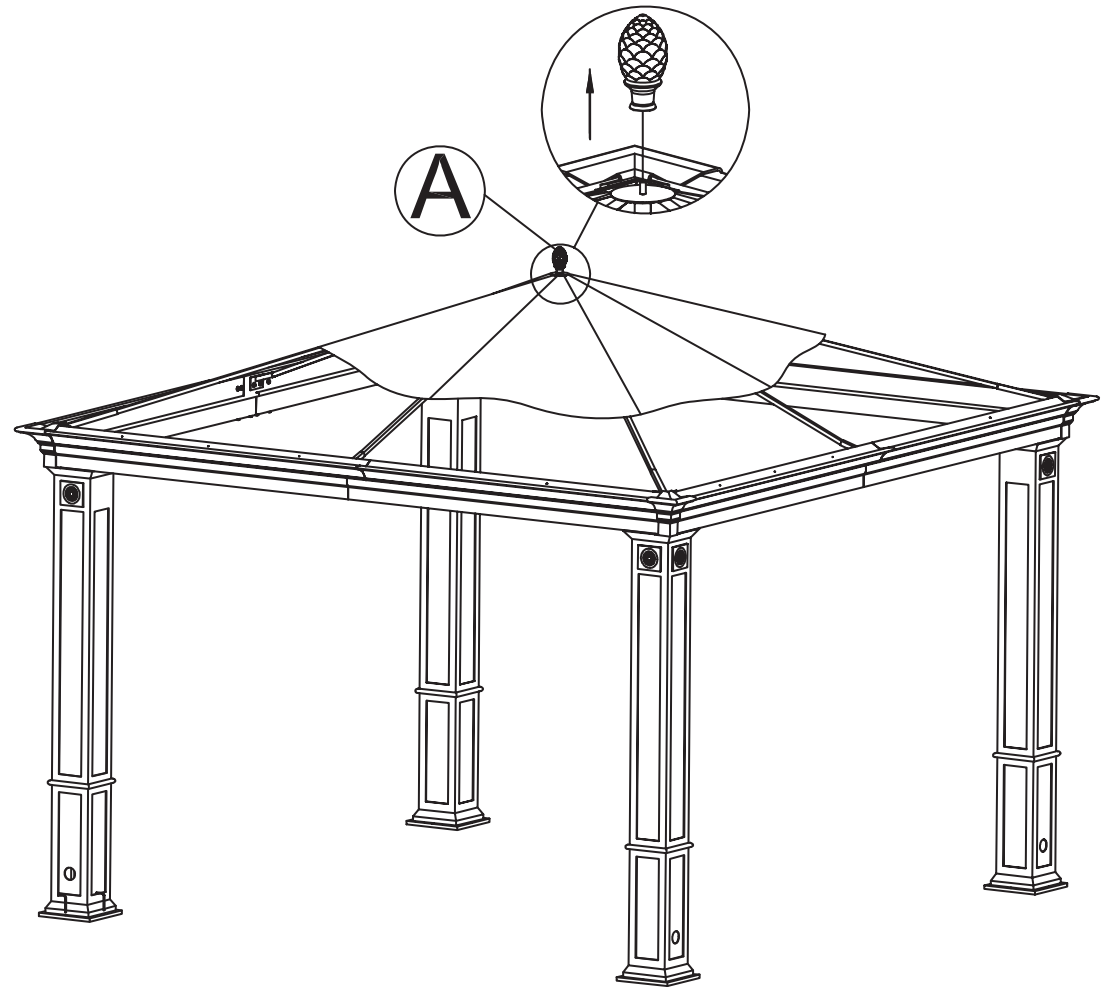


1. Remove the finial top (A) from the top of the canopy frame and remove the old canopy from the canopy frame.

## step 3.

---

### Process of replacing new gazebo canopy

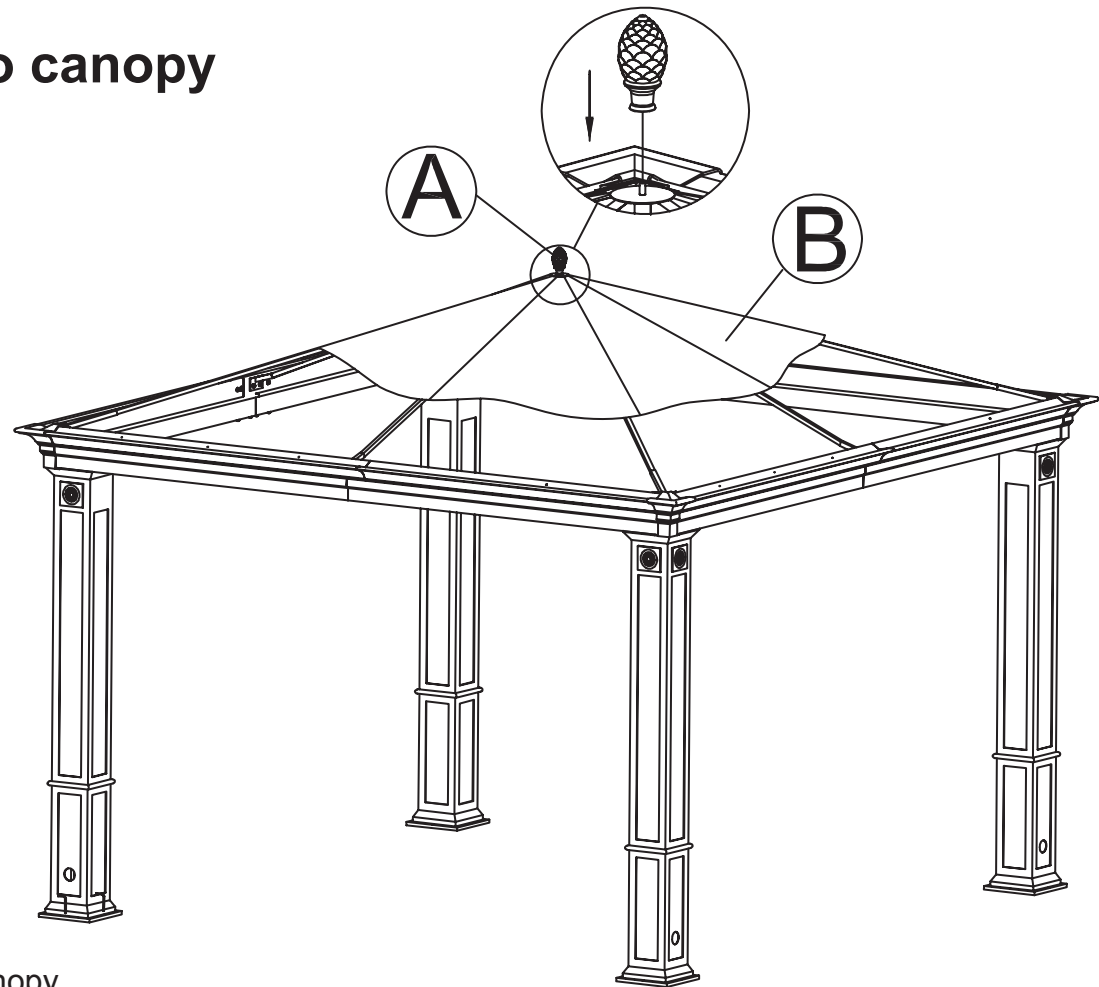


1. Inserting the canopy frame bars into the holes of the canopy.  
Place long side canopy fabric onto long side of canopy frame.  
Tighten the finial top (A) onto the top of the canopy.



## step 4.

---

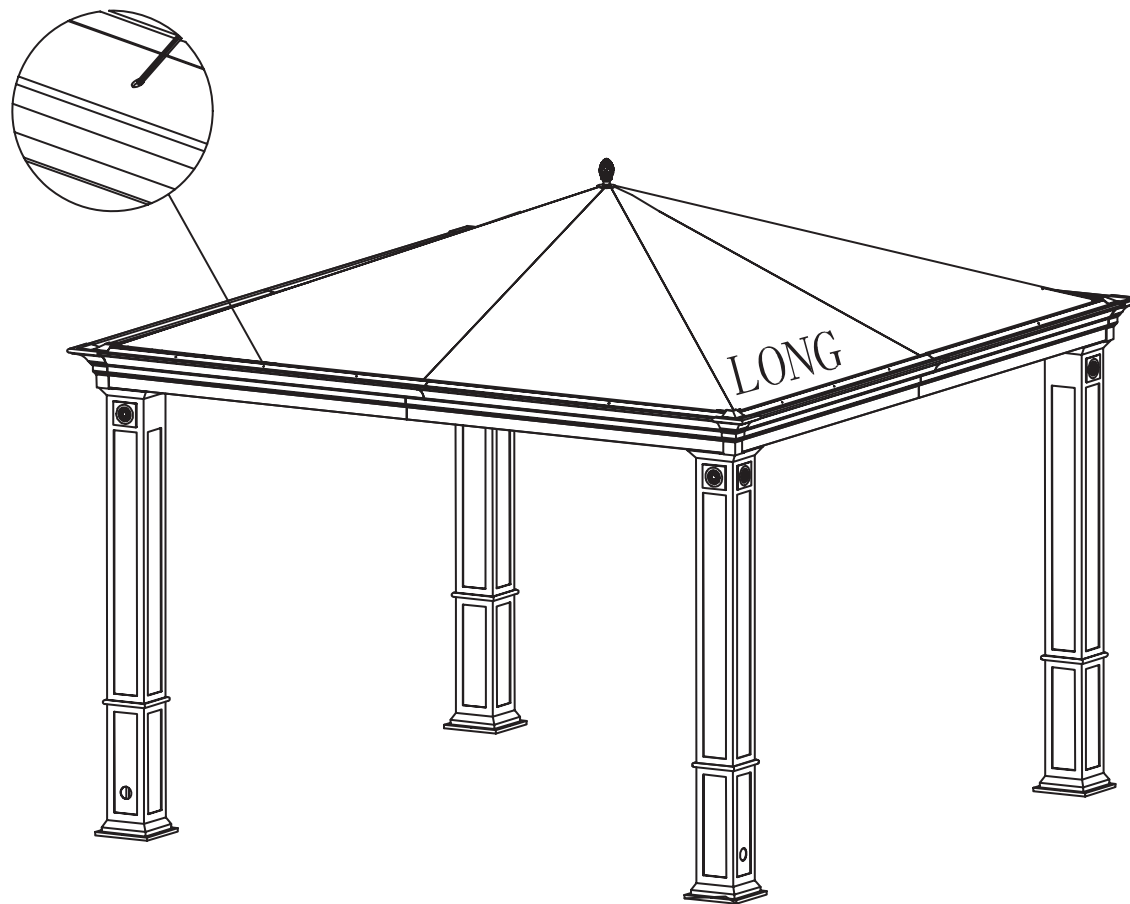

1. Hook the canopy on the holes of the top frame crossbars and neaten the canopy edges.

