



HANDLE ADJUSTMENT

Custom fitting your FREEHAND PRO to *your* hand is the only way to achieve optimal performance and benefit.


Your FREEHAND PRO should only be adjusted to fit a *single user-you*. Adjust only once. If more than one person will use the handle, adjust it to the larger hand.

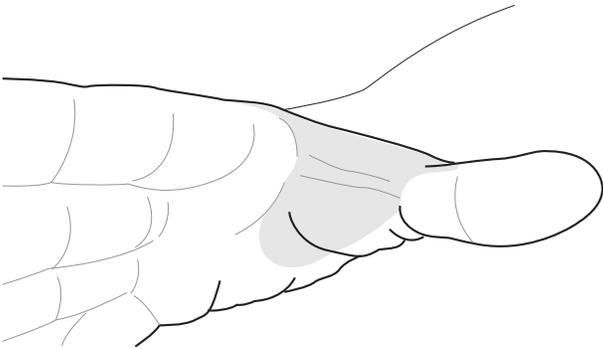


Handle rests on top of hand and should touch all shaded areas (above).

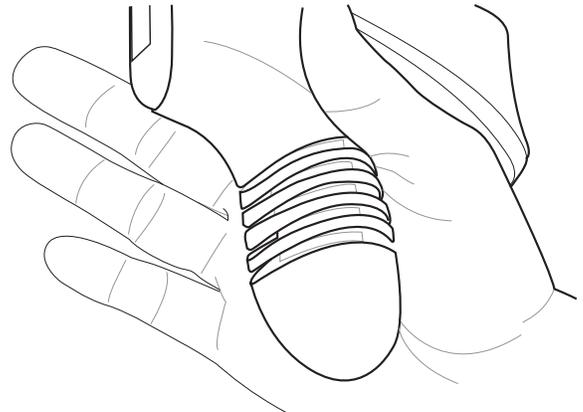


Proper Fit: Handle rests on top of hand. Seats into area between thumb and index finger without pinching, and rests in palm without wobbling when shaken lightly.

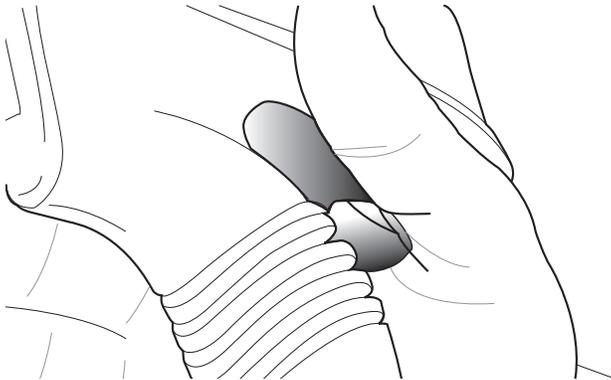



Too Tight: Shaded area of handle (above) should seat comfortably into shaded area of hand between thumb and index finger.

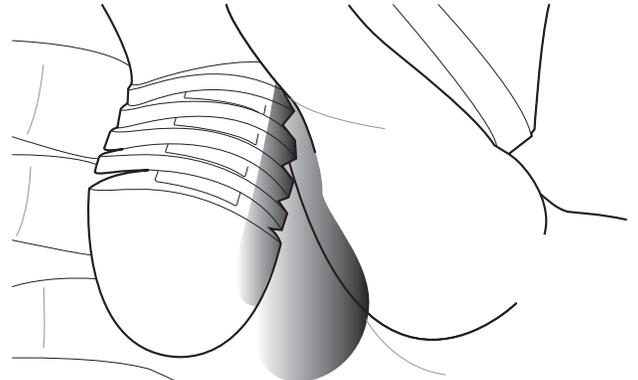

Too Loose: Shaded area on the handle (above) should rest in the shaded area in palm of hand.

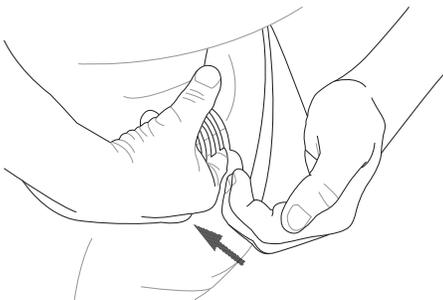

To widen handle, lock front end against your hip and grab with a clawed grip (above) and pull bottom of handle away from top as shown. This will take force. There is a high-strength aluminum rod running top to bottom that will bend. Test fit and repeat until proper fit is made.

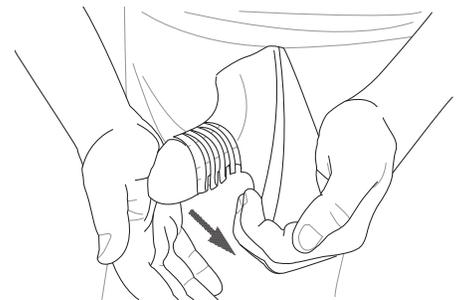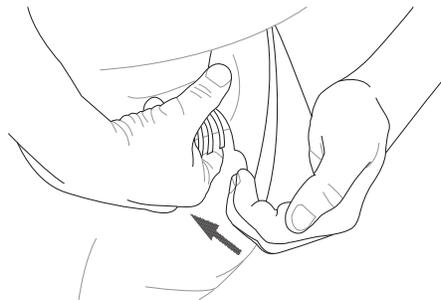

If handle is adjusted too wide, simply push bottom of handle back towards the top (like below). Repeat adjustment until proper fit is made.

IMPORTANT: Never attempt to bend sideways, as this can fracture housing.

PROPER USE AND BRUSH POSITION


In order to receive the maximum benefit from your FREEHAND PRO, it is important to understand its design intention and how to use it properly. First, don't think of your FREEHAND PRO as a handle to hold onto, think of it as a place to rest your hand. The FREEHAND PRO holds onto you, you don't hold onto it.

Your hand and fingers should be completely relaxed, while resting on the handle. Only use your fingers to lightly guide, when extra precision is required. Because the brush is elevated above your hand, you now have greater visibility. You will have greater control, cut cleaner lines and feel completely comfortable.



YES

Allow your fingers and hand to relax, without gripping

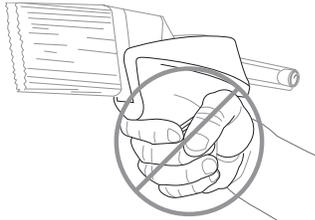


NO




YES

Proper brush position provides proper balance

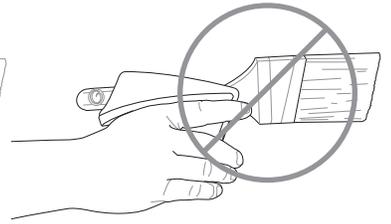


NO


REPLACING BRUSH-LOCK CARTRIDGES

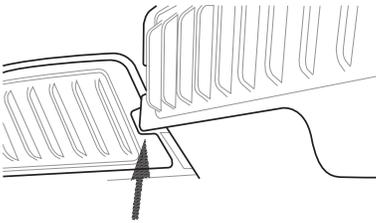

REMOVE CARTRIDGE: Use the pointed tip from loose cartridge to pop out existing cartridge. Little force is needed.

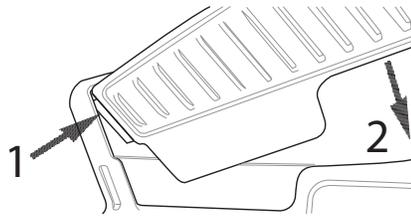

INSERT CARTRIDGE: Put tongue on front of cartridge under lip at front of handle (1), then rotate cartridge down (2) and inward (3) to lock in place.


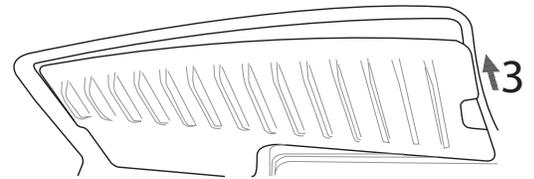


IMPORTANT: Never store your brush in your FREEHAND PRO. This can cause the Brush-Lock Cartridges to deform and lose grip strength.

CLEAN-UP: Follow same guidelines for cleaning your brush. For best results, remove Brush-Lock Cartridges when cleaning handle.

OPTIMAL PERFORMANCE: We strongly recommend using galaxG Paintbrush Counterweights with your FREEHAND PRO, which move the center of gravity over the hand, rather than in front of it. This will make your FREEHAND PRO feel even lighter and easier to use.

galaxG PAINTBRUSH COUNTERWEIGHTS

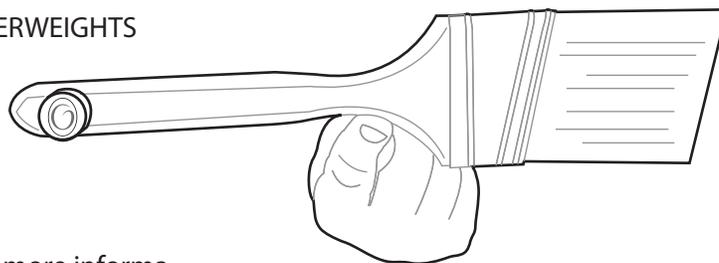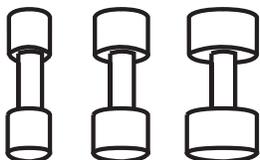

Check out our YouTube Channel for more information about the FREEHAND PRO and all of our great products (youtube.com/galaxgvids).

www.galaxG.com