


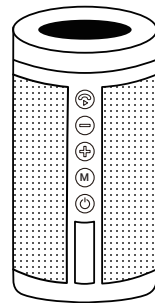

WIRELESS SPEAKER

Quick Start Guide



SPECIFICATION

Bluetooth Version: 5.2	Speaker: ϕ 52mmX2
Transmission Distance: 10m	SNR: \geq 85dB
Frequency Response: 20Hz-20KHz	Distortion: < 1%
Operating Voltage: 3.7V	Input Voltage: DC5V
Weight: 500g	Dimensions: 75*75*185mm

POWER ON/OFF

- Power ON / OFF: Long press 3 seconds
- Reset: Long press 8 seconds

MODE SWITCHING

- Single click: Mode switching



BLUETOOTH MODE

- Single click: Play / Pause
- Long Press: Last
Single click: Volume -
- Long Press: Next
Single click: Volume +

AUX MODE

Connect with audio cable, it will switch to aux mode after hearing the warning tone "Line in Mode"

- Single click: Play / Pause
- Single click: Volume -
- Single click: Volume +

BLUETOOTH PHONE CALL

- Single click: Answer / End Call
- Long Press: Reject to answer the call
- Double Click: Call back the last outgoing call

TF CAR/USB MODE

Insert the TF card or U disk to initiate the prompt tone "Music Mode" to play the songs in the TF card.

CHARGER

- The speaker needs to be recharged when you hear the voice prompt of "Low Battery Please Charge."
- When charging, the red light is on, and when charged, the red light is off.
- Please use the provided charger to charge your speaker.

NOTICE

- Do not throw this product into fire or water.
- Do not modify, repair, or disassemble the speaker.
- Do not allow the speaker to come in contact with combustible materials in any way.
- Please keep the device away from damp and dusty environments.
- Before charging ensure your charger is approved for use with the speaker.
- Do not use the Bluetooth function while charging.
- The device will automatically lose power when it is in standby. It is recommended to charge the speaker once a month.

TWS CONNECT

When both machines are turned on and within a 10m distance, long press the M button to connect them. After the first connection is successful the subsequent connection will be automatic.

Speaker and mobile phone must be within 10m in order to maintain connection. If over this distance your mobile device may disconnect or sound quality may decline.

