

smith+nobel 

## Pie Maker



**Instruction Manual**

Model: SNPIE630

## Important Safeguards

**When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:**

### For Your Safety

**Read all instructions carefully, even if you feel you are quite familiar with the appliance.**

- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended when in use.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and remove it from the power outlet. Never pull the power cord.
- Do not misuse the power cord. Never carry the appliance by the power cord.
- The appliance should always be operated on a dry, level, heat-resistant surface. Do not operate the appliance on sinks, draining boards, uneven or inclined surfaces.
- When using this appliance, always ensure that there is sufficient air space above and on all sides for air circulation.
- Always place the appliance on an insulated hot pad or heat resistant surface.
- **Warning:** This appliance gets very hot during use, do not touch the hot surfaces. Severe burns may result from misuse. Avoid contact with steam that may be emitted from the food while it is cooking.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.

- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Do not use outdoors. Store indoors in a dry location.
- Do not use with an extension lead.
- Do not operate any appliance with a damaged power cord or plug. Do not operate if the appliance malfunctions or if it has been dropped or damaged in any way.
- Do not operate the appliance beneath curtains, or within the vicinity of any flammable materials.
- Do not operate this appliance on or near any hot surfaces (such as a gas or electric burner).
- Never use harsh, abrasive, caustic or oven cleaners to clean this appliance. Allow to cool before cleaning.
- Do not reach for an appliance that has fallen into water. Switch off at the power outlet and unplug immediately.
- Do not use this product for anything other than its intended use. This product is intended for household use only, it is not for commercial use.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

## Warning

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


This product has not been designed for any uses other than those specified in this booklet.



**CAUTION: HOT SURFACES.**  
The surfaces are liable to get hot during use, do not touch.

## Save These Instructions

## Features of Your Pie Maker

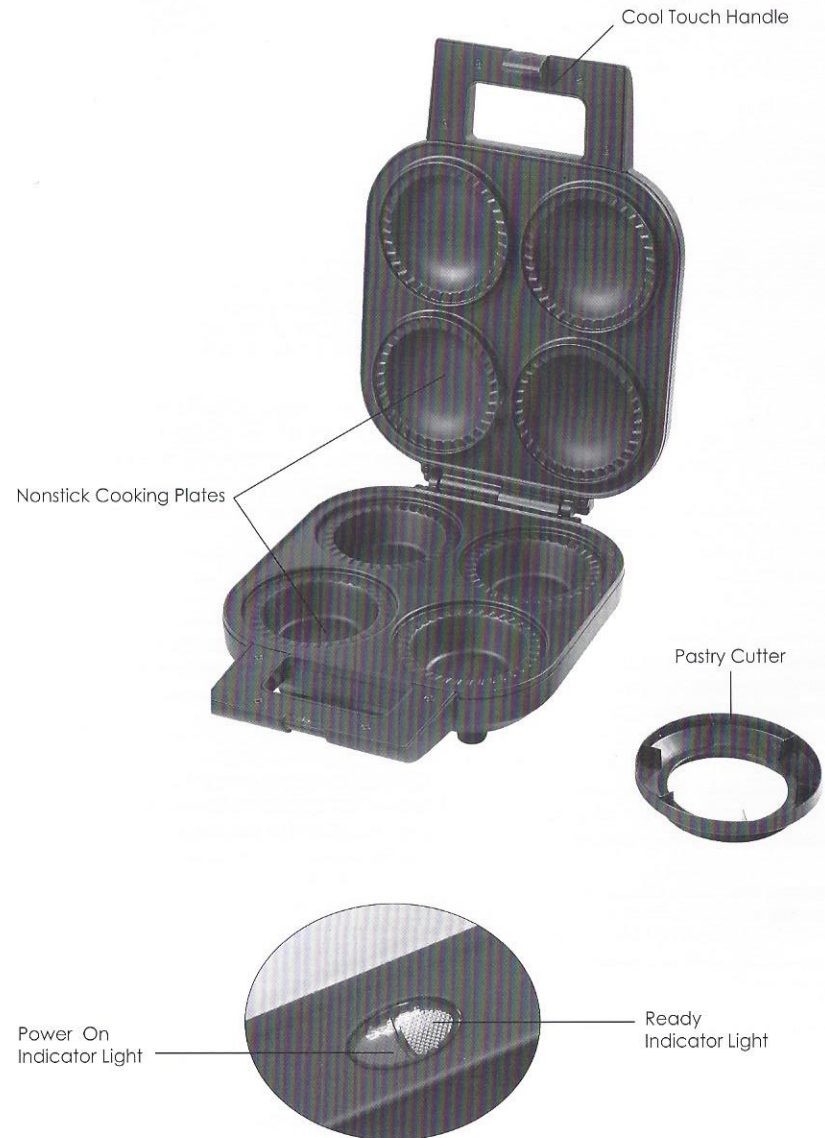

# Getting to Know Your Pie Maker

Congratulations on the purchase of your new Pie Maker.

Before first using your new Pie Maker, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

## Before First Use

Carefully unpack the Pie Maker and remove all packaging materials. Wipe the body of the Pie Maker with a soft damp sponge.

When using your Pie Maker for the first time, 'condition' the nonstick surface of each of the cooking areas with a thin coating of cooking oil or shortening applied with a paper towel or similar.

**Note: To prolong the life of the nonstick surface and to ensure optimum results, it is very important to "condition" the nonstick surface before the first use. Heat the Pie Maker, pour a thin coating of vegetable oil, then turn off and unplug. While warm, rub the oil in well using a thick wad of paper towels.**

**Use extreme care to avoid contact with the surface.**

Do not immerse in water or any other liquid whilst power is turned on.

Do not use any abrasive cleaners as they may scratch the surface.

Your appliance is now ready for use.

## How to Use

1. Plug the power cord into a power outlet and switch power on at the wall outlet.
2. The red power indicating light will be on. Pre-heat the pie maker for 5 minutes until the temperature reaches the desired temperature, the green indicator light illuminates, the appliance is ready for use.

**Note: When using your Pie Maker for the first time, a small amount of light smoke may be emitted. This is due to initial heating of the elements and is normal.**

3. To cut the pastry base, use the included pastry cutter to cut a circle. The pastry cover will need to be smaller than the base. Use the other side of the pastry cutter to cut the pastry for the cover of the pie.

**Note: Your Pastry cutter is double sided to cut both the top and bottom of your pie crusts. Use the small side for cutting pie covers (puff pastry dough recommended) and the large side for pie bases (standard pie crust).**

4. Place the pastry base into your pie maker.

**Note: Do not insert hot ingredients into the pie maker as this will make the pie base soggy. The pie maker will heat the ingredients.**

**CAUTION: Do not overfill! Overfilling of pies or an excess of liquid ingredients may result in the pie maker overflowing. Pie filling ingredients is hot and can scald.**

5. Add filling ingredients into the pastry base. Spoon the desired filling ingredients into the hollow of the pastry base. Ensure the filling ingredients are pre-cooked, particularly if you are using fresh meat or vegetable ingredients. Ensure all ingredients are cut into small pieces to allow them to heat through.

**Note: Canned food can be used without pre-cooking.**

**Note: Do not use liquid ingredients only as this will make the base of the pie soggy. Ingredients such as sauces, gravies and custard should be combined with solid ingredients.**

6. Place the pastry cover on top of the pie and close the lid of the pie maker.
7. The cooking time will be approximately 15-18 minutes if the appliance has been pre-heated for 5 minutes.

**Note: Use extreme caution when placing the pastry base in the pie maker as it will be hot.**

8. After the required cooking time, carefully lift the lid of pie maker to see if further cooking is required. If further browning is required, close the lid of pie maker and cook for a further 2 minutes.
9. After use, turn the power off at the power outlet and unplug the pie maker from the main power supply.
10. Use a plastic or wooden spatula to remove the pie so as to not damage the non-stick plates. Do not scratch the cooking surface. Do not use metal utensils.

**Note: It is normal for a large volume of steam to escape from the sides of the Pie Maker while in use. Contact with steam can cause severe burns, please exercise extreme caution when operating and opening.**

**Note: The green indicator light will cycle on and off throughout the cooking process, indicating that the correct temperature is being maintained.**

## Helpful Hints and Tips

- For best results allow the Pie Maker to preheat for 5 minutes before adding ingredients.
- Use an olive oil spray to coat the cooking surface before adding ingredients to allow easy turning of your Pies.
- Do not use metal utensils as these will damage the nonstick cooking surface.
- Do not use short cut pastry for the pie top. We recommend using a puff pastry for the pie top. You can find Puff Pastry sheets in the freezer section of your local supermarket or you can make your own dough.
- Pre-made pie dough can be found in the refrigerated section of your supermarket, usually where the refrigerated cookie dough and biscuits are located.
- For pre-made pie crust, unroll onto a piece of baking paper. Using the large side of the pastry cutter, cut the pastry for the bottom of the pie as close to the edge of the pie crust as possible. Take the remaining section of pastry and flip the pastry cutter to cut out the pastry for the top of the pie.
- You can store unused pie crust in the freezer by simply using baking paper in-between layers and storing in a plastic freezer bag. Remove any excess air from the bag before freezing.
- Ensure that your pie contains a sufficient amount of filling. If too little filling, the top of the pie will not make contact with the heating plate and will not brown as well. Too much filling ingredients may cause your pie to overflow during the cooking process and prevent the top and bottom pastry from sealing. As a general rule, fillings for pies should be 3/4 full.
- Do not use raw fruit fillings or proteins for pies. Since most pies in your Pie Maker are cooked within 15 minutes, this is not sufficient time to cook fillings. Always precook ingredients before adding them to the pie maker. You can find pre-made pie filling ingredients in the canned fruit section of your local supermarket, or see the recipe section of this manual to make your own!

## Care and Cleaning

Do not put the appliance in a dishwasher.

Before cleaning your appliance, turn the power off at the power outlet. Remove the plug from the power outlet and allow the unit to cool completely.

### To Clean the Cooking Plate

As the cooking plate is coated with a nonstick coating, little cleaning is required. Wipe over the cooking plates with a damp cloth.

Do not use abrasive creams, steel wool or scouring pads.

To remove baked food, allow the cooking plate to cool completely then wipe it with a damp cloth.

Never immerse your appliance completely in water or other liquids.

Keep the element connection away from any liquids. Dry with a dry towel.

**Note: Always ensure the nonstick plate is completely dry before storing away.**

To clean the exterior, wipe with a damp cloth and polish with a soft and dry cloth.

### Hints for Care and Use of Non-stick Surface

- To avoid scratching the nonstick surface, do not stack any objects on your Pie Maker.
- Use only nylon, plastic or wooden utensils with care to avoid scratching the nonstick surface. Never cut food on the cooking plate.
- Remove stubborn stains with a non-abrasive scouring pad and mild dish washing liquid. DO NOT USE STEEL WOOL.

## Recipes

### Chicken and Leek Pies

#### Ingredients:

- 1 tbsp olive oil
- 350g chicken breast or thigh fillets, cut into 1.5cm cubes
- 1 small leek, trimmed, thinly sliced
- 1 tbsp plain flour
- 1/4 cup pouring cream
- Salt and pepper to taste
- Shortcrust pastry
- Puff pastry
- 1 egg

#### Method:

1. Heat olive oil in a non-stick frying pan over medium heat.
2. Add leek and cook, stirring frequently, for 3 minutes or until soft.
3. Add chicken and cook for an additional 4 minutes or until cooked through.
4. Stir through flour until well combined.
5. Gradually add cream, stirring constantly, until mixture comes to the boil. Remove from heat.
6. Season with salt and pepper, cool.
7. Preheat the pie maker for 5 minutes or until light turns off.
8. Place the puff pastry rounds into the pie holes.
9. Place 1/3 cup of filling into the pastry and top with the puff pastry rounds. Brush egg mixture on pie cover.
10. Close lid and cook for approximately 6 minutes or until cooked as desired. Once ready carefully remove pies from the pie maker.

### Beef and Mushroom Pies

#### Ingredients:

- 1 tbsp olive oil
- 500g chuck steak, cut into 1.5cm cubes
- 1 small brown onion, chopped finely
- 100g small button mushrooms
- 2 tsp plain flour
- 400g can chopped Italian tomatoes
- 1/4 cup beef stock
- 1 tsp Italian herbs or seasoning
- Salt and pepper to taste
- Puff pastry
- 1 egg

#### Method:

1. Preheat oven to 200°C
2. Heat oil in a frypan.
3. Cook meat in frypan in batches until browned. Transfer to a plate.
4. Add onion and mushroom to dish and cook for 3 minutes.
5. Add flour, stirring until well combined.
6. Add tomatoes and stock, stirring continuously until mixture comes to the boil.
7. Return beef to pan with herbs or seasoning.
8. Season with salt and pepper.
9. Cover and place in oven for 45 minutes or until meat is tender. Cool.
10. Preheat the pie maker for 5 minutes or until light turns off.
11. Place the puff pastry rounds into the pie holes.
12. Place a 1/3 cup of filling into the pastry and top with the puff pastry rounds. Brush egg mixture on pie cover.
13. Close lid and cook for approximately 5 minutes or until cooked as desired. Once ready carefully remove pies from the pie maker.

### Apple and Sultana Pies

#### Ingredients:

- 3/4 cup canned baker's apples
- 1/3 cup sultanas (pre soaked in water overnight, then drained)
- 2 tbsp caster sugar
- 1 tsp ground cinnamon
- Puff pastry
- 1 tbsp icing sugar (for sprinkling at the end)
- 1 egg

#### Method:

1. Mix apples, sultanas, caster sugar and cinnamon in a bowl.
2. Preheat the pie maker for 5 minutes or until light turns off.
3. Place the puff pastry rounds into the pie holes.
4. Place half of the filling in each pie of filling into the pastry and top with the puff pastry rounds. Brush egg mixture on pie cover.
5. Close lid and cook for approximately 6 minutes or until cooked as desired. Once ready carefully remove pies from the pie maker.
6. Sprinkle with icing sugar and serve.
7. Cream or ice cream makes a great accompaniment.

## Specifications:

Supply Voltage: .....220-240V ~ 50Hz  
Power Consumption:.....1400W

**NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.**

## One Year Warranty Statement

smith + nobel appliances are guaranteed from the date of purchase for 1 year against manufacturing defects and abnormal deterioration when used in accordance with the care and use instructions for normal domestic use. The warranty excludes damage resulting from product misuse or product neglect. Please return at your expense, to a Harris Scarfe store for assessment by a team member. Once approved, a like replacement or refund, may be offered. Please keep your receipt as proof of purchase for this product warranty. The benefits given by this warranty are in addition to other rights and remedies you may have under Australian Consumer law.

This warranty is provided in addition to other rights and remedies you may have under law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Harris Scarfe Australia Pty Ltd, ABN 83 095 018 803  
Level 1, Building 8, Botanicca Corporate Park, 576 Swan Street, Richmond, 3121, Victoria, Australia  
Ph:03 9863 2200  
customerservice@harrisscarfe.com.au

