
D8 CONDENSER MANAGEMENT SYSTEM

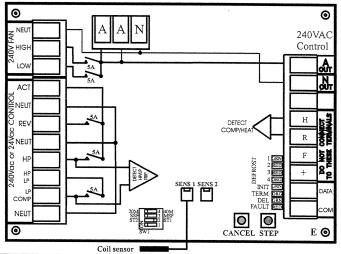

| D8 LED's | Cooling Mode | Heating Mode 1 | Heating Mode 2 | Heating Mode 3 | Heating Mode 4 | Heating Mode 5 |
|----------|-----------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| 1 | OFF | ON | OFF | OFF | OFF | OFF · |
| 2 | OFF | OFF | ON | OFF | OFF | OFF |
| 3 | OFF | OFF | OFF | ON | OFF | OFF |
| 4 | OFF | OFF | OFF | OFF | ON | BLINKS |
| *INIT | OFF | OFF | ON | ON | OFF | OFF |
| *TERM | OFF | OFF | ON | ON | OFF | OFF |
| *DELAY | OFF | OFF | OFF | OFF | OFF | OFF |
| *FAULT | BLINKS | BLINKS | BLINKS | BLINKS | BLINKS | BLINKS |
| I FDe | | | | | | |

LEDs

*INIT. Coil temp below -40C.

*TERM. Off when coil temp above 10oC.

*DELAY On. Compressor cycle delay.

*FAULT. QUICK BLINK - normal communication, See information below.

| FAULT INDICATION | D8 CONDENSER MANAGEMENT LIGHTS (LEDs) | | | | | AIR CONDITIONING COMPONENTS | | | WALL CONTROL LIGHT |
|--|---------------------------------------|------------------|------------------|------------------|---------------------------------|-----------------------------|--------------------|-----------------|----------------------|
| 7 | 1 | INIT | TERM | DEL | FAULT | СОМР. | COND. FAN | EVAP. FAN | RUN |
| HP/LP SAFETY TRIP FAULTY COIL SENSOR COMMUNICATION FAULT | OFF ON ON | OFF ON OFF | OFF ON OFF | OFF OFF ON | SLOW BLINK SLOW BLINK OFF | OFF ON OFF | OFF HIGH OFF | OFF ON ON | BLINKING ON ON |

SERVICE BUTTONS.

CANCEL button. Press to cancel time delays. i.e 5 minute anti-cycle delay. **STEP button**. Unplug SENS 1. Press and release to step through defrost cycle.

Operating Modes and Information

Cooling Call. D8 LED's off.

Low pressure control bypassed on start-up for 5 minutes.

Mode 1 Heating Call.

Compressor in minimum run time of 30 minutes or 20 minutes. Dip Switch selectable.

Mode 2. De-ice confirmation time. Minimum compressor run time complete.

Compressor must run continuously for 3 minutes at or below -4.0oC to initiate deice mode.

Mode 3. De-ice cycle.

Reversing valve, outdoor fan and indoor fan de-energized. Compressor stays on.

Deice cycle complete when outdoor coil temperature reaches 10oC or 10 minutes has elapsed.

Note 1. Indoor fan will continue to run if selected in continuous mode on Wall Control.

Note 2. Run LED will flash on Wall Control in de-ice cycle.

Mode 4. De-water cycle.

On completion of deice cycle, outdoor fan runs for 30 seconds to remove residual water from coil.

Mode 5. Pre-heat cycle.

Reversing valve and outdoor fan energized. Indoor fan held off for 15-65 seconds, dependent on duration of deice cycle i.e 0-10 minutes.

System returns to normal operation.

Compressor Operating Information


3 minute anti-cycle delay.

Random start delay, 20 to 50 seconds on initiation of power.

Outdoor Fan Operating Information

Single or two speed control. Dip Switch selectable.

Outdoor Fan Speed Control in cooling cycle. .

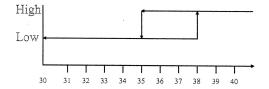

Outdoor Fan Speed Control in heating cycle.

