

## **AUTOMATIC WATCHES**

This timepiece is equipped with a self-winding Mechanical Automatic movement.

It does not need a battery. It is powered by the motions of the user's own wrist during the wear of the watch automatically. You may also choose to wind the watch manually.

Before wearing your watch, make sure to wind it clockwise with 20 rotations of the crown.


For good measure gently move the watch side to side around 30 times to see the seconds hand run at its normal speed.

Please make sure to remember that during a period when you are not wearing the watch, the power reserve of movement will wear down and you will have to re-wind the watch again before wearing.


**PLEASE READ THE FOLLOWING BEFORE UNSCREWING THE CROWN**

## **SCREW-DOWN CROWN**

This watch is equipped with a screw down crown . Do not pull the crown unless it is unscrewed first.

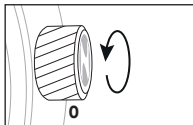


**TO UNSCREW:** Turn the crown anti-clockwise until it turns freely without tension. Gently pull the crown out to the other desired positions for watch setting (see specific operating instructions on the following pages).

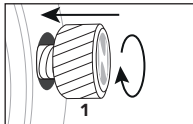

**TO SCREW:** Push the crown all the way in (towards the watch) then begin to turn clockwise until it is securely screwed down.

Note: Failure to securely screw down the crown after setting the watch may affect its water resistance.

# AUTOMATIC WATCH WITH DATE & DAY INDICATOR

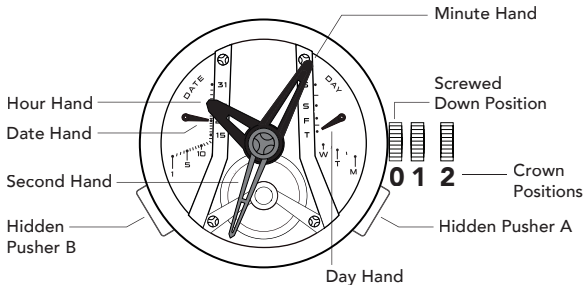

If your watch has a screw down crown feature, release the watch from the screw-down position.

## TIME SETTING

1. Pull the crown out to position 2, its maximum extension. The second hand will stop moving.
2. Turn the crown either clockwise or anti-clockwise until the watch hands are positioned at the desired time.
3. When the desired time is reached push the crown back to position 1 and screw down if applicable.

NOTE: When the hour hand passes 12 o'clock and the date changes, the watch is set at midnight. If the date does not change, it is set at noon.

## **QUICK CHANGE CORRECTOR FOR DAY (Push "A" at 4 o'clock position)**

1. Pull the crown out to position 2.
2. Using a ball pen tip pressing pusher "A" moves the day display forward by one day.
3. You must not use this quick change corrector between 11:30p.m. and 5:30a.m. because the automatic change mechanism is in operation between these times.

## **QUICK CHANGE CORRECTOR FOR DATE (Push "B" at 8 o'clock position)**

1. Pull the crown out to position 2.

2. Using a ball pen tip pressing pusher "B" moves the date display forward by one day.
3. You must not use this quick change corrector between 11:30p.m. and 5:30a.m. because the automatic change mechanism is in operation between these times.

## **DATE & DAY SETTING**

**(Push "B" at 8 o'clock position)**

1. Pull the crown out to position 2.
2. Continue rotating hands until 6:00a.m. Use the quick change correctors to set the day (hidden pusher "A") and date (hidden pusher "B").
3. Then use the crown to turn the hands forwards until the current date is reached. You have now set the correct date and day.