


PLEASE READ THE FOLLOWING BEFORE UNSCREWING THE CROWN


SCREW-DOWN CROWN

Screw-down crowns are used to ensure water resistance. Always be certain that your crown is tightly screwed down. (Position "0", "1" and "2" are NOT secured for water resistance). Do NOT unscrew your crown while you are in any environment where moisture is present.

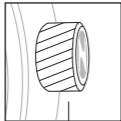

CLOSED

Tightly screwed
and water resistant

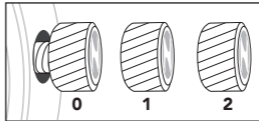


OPENED

Not secured for water resistant

**Crown
positions**


USING THE SCREW-DOWN CROWN

Do NOT pull the crown unless it is unscrewed first.

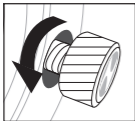

TO UNSCREW: Turn the crown anti-clockwise until it turns freely without tension.


Once the crown is fully unscrewed, it automatically sets itself into position "0". GENTLY pull the crown out to the other desired positions for watch setting.

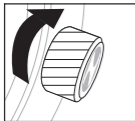

TO SCREW: Push the crown all the way in (towards the watch) THEN begin to turn clockwise until it is tightly screwed down.

Note: Failure to securely screw down the crown after setting the watch may affect its water resistance.

HYBRID MECHA-QUARTZ MOVEMENT WITH DUAL APERTURE, GRANDE DATE DISPLAY

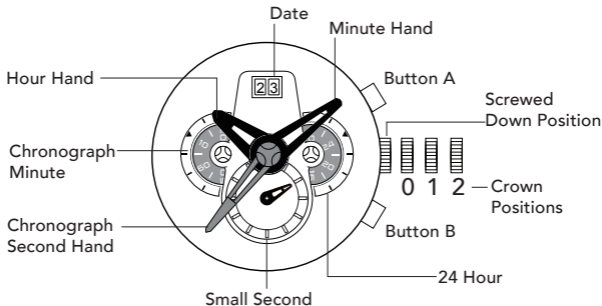

TIME SETTING

1. Unscrew the crown by turning it anti-clockwise until it turns freely.
2. Pull out the crown to position 2.
3. Turn the crown to set the time.
4. Push the crown back and screw it tight by turning clockwise.

**** Make sure AM/PM is set correctly.***

**** If the crown is pulled to the position 2 while the chronograph is started, the chronograph hands will continue to move. This is not a malfunction.***

DATE SETTING

1. Unscrew the crown by turning it anti-clockwise until it turns freely.
2. Pull out the crown to position 1.
3. Turn the crown clockwise to set the date.
4. Push the crown back and screw it tight by turning clockwise.


**** Do not set the date between 9:00 P.M. and 4:00 A.M.***

HOW TO USE THE CHRONOGRAPH


- * The measurement time is indicated by the chronograph hands that move independently of the center hands (and 24-hour hand).
- * The chronograph can measure up to 60 minutes.

Standard measurement (e.g. 100m race)

Press the buttons in the following order :

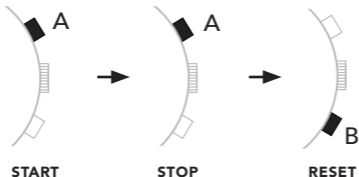

Accumulated elapsed time measurement (e.g. basketball game)

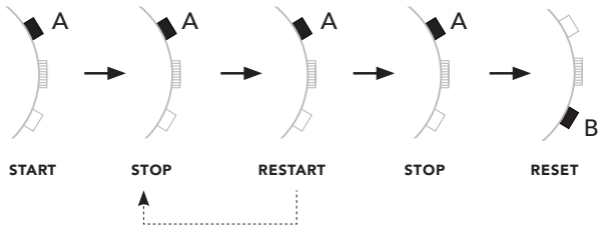

****Restart and stop of the chronograph can be repeated as many times as necessary by pressing button A.***

HOW TO RESET (AFTER BATTERY CHANGE)

1. Unscrew the crown and pull it out to position 2.
2. Press the button B for two seconds and release the button.
3. Push the crown back to position 0.
4. The small second hand will move at two-second interval for 10 seconds as a demonstration.

* If the crown is operated within these 10 seconds, the two-second interval movement will not be activated.

* It is not necessary to set the chronograph hands after the battery is changed. If the chronograph hand positions are incorrect, following below procedure all the chronograph hands will be reset to "0" position.

