

## Doxy Wand Massager Instructions

Thank you for choosing the Doxy Wand Massager, we hope that you'll get great enjoyment from your Doxy.

Your Doxy is ready to plug in and start using immediately, but we ask that you please read the following instructions thoroughly before using your Doxy for the first time.

**IMPORTANT - The Doxy Wand Massager is not waterproof, if any liquid is allowed to enter the product it will reduce its lifespan and invalidate the warranty.**

In this document you will find:

1. Safety information
2. Before using the Doxy Wand Massager
3. Getting to know your Doxy Wand Massager
4. How to Use the Doxy Wand Massager
5. Cleaning and Maintenance of the Doxy Wand Massager
6. Warranty Information

### 1 - Safety Information

Please read all the instructions before use and adhere to these safety guidelines.

The Doxy Wand Massager is for external use only, never insert a part of the product into the body.

Do not use the Doxy Vibrating Wand if;

- you are under the age of 16.
- you are under the influence of pain relieving drugs or alcohol.
- you have recently undergone surgery.

Do not use the Doxy;

- near the thyroid gland (the throat area) or any part of the face and head.
- on inflamed or swollen skin.
- on any area of the body with jewellery or piercings.
- on any animals or pets.
- if it is damaged.
- outdoors.
- with oil based lubricants such as KY or Vaseline.

Consult your doctor before using your Doxy if;

- you have unexplained calf pain and wish to use the Doxy on the affected area.
- you are pregnant.
- you suffer from high or low blood pressure, heart problems, epilepsy, multiple sclerosis, deep vein thrombosis, varicose veins or any skin disorder.

Personal safety when using the Doxy Wand Massager;

- The Doxy Wand Massager may not be suitable for use by unsupervised persons with reduced sensory, physical or mental capabilities.

- If you experience any discomfort or irritation, stop using the Doxy Wand Massager immediately.

#### Electrical safety

- Do not operate the Doxy Wand Massager whilst it is covered or under blankets and pillows.
- Do not carry the Doxy Wand Massager by the power cord and do not wrap the cord around the body.
- Do not submerge the Doxy Wand Massager in liquid and do not operate the wand near, or in baths and showers.
- Do not leave the Doxy Wand Massager unattended whilst it is switched on.

## 2 - Before using the Doxy Wand Massager

Wipe the cushioned head with soapy warm water or antibacterial wipe before use and read the product safety information.

Register the massager at <https://www.doxymassager.com/products/register/> to take full advantage of the manufacturer's warranty.

The Doxy Wand Massager is not a discreet product. The volume of the product increases with the level of intensity, we recommend that you use the product in an environment where you can relax and be undisturbed.

## 3 - Getting to know your Doxy

Your Doxy is easy to use, but spending a moment to get to know it will help you enjoy it even more.



1. Cushioned PVC covered head
2. Body
3. Power on/off and pulse settings button
4. Increase vibrations button
5. Decrease vibrations button
6. Power lead

### 1 The head

The cushioned head is made from medical grade PVC, it is body safe and contains no latex or unsafe phthalates.

The head cover is not designed to be removed.

### 2 The body

Made from sturdy plastic the body houses the motor that powers the head.

### 3,4,5 Power and setting buttons

6

The buttons are big and sit in the main body making the wand easy to use and control either alone or with a partner.

## **6 The power cord**

The power cord is approximately 3 meters long and comes with either a UK, EU, US or AUS/NZ plug.

The plug has a plug top power supply unit (PSU) which means the wand operates with a low DC voltage. .

The PSU allows the Doxy to be used on any mains voltage worldwide with the appropriate plug adapter.

## **4 - How to Use the Doxy Wand Massager**

### **Turning on**

- To turn on your Doxy Wand Massager, plug it into a suitable power socket and briefly press the power on/off button (3) once. The massager should begin to vibrate immediately.

### **Applying the Doxy to the body**

- Apply lubrication if desired and gently move the massaging head against the body in a circular motion.
- We recommend that you choose your preferred lubricant as long as it is NOT oil based.
- Avoid pressing too hard with the head as this could damage the skin and will not produce a stronger climax. Extreme lateral pressure could damage the neck of the Doxy.

### **Increase and decrease buttons**

- The Doxy Wand Massager has different levels of intensity to choose from.
- Increase the intensity of vibrations by pressing the increase vibrations button (4) which is marked with the positive symbol.
- Decrease the intensity of vibrations by pressing the decrease vibrations button (5) with the negative symbol to decrease the power.
- Experiment with different speeds until you achieve the desired level.
- To scroll through the speed variations keep your finger pressed down on either the increase or decrease button.

### **The Pulse Setting**

- To operate the pulse setting, turn the massager off using the ON/Off button (3).
- Hold the power on/off button again for 3-4 seconds, release and wait.
- As the massager comes to life, you should feel the vibrations accelerating from the lowest setting, to the highest.
- Use the increase and decrease buttons to vary the length of the escalating pulse
- Turn off the pulse setting by pressing the power on/off button
- Return to constant vibration settings by pressing the power on/off button once

### **Attachments**

- The Doxy Wand Massager is compatible with standard wand attachments.
- Attachments are used at the user discretion.

- Please follow the attachment manufacturers instructions when using attachments with your Doxy Wand Massager

## **5 - Cleaning and Maintenance of the Doxy Wand Massager**

- Do not submerge any part of the Doxy Wand Massager in water or hold it under a running tap.
- Clean the head with either a damp cloth and regular soap, a wet wipe or your preferred sex toy cleaner.
- The Doxy Wand Massager is not waterproof, if any liquid is allowed to enter the product it will reduce its lifespan and invalidate the warranty.
- Submerging any part of the Doxy in water will invalidate its warranty.
- Extreme lateral pressure on the head of the Doxy can cause damage to the neck area, reducing the lifespan of your product.

## **6 - Warranty Information**

This product carries a one year manufacturer's warranty against defects in workmanship or materials. A proof of purchase is essential for warranty service. The warranty is only applicable if the product was purchased from an authorised Doxy Wand Massager retailer and has been used in accordance with the instructions. You can register your purchase online at [www.doxymassager.com](http://www.doxymassager.com).

To make a claim, in the first instance contact your retailer directly. If the retailer does not wish to replace the product, please send your claim to:

CMG Leisure Ltd via email to [info@doxymassager.com](mailto:info@doxymassager.com)

For further information and contact details please visit –

**[www.doxymassager.com](http://www.doxymassager.com)**