


Oblique Pen Holder Flange Adjustment

Inward Cant

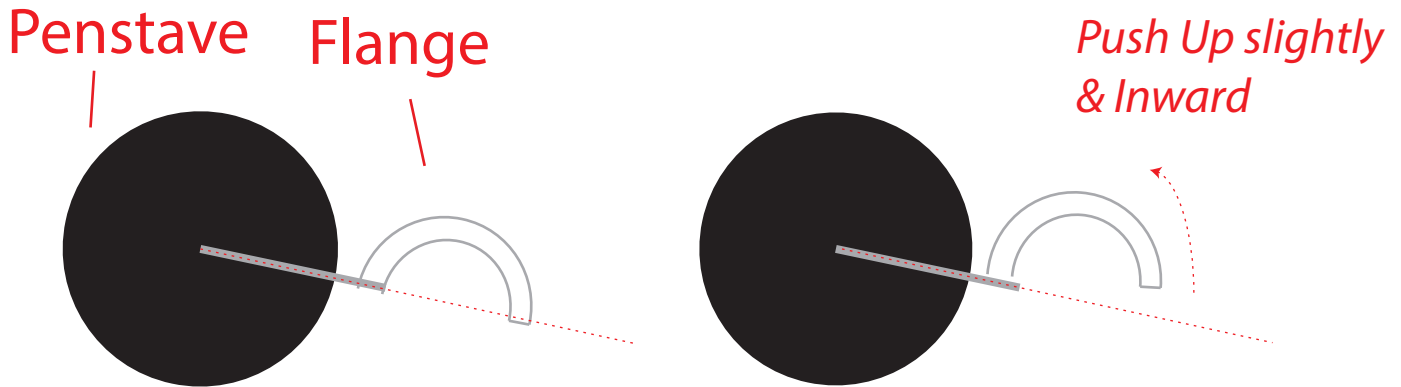

(view is looking at foot end of pen where nib is located)

** By slightly bending the metal flange up and inwards toward the penstave, you allow both nib tines to rest evenly on the writing surface. This is essential to keep edges of swells clean and not jagged when writing.*

** A tip to determine how much adjustment is needed for your grip style, is to hold the pen comfortably in your hand above the writing surface. Close your eyes and drop your hand with the oblique pen holder to the writing surface. Open your eyes and look to assure that both nib tines are resting evenly on the surface of the paper. Adjust the inward cant accordingly.*