


Oblique Pen Holder Flange Adjustment

Upward Cant

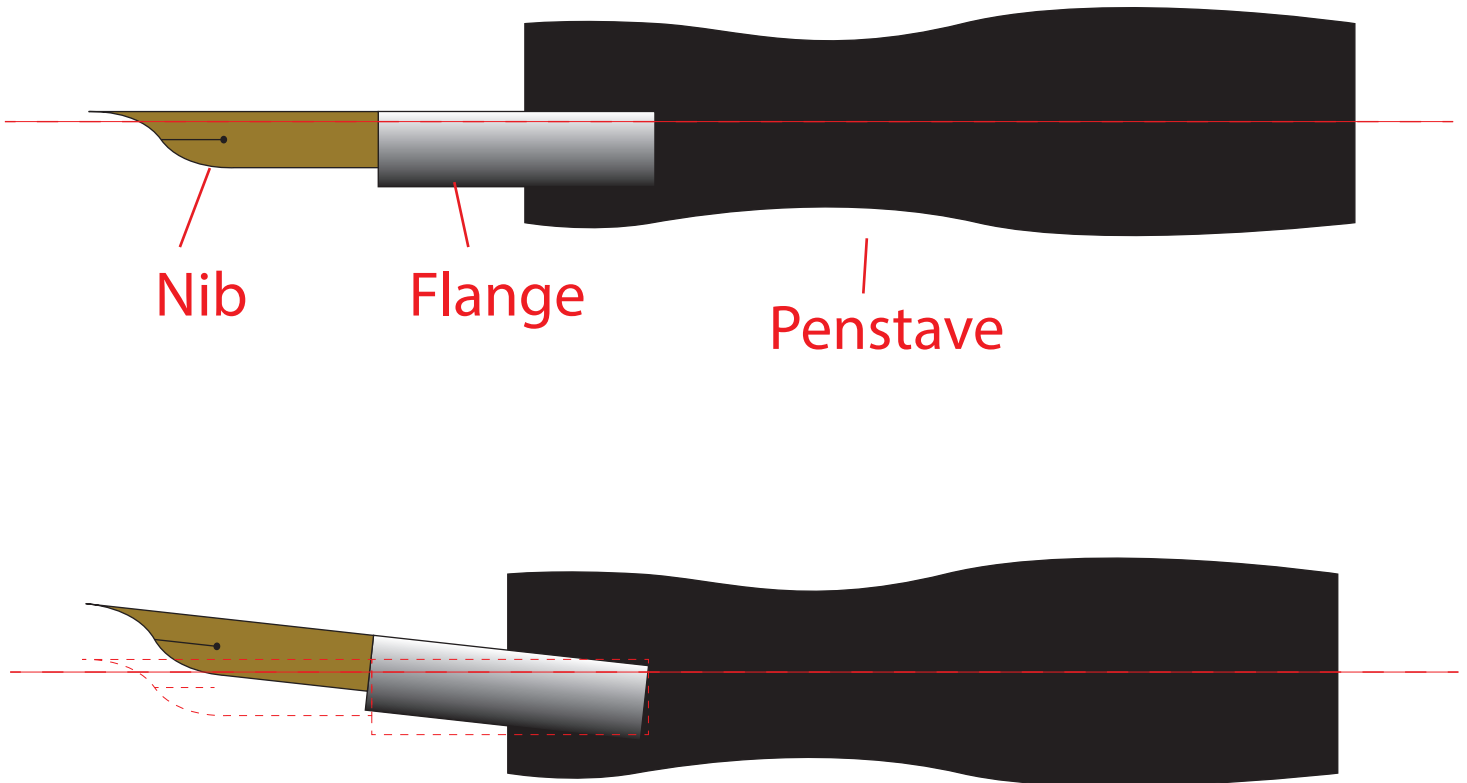

** By slightly bending the metal flange upwards, you cant the nib tip upwards. This has the affect of making the nib less likely to catch the paper on up-strokes (hairlines)*

** This should be done in small increments and only enough so that the nib doesn't catch as easily. Too much and you will not be writing on the point of the nib and your hairlines will suffer*