


Measure largest diameter on the clamp Lip that rests on frame tube


SEATPOST CLAMP MEASUREMENT GUIDE

This guide needs to be printed at 100% to ensure proper sizing. After printing this guide use your ruler and the ruler a the bottom to verify scale.

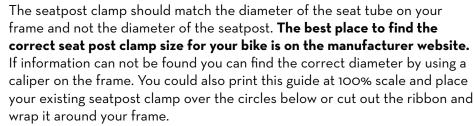



NOTE: The lip of your clamp should be on top so you are comparing the largest diameter of the clamp with the circles below. Make sure there is no tension on the clamp bolt.

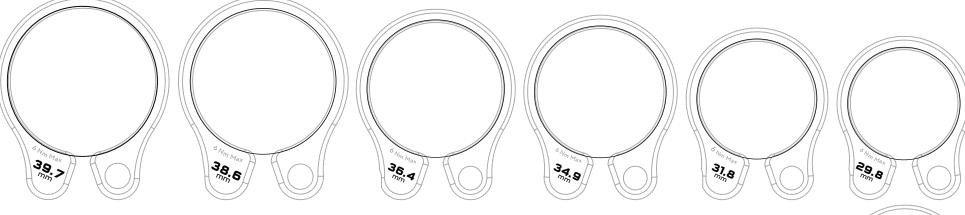




You must verify that your printout is 100% scale before measuring

 Place your ruler next to the scale after printing







VERIFY SCALE



Explore more product solutions at: wolftoothcomponents.com







