

Installation Time (Hours):

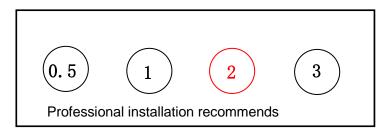

Tools:

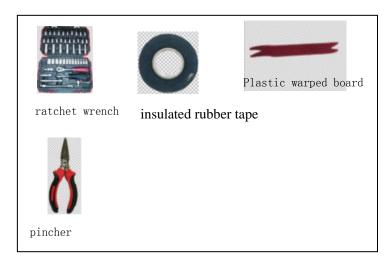




Caution


We highly recommend you to find professional store to install the product.

caution


If not follow the instruction may damage the ECU, motor or the car.

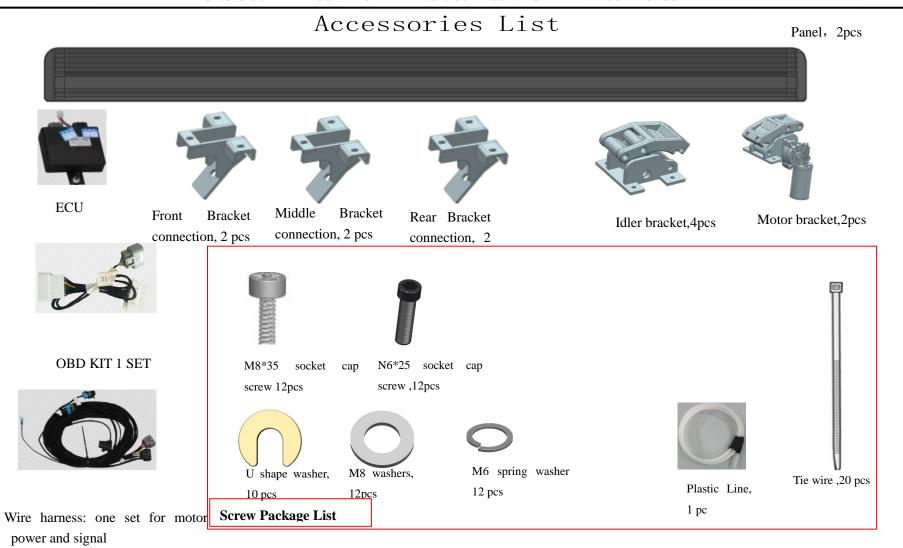

1.Install ECU, OBD and Wiring

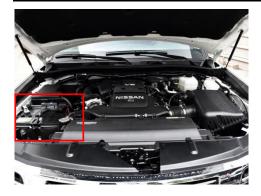

1) Open engine compartment and find the battery

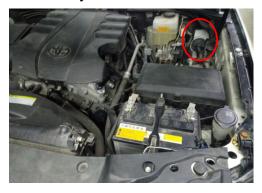

4) Find the left hole in the engine compartment



2) take out fuse



5) Connect positive pole line to the left side of the car




3) connect positive pole of a battery CAUTION!: Tighten battery screw very tight! If loose, may get damage to the car.



6) Connect negative pole line to the negative pole of the car



7) Find the left original M6 screw hole

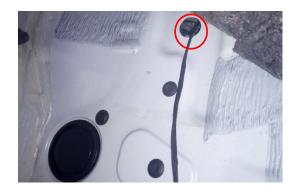

10) Wear the left motor line to the chassis site



8) Fix with M6 screws



11) the right motor line is the same as the left



9) Lift the carpet of the driving position on the left



12) Lift the carpet on the right, Connect the right motor line to the chassis




7) Find this module in the driving position



8) Pull out the plug and insert with the plu we offer


Car direction (right side)

2. Install bracket connection (right side) (The installation of the left is same as the right)

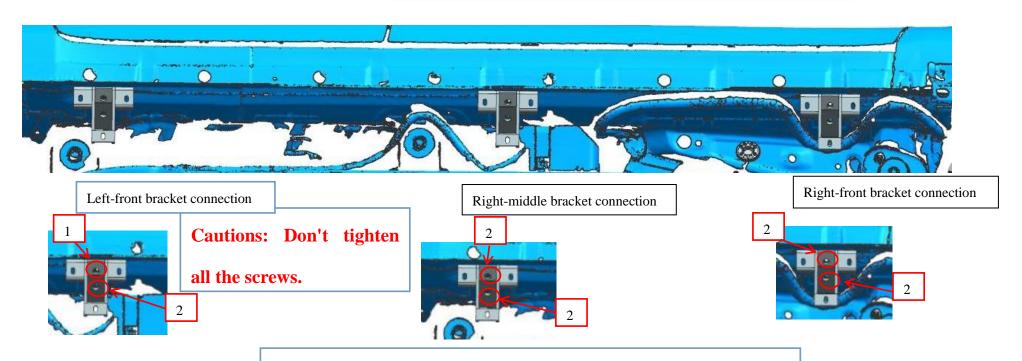


NO.1.2.3.4.5.6 use M8X35 socket cap screw to fix

3. Install bracket (right side) (The installation of the left is same as the right)

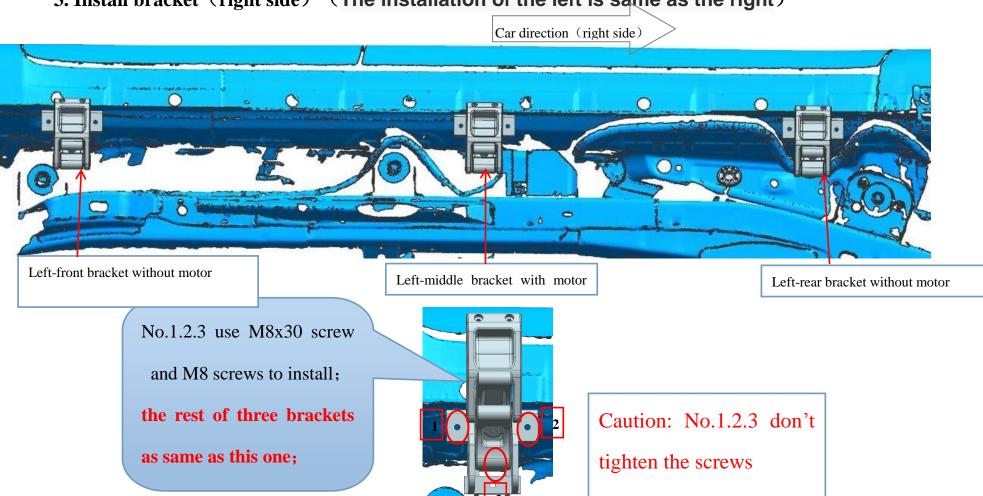

Car Direction: right side

4. Install running board (right side) (The installation of the left is same as the right)

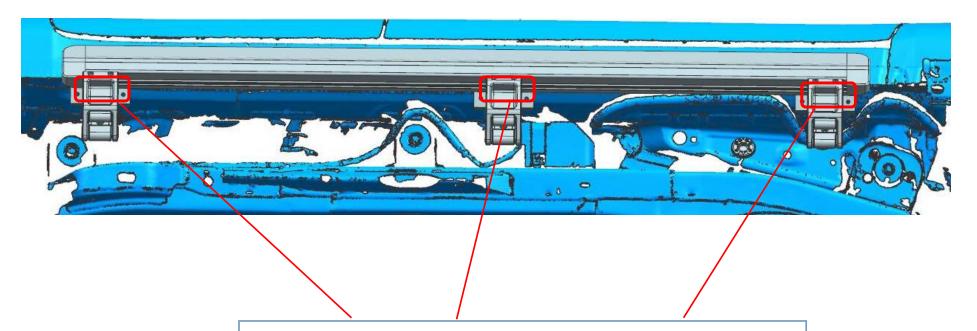


1) Use M6x25 socket cap screw to fix running board with brackets as the picure above showed. TIGHTEN SCREWS!!

5. Testing and adjust brackets and screws to keep the balance



2) 1 & 2 & 3: Fasten all the screws on the brackets; the rest of three brackets as same as this one;

If still not balance, use U shape washer to adjust it.

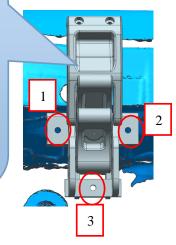

1) When running board installed finish, open and close the doors for testing, keep the brackets balanced and stay in the same line





Installation completion effect



To lift the car as showed



To lift the car



To changing tire

Automatic power deploy:

The running boards will extend down and out when the door is opened.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.

Manually set in the deployed (OUT) position for access to the roof:

Step your foot while at the same time closing the door. To resume normal operation, open and close the door.

Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins.

Caution! Keep hands and feet away when the running board is in motion.