

Brand	Model	Firmware Version	Photo	Video	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Control Cable Type	Note
Sony	α7S II	2.01	✓	✓	✓	✓	-	TypeC-Multi	1. Half-press to focus, long-press for 1s to take a photo, press once to start/stop recording. 2. The optical zoom can be controlled through Zoom Lever(only lenses with built-in power zoom, such as the Sony E PZ 18-105 mm F4 G OSS). If a non-Power Zoom lens is mounted, the Zoom Lever will control digital zoom. Digital zoom must be enabled in your camera's setting. [Menu] → [Settings] → [Zoom Settings] → [Digital Zoom]. 3. In video mode, capturing photos is not supported.
	α 7S III	2.01	✓	✓	✓	✓	-	TypeC-Multi	
	α7R II	-	✓	✓	✓	✓	-	TypeC-Multi	
	α7R III	-	✓	✓	✓	✓	-	TypeC-Multi	
	α7R IV	1.20	✓	✓	✓	✓	-	TypeC-Multi	
	α7R V	-	✓	✓	✓	✓	-	TypeC-Multi	
	α7 II (A7M2)	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 7 III (A7M3)	-	✓	✓	✓	✓	-	TypeC-Multi	
	α7 IV (A7M4)	-	✓	✓	✓	✓	-	TypeC-Multi	
	α7 II	4.00	✓	✓	✓	✓	-	TypeC-Multi	
	α1	-	✓	✓	✓	✓	-	TypeC-Multi	
	α9	-	✓	✓	✓	✓	-	TypeC-Multi	
	α9 II	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 6000	3.2	✓	✓	✓	✓	-	TypeC-Multi	
	α 6100	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 6300	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 6400	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 6500	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 6600	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 6700	-	✓	✓	✓	✓	-	TypeC-Multi	
	α 5000	1.10	✓	✓	✓	✓	-	TypeC-Multi	
	FX3	-	✓	✓	✓	✓	-	TypeC-Multi	
RX100 VII	-	✓	✓	✓	✓	-	TypeC-Multi		
ZV-1	2.01	✓	✓	✓	✓	✓	TypeC-Multi		
ZV-1 II		✓	✓	✓	✓	✓	TypeC-Multi		
ZV-E1	-	✓	✓	✓	✓	-	TypeC-TypeC	1. Please select "PC Remote" for your camera's "USB Connection". 2. [Cnct./PC Remote] → [Remote Shoot Setting] → [Still Img. Save Dest.] → [Camera Only]	
ZV-E10	2.00	✓	✓	✓	✓	-	TypeC-TypeC	1. Please select "PC Remote" for your camera's "USB Connection". 2. When the camera icon appears on the stabilizer's screen and the camera screen displays "PC", it indicates a successful connection. 3. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording.	

## iSteady MT2-Camera Compatibility List (Cable Control)

Brand	Model	Firmware Version	Photo	Video	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Control Cable Type	Note
Canon	EOS 90D	1.1.1	✓	✓	-	-	-	TypeC-Micro	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. When inserting the control cable or switching from video mode to photo mode, press the START/STOP button once to activate the real-time preview on the screen.
	EOS RP	1.0.0	✓	✓	✓	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually 3. In photo mode, recording videos is supported. After finishing video recording, capturing photos can be resumed.
	PowerShot G7 X Mark III	-	✓	✓	✓	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In photo mode, recording videos is supported. After finishing video recording, capturing photos can be resumed.
	EOS R	1.8.0	✓	✓	✓	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording.
	EOS R5	1.7.0	✓	✓	✓	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In Auto mode, attempting to take a photo while recording a video will cause the camera to exit the video mode. 4. Taking photos is not supported in video mode.
	EOS R6	1.5.2	✓	✓	✓	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In Auto mode, attempting to take a photo while recording a video will cause the camera to exit the video mode. 4. Taking photos is not supported in video mode.
	EOS R7	-	✓	X	✓	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In Auto mode, attempting to take a photo while recording a video will cause the camera to exit the video mode. 4. Taking photos is not supported in video mode.
	EOS 200D	1.0.0	✓	✓	✓	-	-	TypeC-Mini	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. Please do not use the release cable to control the photo taking while in video mode camera as it is easy to cause the camera crash.
	M50	1.0.0	✓	✓	✓	-	-	TypeC-Micro	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In Auto mode, attempting to take a photo while recording a video will cause the camera to exit the video mode.

Brand	Model	Firmware Version	Photo	Video	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Control Cable Type	Note
Canon	M50 Mark II	-	√	√	√	-	-	TypeC-Micro	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In Auto mode, attempting to take a photo while recording a video will exit the video mode. 4. Taking photos is not supported in video mode.
	M6	-	√	-	√	-	-	TypeC-TRS (2.5mm)	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually.
	EOS M6 II	-	√	√	√	-	-	TypeC-TypeC	1. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 2. Please switch photo / video mode on camera manually. 3. In photo mode, recording videos is supported. After finishing video recording, capturing photos can be resumed.
Nikon	Z FC	-	√	√	-	-	-	TypeC-TypeC	1. After turning on the camera, please wait for approximately 5s for the camera to establish a successful connection. 2. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 3. Please switch photo / video mode on camera manually.
	Z 5	-	√	√	√	-	-	TypeC-TypeC	1. After turning on the camera, please wait for approximately 6s for the camera to establish a successful connection. 2. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 3. Please switch photo / video mode on camera manually.
	Z 6	3.40	√	√	√	-	-	TypeC-TypeC	1. After turning on the camera, please wait for approximately 6s for the camera to establish a successful connection. 2. Half-press to focus, long-press for 1s to take a photo, and press once to start/stop recording. 3. Please switch photo / video mode on camera manually.
	Z6 II	-	√	√	√	-	-	TypeC-TypeC	1. After turning on the camera, please wait for approximately 5s for the camera to establish a successful connection. 2. Please switch photo / video mode on camera manually.
	Z7 II	1.50	√	√	√	-	-	TypeC-TypeC	
	Z30	1.00	√	√	-	-	-	TypeC-TypeC	
	Z50	-	√	√	-	-	-	TypeC-Micro	
Panasonic	GH6	2.2	√	√	√	-	-	TypeC-TRRS (2.5mm)	1. Please switch photo / video mode on camera manually. 2. In photo mode, press once to take a photo. In video mode, press once to start/stop recording.
	GH5S	-	√	√	√	-	-	TypeC-TRRS (2.5mm)	1. Please switch photo / video mode on camera manually. 2. In photo mode, press once to take a photo. In video mode, press once to start/stop recording.
	GH4	2.7	√	√	√	-	-	TypeC-TRRS (2.5mm)	1. Please switch photo / video mode on camera manually. 2. In photo mode, press once to take a photo. In video mode, press once to start/stop recording.
	DC-G9	-	√	√	-	-	-	TypeC-Micro	1. Please switch photo / video mode on camera manually.

## iSteady MT2-Camera Compatibility List (Cable Control)

Brand	Model	Firmware Version	Photo	Videp	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Control Cable Type	Note
Fujifilm	XH1	-	✓	✓	-	-	-	TypeC-TRS (2.5mm)	
	X-S10	-	✓	✓	✓	-	-	TypeC-TRS (3.5mm)	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. 2. Please switch photo / video mode on camera manually. 3. In photo mode, half-press to focus and press for 1s to capture a photo. In video mode, press for 1s to start/stop recording.
	X-T4	-	✓	✓	✓	-	-	TypeC-TRS (2.5mm)	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. 2. Please switch photo / video mode on camera manually. 3. In photo mode, half-press to focus and press for 1s to capture a photo. In video mode, press for 1s to start/stop recording.

Brand	Model	Firmware Version	Photo	Video	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Note
Sony	α7S III	2.01	✓	✓	✓	✓	-	<p>1. Camera Bluetooth Control Settings:            a. Turn on the camera's Bluetooth: [MENU] → (Network) → [Bluetooth] → [Bluetooth Function] → [ON]            b. Bluetooth Pairing: (Network) → [Bluetooth] → [Pairing]            c. Long-press the M button on iSteady MT2 to enter submenu on the OLED screen. Press the A button to enter the device pairing interface. Use the Joystick to select [pairing] and press the M button to confirm and enter pairing mode.            d. Camera Bluetooth Remote: (Network) → [Bluetooth Remote] → [On]</p> <p>2. Due to camera system limitations, the camera cannot be controlled when only bluetooth is connected. To enable camera control, please ensure that Bluetooth Remote Control is activated.</p> <p>3. When the camera and iSteady MT2 are both in Bluetooth shutter and cable control mode at the same time, Bluetooth control takes priority. So please actively disconnect Bluetooth, if you need to adjust camera parameters such as aperture, shutter speed, ISO, etc, which are in cable control.</p> <p>4. The optical zoom can be controlled through the iSteady MT Multifunctional Control Wheel (only lenses with built-in power zoom, such as the Sony E PZ 18-105 mm F4 G OSS). If a non-Power Zoom lens is mounted, the Focus Wheel will control digital zoom. Digital zoom must be enabled in your camera's settings            MENU → (Shooting) → [Zoom] → [Zoom Range] → [Digital Zoom].</p>
	α7R III	1.20	✓	✓	✓	✓	-	
	α7R IV	1.20	✓	✓	✓	✓	-	
	α7R V	1.20	✓	✓	✓	✓	-	
	α7C	-	✓	✓	✓	✓	-	
	α7 III (A7M3)	-	✓	✓	✓	-	-	
	α7 IV (A7M4)	-	✓	✓	✓	-	-	
	α 7 II	4.00	-	✓	✓	✓	-	
	α 6100	-	✓	✓	✓	✓	-	
	α 6400	-	✓	✓	✓	✓	-	
	α 6600	-	✓	✓	✓	✓	-	
	α 6700	-	✓	✓	✓	✓	-	
	α1	-	✓	✓	✓	✓	-	
	α9	-	✓	✓	✓	✓	-	
	α9 II	-	✓	✓	✓	✓	-	
	FX3	-	✓	✓	✓	✓	-	
	RX100 VII	-	✓	✓	✓	✓	-	
ZV-1	2.01	✓	✓	✓	✓	✓		
ZV-1 II		✓	✓	✓	✓	✓		
ZV-E1	1.00	✓	✓	✓	✓	-		
ZV-E10	2.00	✓	✓	✓	✓	-		

Brand	Model	Firmware Version	Photo	Video	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Note
Canon	EOS RP	1.0.0	✓	✓	✓	-	-	<p>1. When using Bluetooth Remote Control, we recommend disabling the Auto Power Off function. [Settings Menu]→[Power Saving]→[Auto Power Off]→[Disable].</p> <p>2. When the camera is in low power sleep mode, it can be reconnected again by short-pressing the shutter button on the stabilizer.</p> <p>3. Bluetooth Connection Settings: a. [Wireless Functions]→[Bluetooth Settings]→[Bluetooth]→[Enable]. b. [Wireless Functions]→[Wi-Fi/Bluetooth Connections]→[Connect Wireless Remote Control]. c. Photo settings: [Drive Mode]→[Selfie: Remote Control] (either 10s or 2s, but remote control must be available) . d. Power Off settings: [Settings]→[Power Saving]→[Auto Power Off]→[Disable] e. Video settings: [Video Mode]→[Shoot and Record]→[Remote Control]→[Enable]</p> <p>4. When the camera and iSteady MT2 are both in Bluetooth shutter and cable control mode at the same time, Bluetooth control takes priority. So please actively disconnect Bluetooth, if you need to adjust camera parameters such as aperture, shutter speed, ISO, etc, which are in cable control.</p>
	PowerShot G7 X Mark III	-	✓	✓	✓	-	-	
	EOS R	1.8.0	✓	✓	✓	-	-	
	EOS R5	1.7.0	✓	✓	✓	-	-	
	EOS R6	1.5.2	✓	✓	✓	-	-	
	EOS R7	-	✓	✓	✓	-	-	
	EOS 200D	1.0.0	✓	✓	✓	-	-	
	M50	1.0.0	✓	✓	✓	-	-	
	M50 Mark II	-	✓	✓	✓	-	-	
	M6 Mark II	-	✓	-	✓	-	-	

Brand	Model	Firmware Version	Photo	Video	Halfway Press Shutter Button to Autofocus	Digital Zoom	Optical Zoom	Note
Nikon	Z FC	-	✓	✓	-	-	-	<p>1. Camera Bluetooth Remote Control Settings: [Settings Menu]→[Wireless Remote Control (ML-L7)]→[Connect Wireless Remote Control]→[Enable].</p> <p>2. When the camera and iSteady MT2 are both in Bluetooth shutter and cable control mode at the same time, Bluetooth control takes priority. So please actively disconnect Bluetooth, if you need to adjust camera parameters such as aperture, shutter speed, ISO, etc, which are in cable control.</p>
	Z6 II	-	✓	✓	-	-	-	
	Z7 II	1.50	✓	✓	-	-	-	
	Z30	<b>1.00</b>	✓	✓	✓	-	-	
	Z50	-	✓	✓	-	-	-	