

# NATYA

## Versatile couples toy with vibrating remote.

- 7 Pleasure-Rhythms With Matching Illuminating LED Colors
- Powerful heart shaped remote that vibrates
- Dual vibrations: use alone or with your partner
- Bendable for a custom fit
- 100% Waterproof
- 3 Whisper-Quiet Motors
- 2 Year Limited Warranty

## HOW TO USE:

### TURN ON TOY (Stand-by Mode)

#### STEP 1.

Quick click **TOP BUTTON** on **TOY** to turn on **Motor1**. Quick click **BOTTOM BUTTON** on **TOY** to turn on **Motor 2**. (Stand-by Mode: *light will begin to flash but toy will not vibrate.*)



### ACTIVATE RHYTHM

#### STEP 2.

Quick click **TOP BUTTON** on **TOY** to activate rhythm for **Motor 1**. Quick click **BOTTOM BUTTON** on **TOY** to activate rhythm for **Motor 2**.

### CHANGE RHYTHM

#### STEP 3.

Quick click **TOP BUTTON** on **TOY** to change rhythm for **Motor 1**. Quick click **BOTTOM BUTTON** on **TOY** to change rhythm for **Motor 2**.

### TURN OFF TOY

#### STEP 4.

Hold **TOP BUTTON** on **TOY** to turn off **Motor 1**. Hold **BOTTOM BUTTON** on **TOY** to turn off **Motor 2**.

### SYNCHING HEART REMOTE WITH TOY TURN ON TOY (Stand-by Mode)

#### STEP 1.

Quick click **TOP BUTTON** on **TOY** to turn on **Motor 1** in Toy. Quick click **BOTTOM BUTTON** on **TOY** to turn on **Motor 2** in Toy. (Stand-by Mode: *light will begin to flash but toy will not vibrate.*)

#### TOY

##### TOP BUTTON

Controls Motor 1

##### BOTTOM BUTTON

Controls Motor 2

MOTOR 1

#### HEART REMOTE

##### TOP BUTTON

Controls Motor 1 on Toy

##### BOTTOM BUTTON

Controls Motor 2 on Toy

MOTOR 3

MOTOR  
2

### ACTIVATE RHYTHM

#### STEP 2.

Quick click **TOP BUTTON** on **HEART REMOTE** to activate rhythm for **Motor 1** in Toy. Quick click **BOTTOM BUTTON** on **HEART REMOTE** to activate rhythm for **Motor 2** in Toy.

### CHANGE RHYTHM

#### STEP 3.

Quick click **TOP BUTTON** on **HEART REMOTE** to change rhythm for **Motor 1** in Toy. Quick click **BOTTOM BUTTON** on **HEART REMOTE** to change rhythm for **Motor 2** in Toy.

### TURN ON HEART REMOTE (Stand-by Mode)

#### STEP 1.

Double click **TOP BUTTON** on **HEART REMOTE** to turn on LED in Heart Remote. (Stand-by Mode: LED light will turn on but remote will not vibrate.)



### ACTIVATE RHYTHM HEART REMOTE

#### STEP 2.


Double click **BOTTOM BUTTON** on **HEART REMOTE** to activate rhythm for **Motor 3** in Heart Remote.

### TURN OFF TOY & HEART REMOTE

#### STEP 4.

Hold **TOP BUTTON** on **HEART REMOTE** to turn off **Motor 1** in Toy. Hold **BOTTOM BUTTON** on **HEART REMOTE** to turn off **Motor 2** in Toy and **Motor 3** in Heart Remote.

## CHARGING YOUR TOY

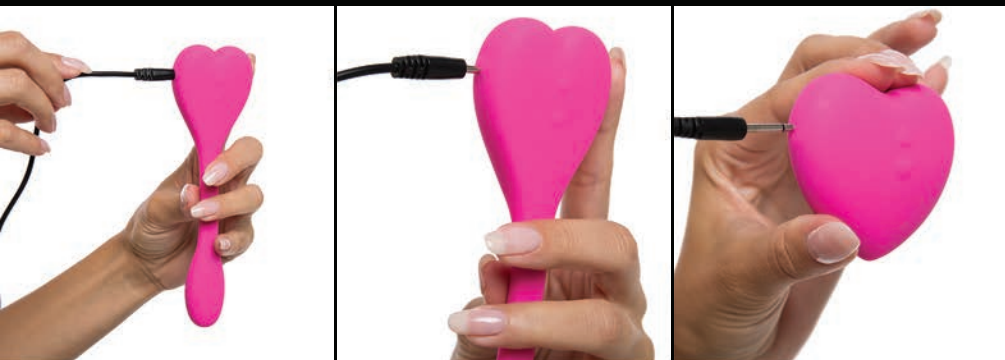

### FIRST-TIME USE

---

Always try to charge your item first. Note that the LED light may take a few moments to react and pulse if the item's battery has been fully drained. Also be sure to check that all connections to and from the item are firmly in place and connected to an appropriate power source. Please keep in mind that **you must charge you massager fully before its first use**. Consult your item's user manual for appropriate charge time.

### CLEANING & CARE

---

Your RHYTHM product's lifespan will be greatly increased with proper maintenance and care. Always clean your RHYTHM massager thoroughly before and after each use. The best way of doing this is to use a purpose-made toy cleaning solution. You can also wipe your silicone massager with a wet warm sponge and soap, making sure to repeat with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone as they can damage silicone.

### REGISTER YOUR TOY

---

In order to ensure that you are able to take full advantage of the 2-year Limited Warranty, Kama Sutra requests that you **REGISTER** your item by visiting **KAMASUTRA.COM** as soon as possible after purchase. To **REGISTER** your product go to **kamasutra.com/pages/product-registration** and enter the requested information, along with the applicable details pertaining to your item, including the item's unique, 22-digit serial number found on the detachable card of the item's outer sleeve packaging, and **SUBMIT**. Doing this will allow you to both confirm your item's authenticity and provide assurance that your investment is protected. Your detachable warranty card, along with your purchase receipt will act as proof-of-purchase of your RHYTHM by Kama Sutra Pleasure Instrument and to ensure that said purchase falls within the allotted 2-Year Limited Warranty period. Please keep these documents together and readily accessible in order to prevent any delay in fulfillment of warranty terms and/or conditions.

### WARRANTY

---

Every RHYTHM by Kama Sutra product comes with a 2-Year Limited Warranty, from the date of original purchase. Said warranty pertains to the working parts and implements related to the fundamental operation of the item and/or any defects, cosmetic, functional, or otherwise in regards to the manufacturing of the item. In addition to the 2-Year limited warranty, RHYTHM by Kama Sutra products are backed by a 10-Year Quality Guarantee.