

NATYA

Versatile couples toy with vibrating remote.

- 7 Pleasure-Rhythms With Matching Illuminating LED Colors
- Powerful heart shaped remote that vibrates
- Dual vibrations: use alone or with your partner
- Bendable for a custom fit
- Fully Rechargeable: Use for up to 2 hours
- 100% Waterproof
- Luxurious, Soft, Body Safe Material: Made from 100% medical grade silicon and ASB plastic, non-toxic and free of phthalates
- 3 Whisper-Quiet Motors
- 2 Year Limited Warranty

NATYA is a versatile two-piece massager that includes a bendable toy and a heart shaped remote. The bendable toy is customizable and designed to fit your unique shape. The heart shaped remote is made from soft silicone and has an LED light feature. Each vibrate with 7 pleasure rythms, so they can be used separately or together in sync.



TOY

TOP BUTTON

Controls Motor 1

BOTTOM BUTTON

Controls Motor 2



HEART REMOTE

TOP BUTTON

Controls Motor 1 on Toy

BOTTOM BUTTON

Controls Motor 2 on Toy

* ALWAYS KEEP DEMOS CHARGED WHEN NOT IS USE *

TURN ON TOY (Stand-by Mode)

STEP 1.

Quick click **TOP BUTTON** to turn on **Motor1**.

Quick click **BOTTOM BUTTON** to turn on **Motor 2**.

(Stand-by Mode: *light will begin to flash but toy will not vibrate.*)




ACTIVATE RHYTHM

STEP 2.

Quick click **TOP BUTTON** to activate rhythm for **Motor 1**.

Quick click **BOTTOM BUTTON** to activate rhythm for **Motor 2**.

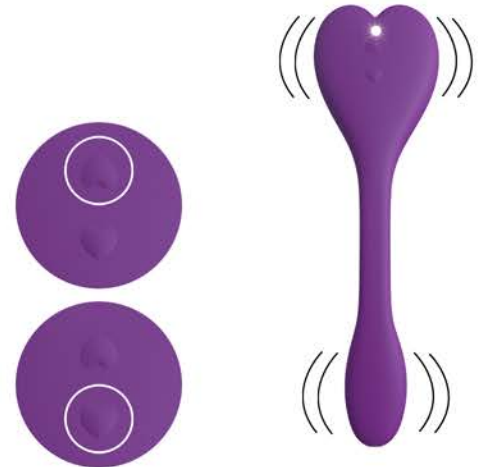


CHANGE RHYTHM

STEP 3.

Quick click **TOP BUTTON** to change rhythm for **Motor 1**.

Quick click **BOTTOM BUTTON** to change rhythm for **Motor 1**.

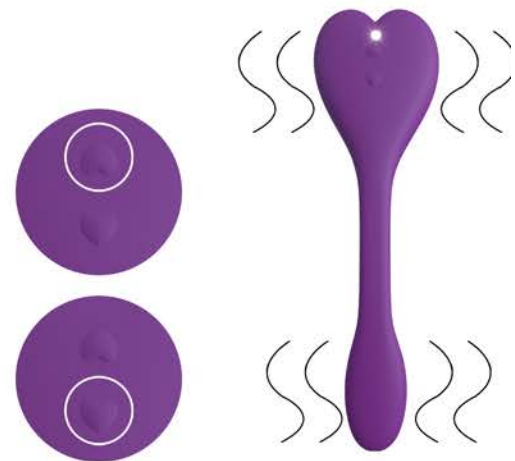

TURN OFF TOY

STEP 4.

Hold **TOP BUTTON** for 2 seconds to turn off **Motor 1**.

Hold **BOTTOM BUTTON** for 2 seconds to turn off **Motor 2**.



TURN ON HEART REMOTE (Stand-by Mode)

STEP 1.


Double click **TOP BUTTON** to turn on LED. (Stand-by Mode: *LED light will turn on but remote will not vibrate.*)



ACTIVATE RHYTHM HEART

STEP 2.

Double click **BOTTOM BUTTON** to activate rhythm for **Motor 3**.

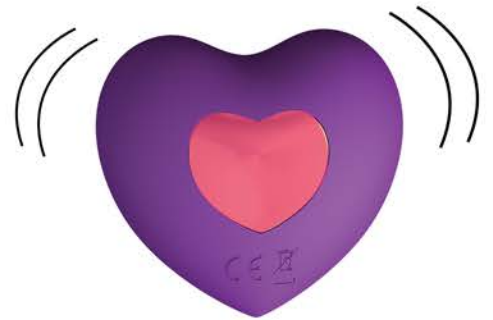

CHANGE RHYTHM

STEP 3.

Quick click **BOTTOM BUTTON** to change rhythm for **Motor 3**.



TURN OFF HEART REMOTE

STEP 4.

Hold **BOTTOM BUTTON** for 2 seconds to turn off **Motor 3**.



SYNCING HEART REMOTE WITH TOY


FURN ON TOY (Stand-by Mode)

STEP 1.

Quick click **TOP BUTTON** on **TOY** to turn on **Motor1**.

Quick click **BOTTOM BUTTON** on **TOY** to turn on **Motor 2**.

(Stand-by Mode: *light will begin to flash but toy will not vibrate.*)

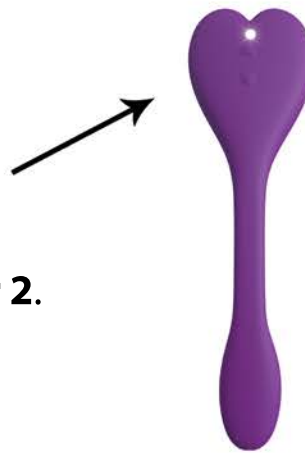

ACTIVATE RHYTHM


STEP 2.

Quick click **TOP BUTTON** on **HEART REMOTE**

activate rhythm for **Motor 1** in Toy.

Quick click **BOTTOM BUTTON** on **HEART REMOTE**

activate rhythm for **Motor 2** in Toy.

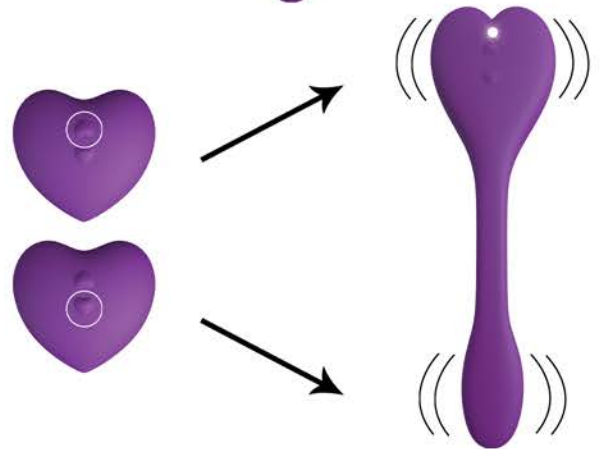

CHANGE RHYTHM


STEP 3.

Quick click **TOP BUTTON** on **HEART REMOTE**

change rhythm for **Motor 1** in Toy.

Quick click **BOTTOM BUTTON** on **HEART REMOTE**

change rhythm for **Motor 2** in Toy.

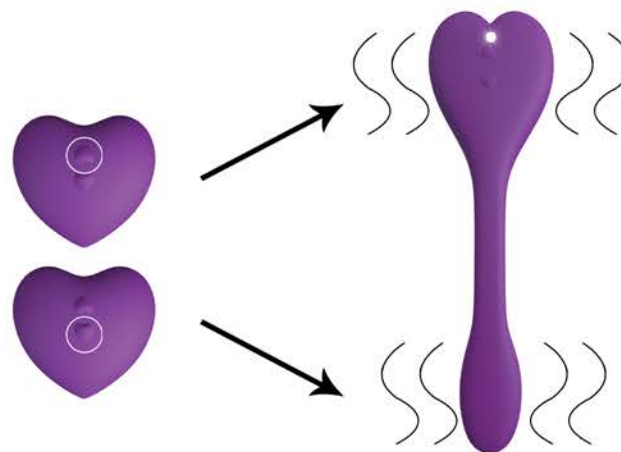

FURN OFF TOY

STEP 4.

Hold **TOP BUTTON** on **HEART REMOTE** for

2 seconds to turn off **Motor 1** in Toy.

Hold **BOTTOM BUTTON** on **HEART REMOTE** for

2 seconds to turn off **Motor 2** in Toy.

