
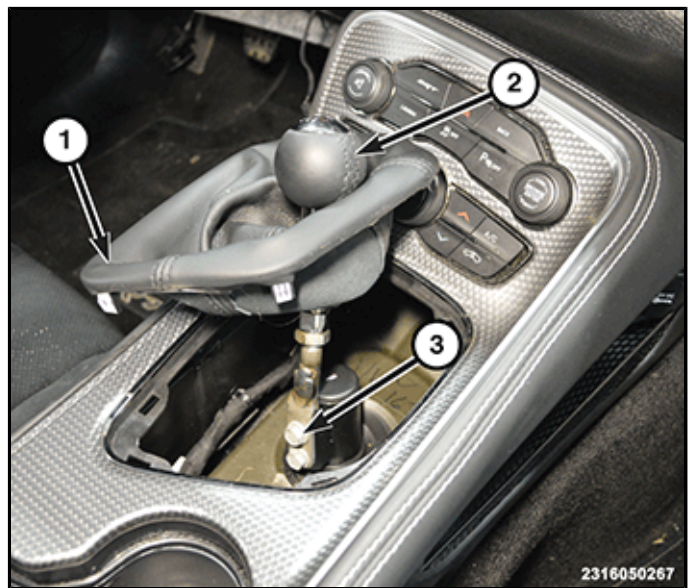



## REMOVAL

1. Apply the parking brake.
2. Move the front seats to the full forward position.
3. On both sides of the floor console, remove the bolt covers (1) and the bolts (2) at the rear of the floor console.
4. Move the seats to the full rear position.
5. Disconnect and isolate the negative battery cable.
6. For manual shifter using a trim stick or equivalent, carefully release the retaining clips and lift the shifter boot (1).
7. Remove the bolts (3) then the shift lever (2).

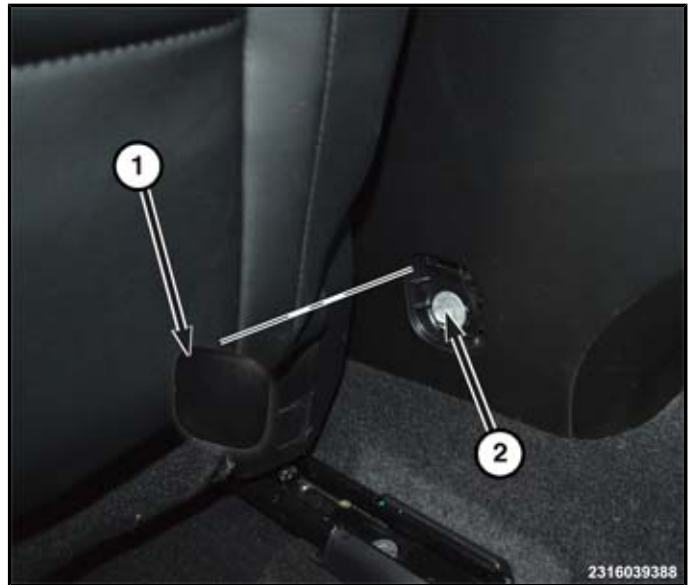

Manual Shifter

8. For automatic shifter, place the shifter in the Neutral position.
9. Using a trim stick or equivalent, carefully release the retaining clips and lift the shifter bezel (2).
10. Remove the screw (4) then lift the shifter knob (1) and remove.

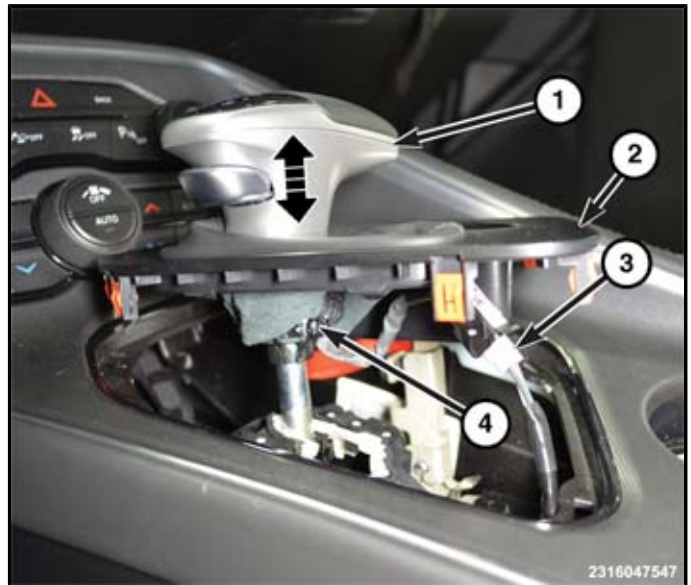

Automatic Shifter

11. Using a trim stick or equivalent, starting at the rear carefully release the retaining clip and lift the floor console panel (1). Disconnect the wire harness connectors and remove.



12. Remove the two screws (1) at the front of the floor console (2).
13. Remove the two screws (3) and position the manual park release (4) aside, if equipped.
14. Disconnect the wire harness connector (5).
15. Slide the floor console rearward and remove.

