

## REMOVAL

1. Disconnect and isolate the negative cable from the battery. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector before disconnecting the negative cable from the battery.
2. Remove the floor console from the vehicle. (Refer to 23 - Body/Interior/CONSOLE, Floor/Removal).
3. Place the floor console assembly on a suitable work surface with the top surface facing down.

**NOTE:** Be certain to take the proper precautions to prevent the floor console from receiving cosmetic damage during the following procedures.

4. Locate the media hub housing (2) on the front of the console rear storage bin (1).
5. Disconnect the console wire harness connectors (3) from the media hub housing.
6. Compress each of the four latch tabs (4) integral to the media hub housing while pushing the housing out through the mounting hole in the floor console storage bin.

