KEY FOB PROGRAMMING

NOTE: Do not put a Laptop or other wireless device (cell phone, cell phone, audio device, etc.) on top of or near the center console (between the seats to the dash). The Low Frequency (LF) antenna is below the center console, and these devices may interrupt programming. Ensure that the key fob that is being programmed is inside the vehicle, away from nearby consumer electronics. Disconnect aftermarket cell phone chargers before attempting to program the key fob.

Using Service Library, obtain a Personal Identification Number (PIN) before to starting the programming routine.

Sitting in the vehicle with the doors closed is a requirement for this routine to complete correctly.

NOTE: The key fob must be held against the Keyless Ignition Node (KIN) during key fob programming.

- 1. Using the diagnostic scan tool, select the Radio Frequency Hub (RFH).
- 2. Select the "Miscellaneous Functions" tab.
- 3. Select and run the "Program Ignition FOBIKs" procedure and follow the screen prompts.

If the key fob fails to program or is inoperative (Refer to 08 - Electrical/Power Locks/Diagnosis and Testing).