

## Universal Serial Bus (USB) Hub


### Special Tool(s) / General Equipment

Interior Trim Remover


### Removal


#### Vehicles with floor console

1. Open the floor console storage bin door.

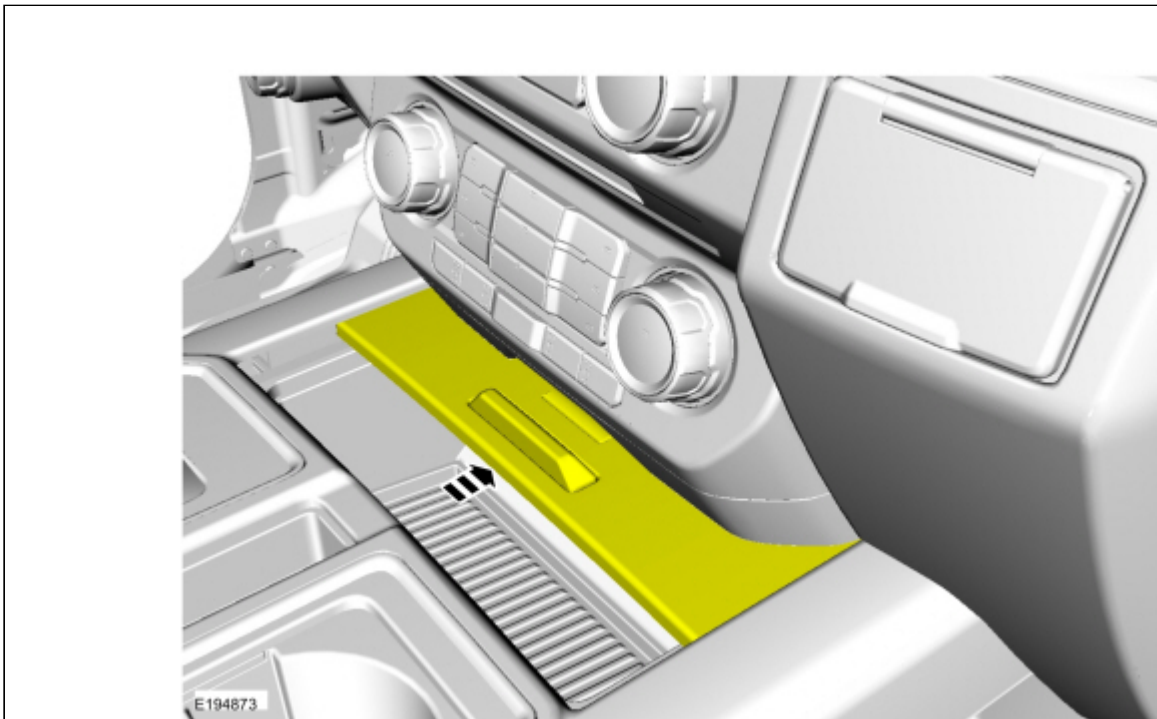

 
2. Remove the USB hub.
  - Disconnect the electrical connectors.  
Use the General Equipment: Interior Trim Remover



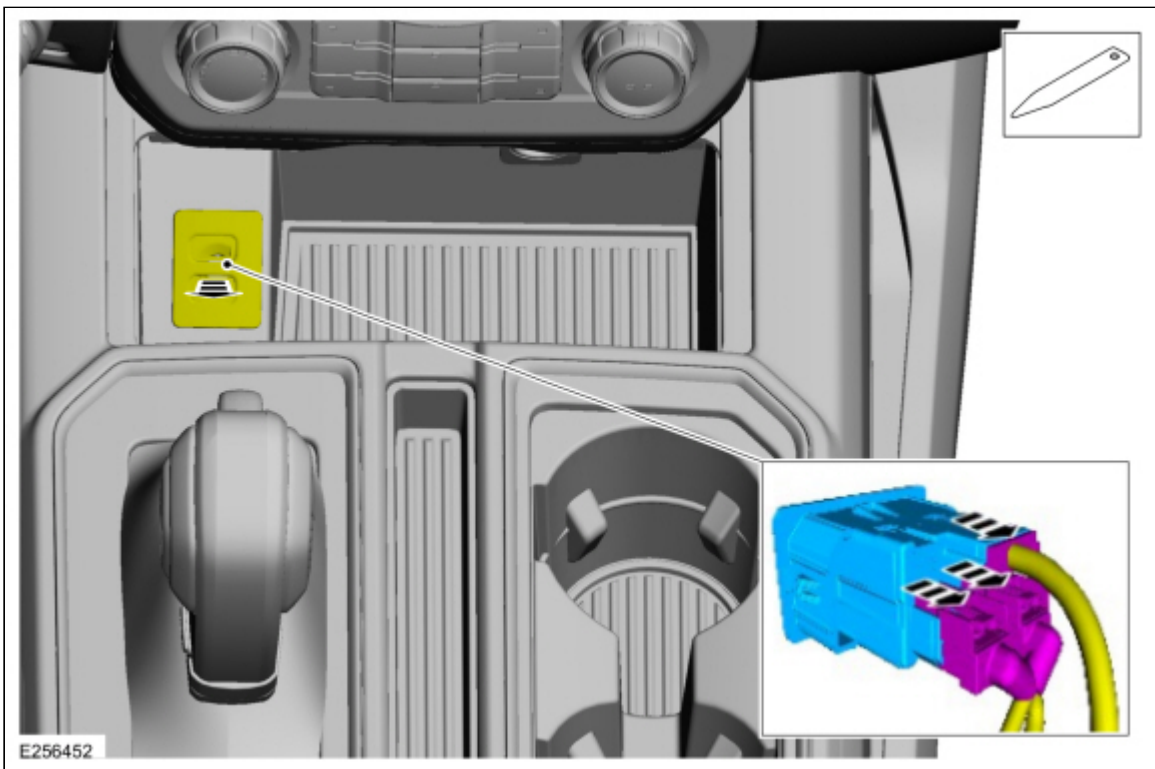

### Vehicles without floor console

3. Remove the USB hub.
  - Disconnect the electrical connectors.
  - Use the General Equipment: Interior Trim Remover

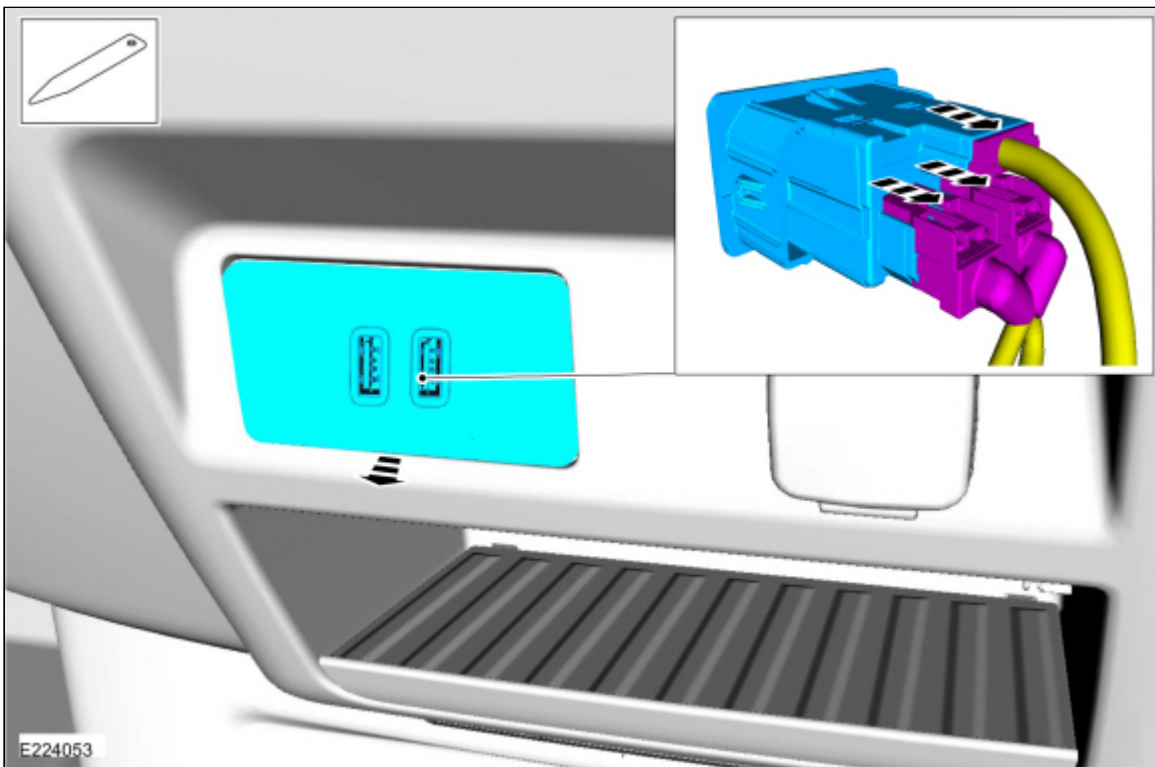

### Installation

1. To install, reverse the removal procedure.

