

SYNC Module [APIM]

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.

All vehicles


1. **NOTE:** 12 inch screen shown, 8 inch screen is similar.

Release the clips and remove the upper centerstack bezel.
Use the General Equipment: Interior Trim Remover

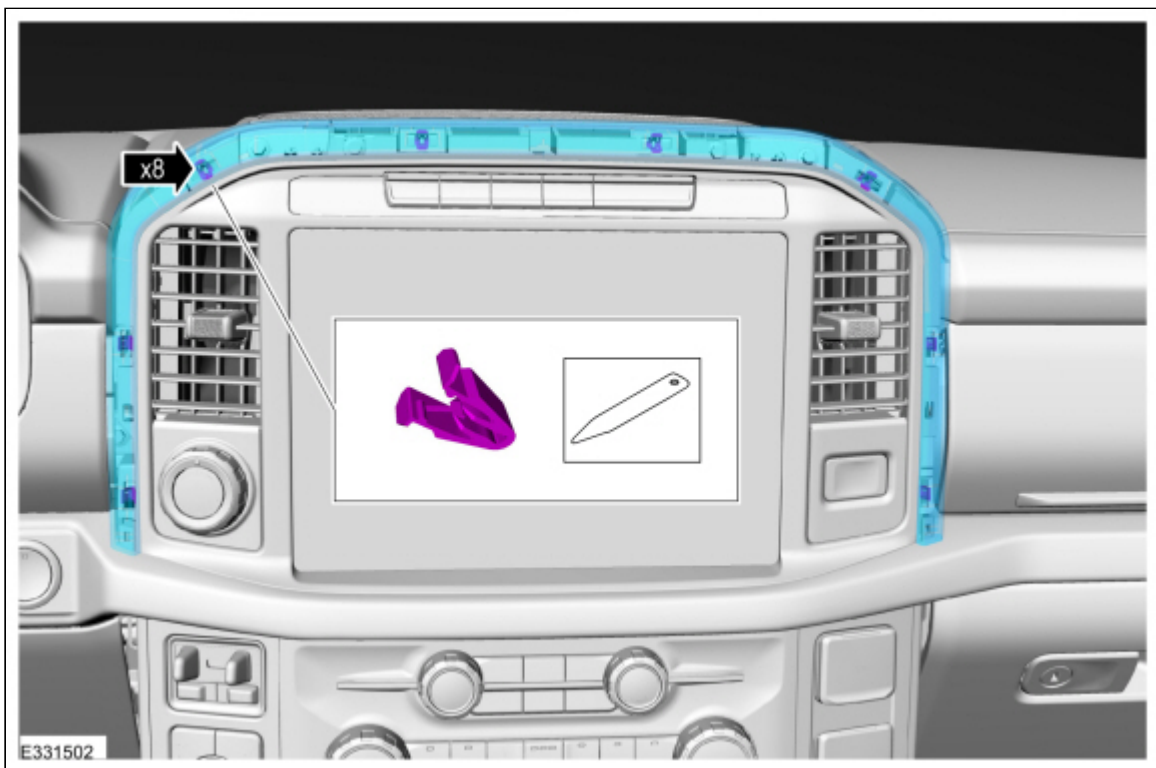



2. Release the clips and remove the RH instrument center trim panel.
 - On vehicles equipped with push button start disconnect the electrical connector.
Use the General Equipment: Interior Trim Remover



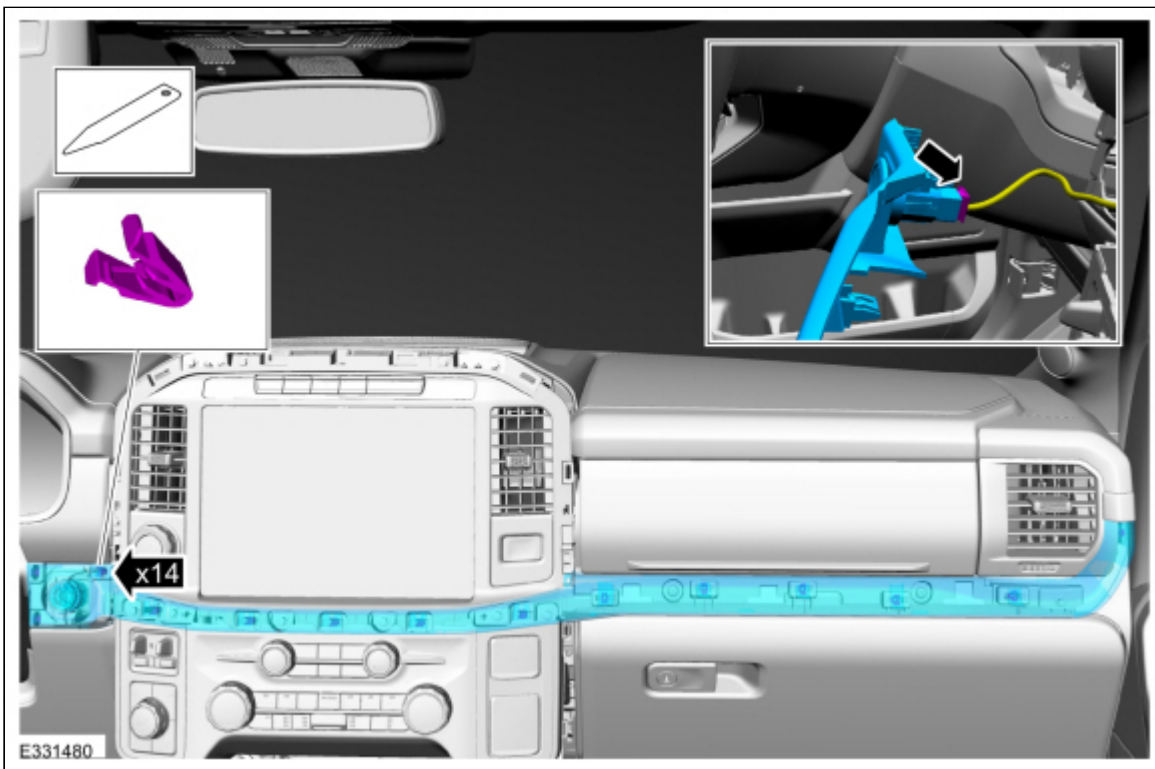


Vehicles equipped with a floor console

 3. Remove the floor console.
Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
4. Remove the lower centerstack trim panel.
 - Remove the bolts.
 - Torque: 22 lb.in (2.5 Nm)
 - Release the clips.
 - Disconnect the electrical connectors.

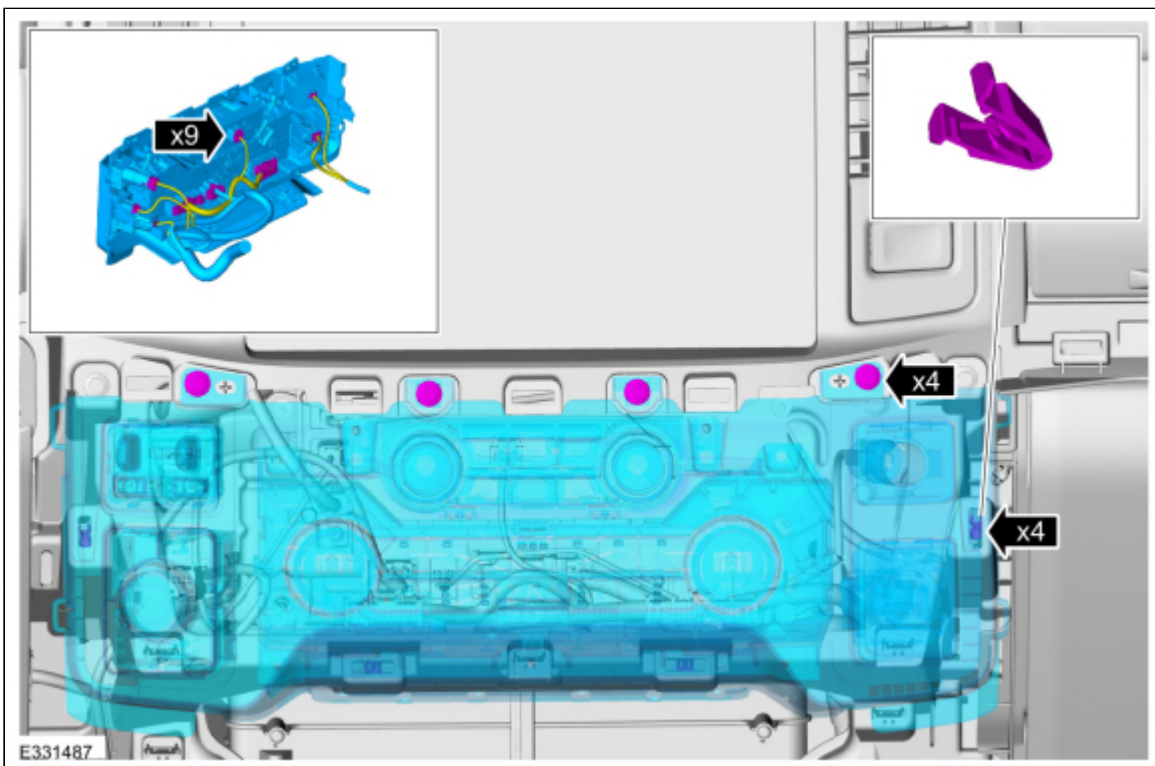


Vehicles without a floor console

5. Remove the pin-type retainers and the RH lower instrument panel closeout trim panel.


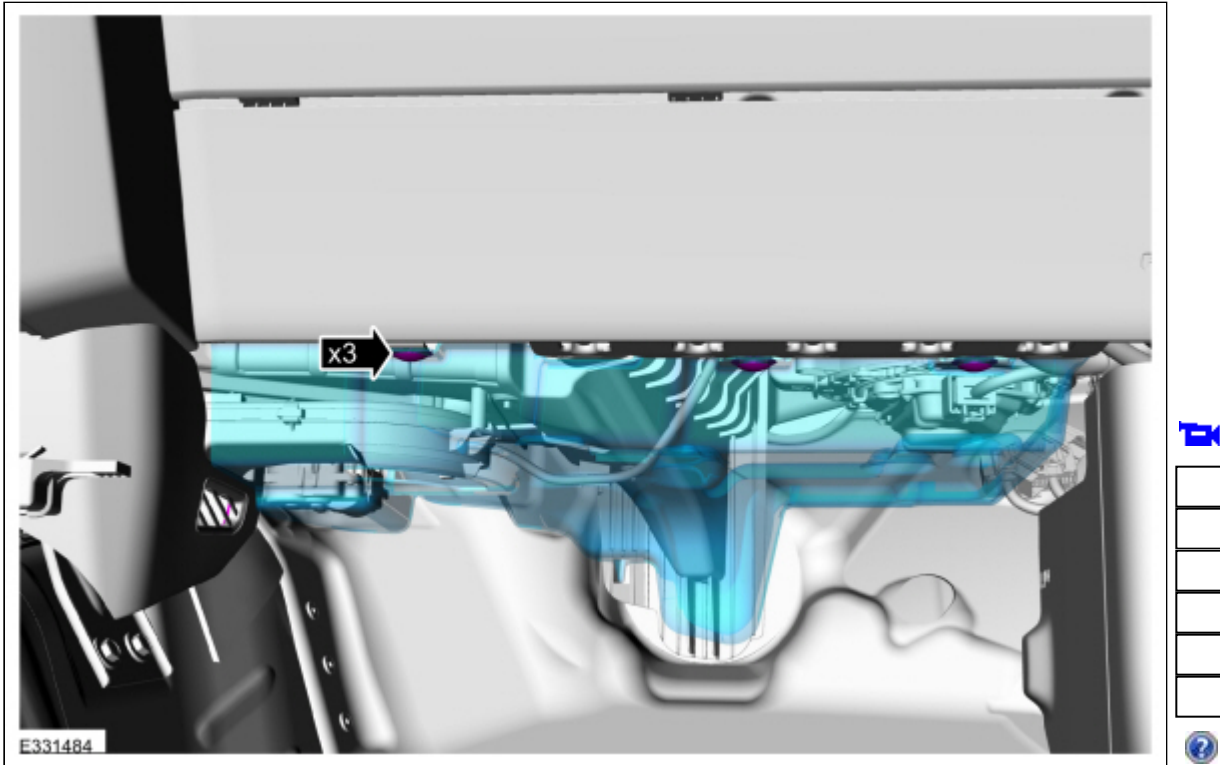


6. Remove the bolt.
Torque: 22 lb.in (2.5 Nm)


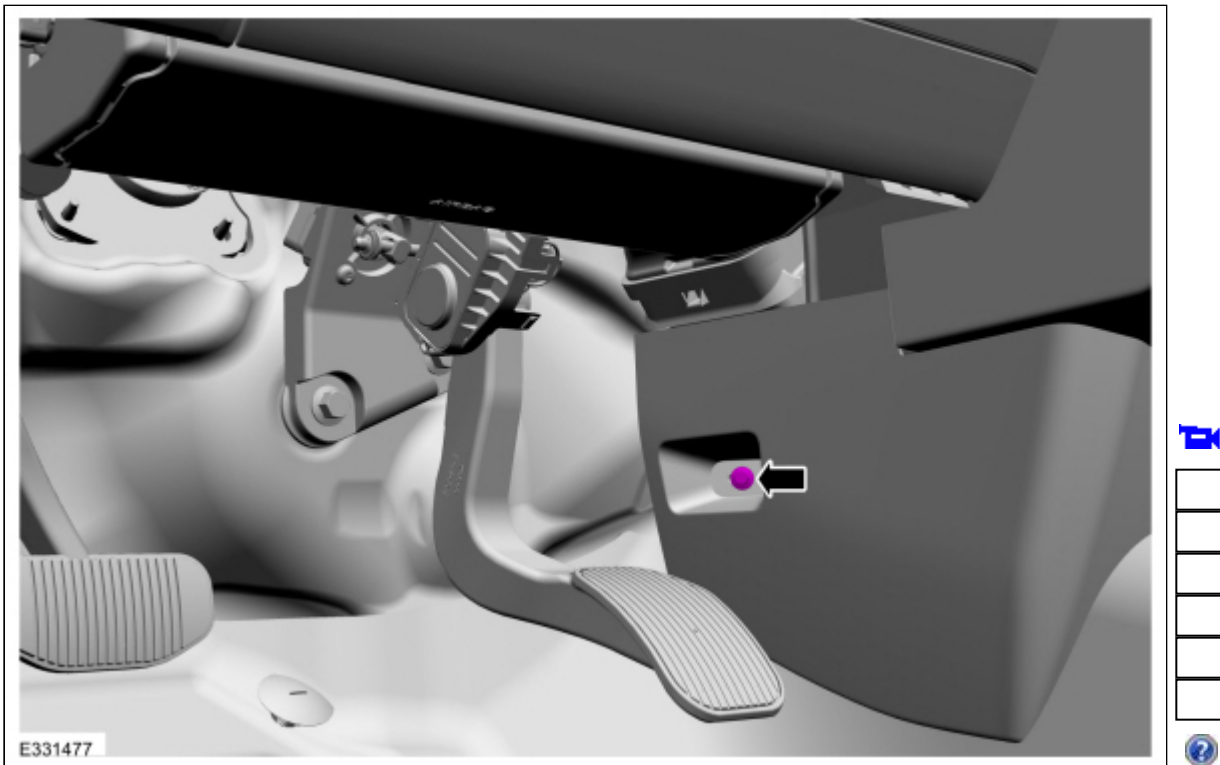


 7. Release the clips and remove the instrument panel lower trim panel.




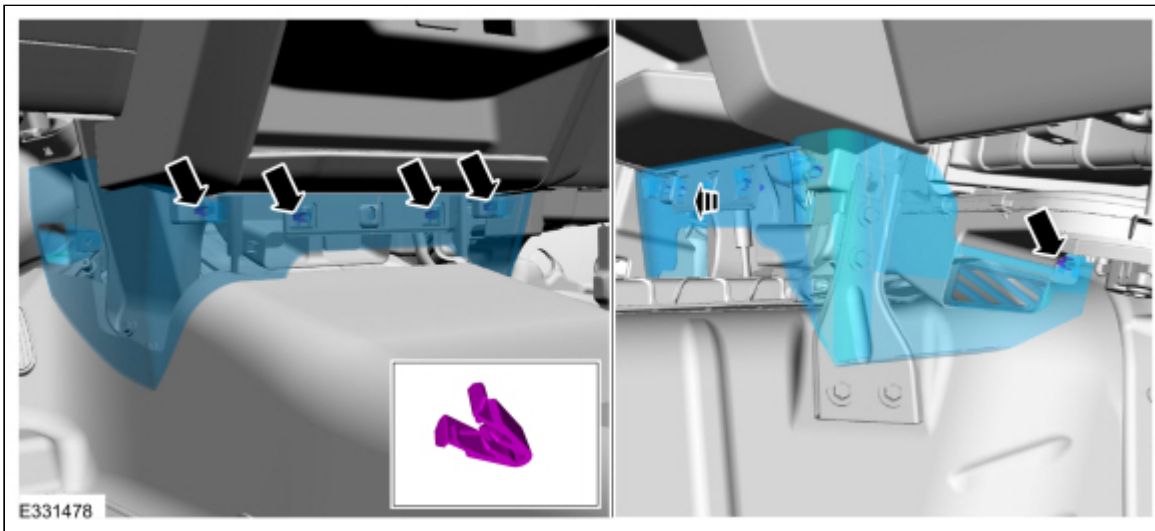


 8. Release the clips and remove the LH lower centerstack trim panel.
Use the General Equipment: Interior Trim Remover

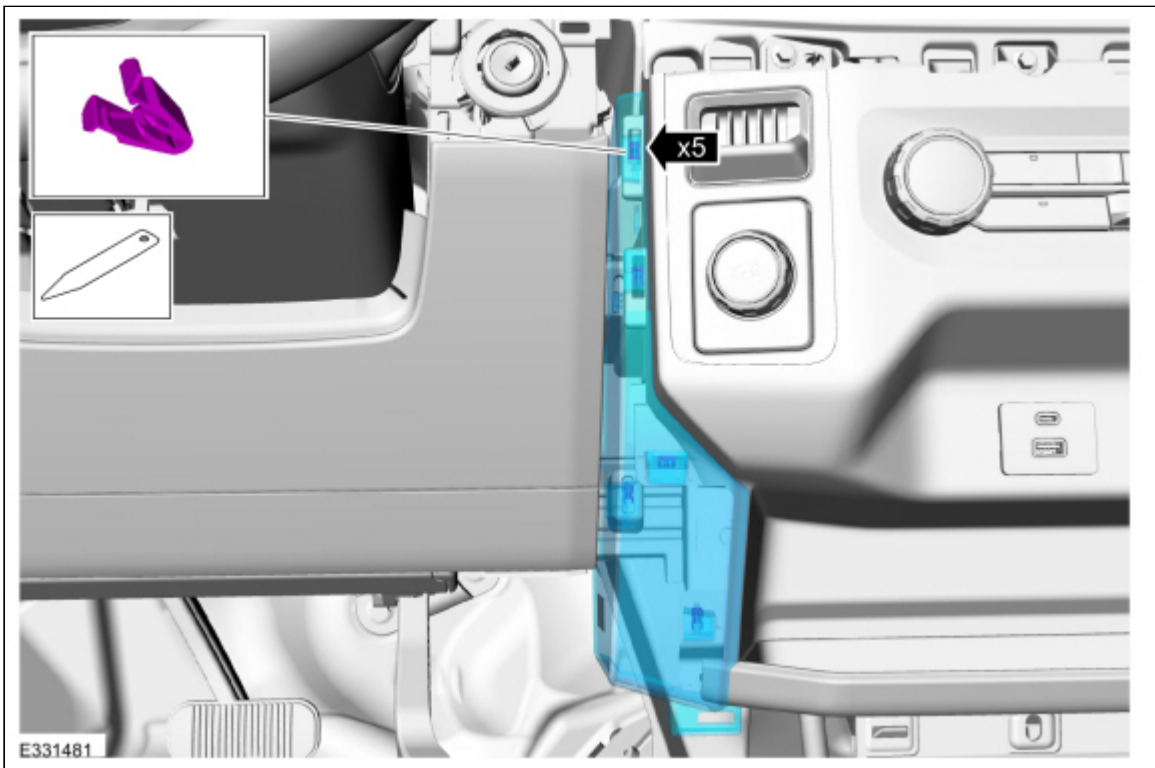


 9. Release the clips and remove the RH lower centerstack trim panel.
Use the General Equipment: Interior Trim Remover



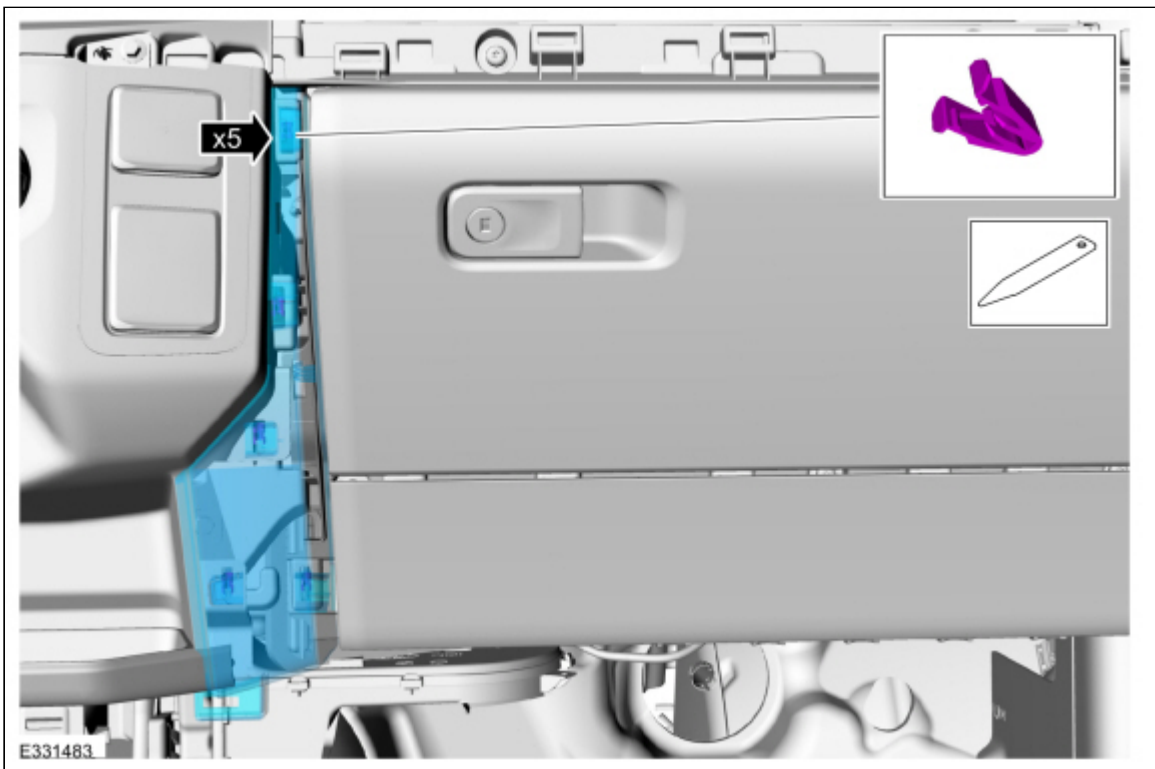



10. Remove the lower centerstack trim panel.
- Remove the bolts.
Torque: 22 lb.in (2.5 Nm)
 - Release the clips.
 - Disconnect the electrical connectors.

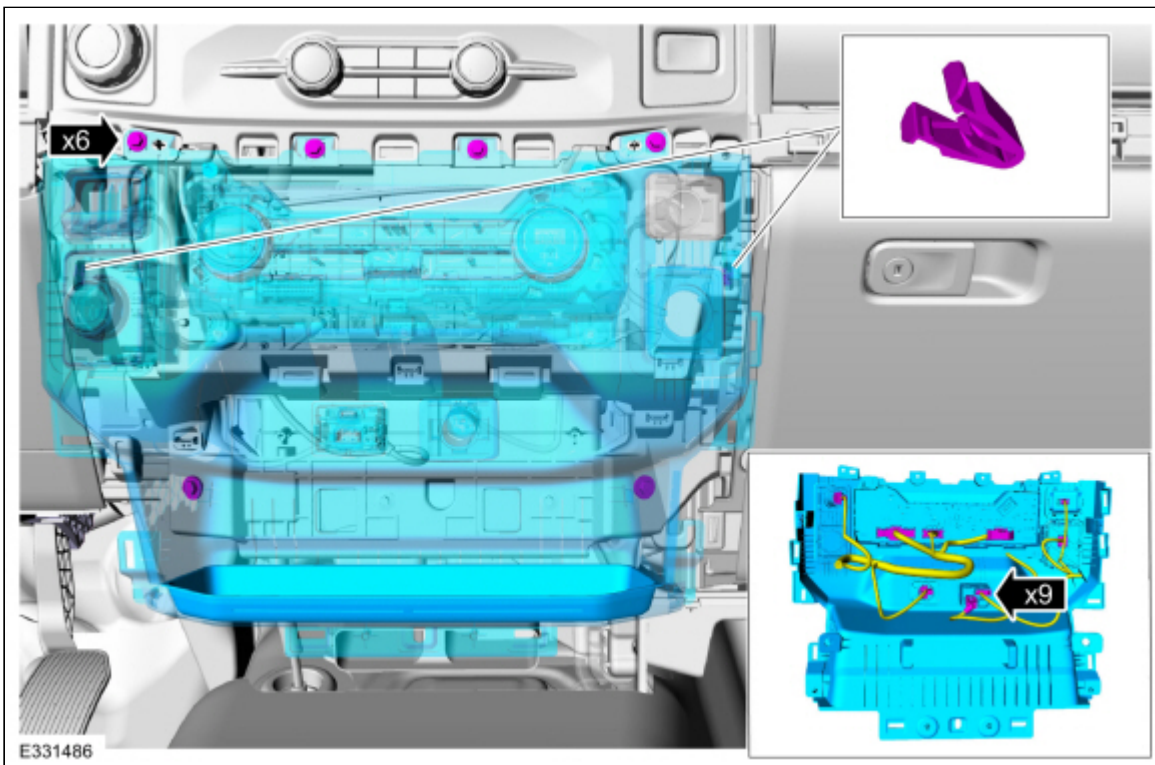

All vehicles

 11. Disconnect the electrical connectors, remove the screws and the APIM .



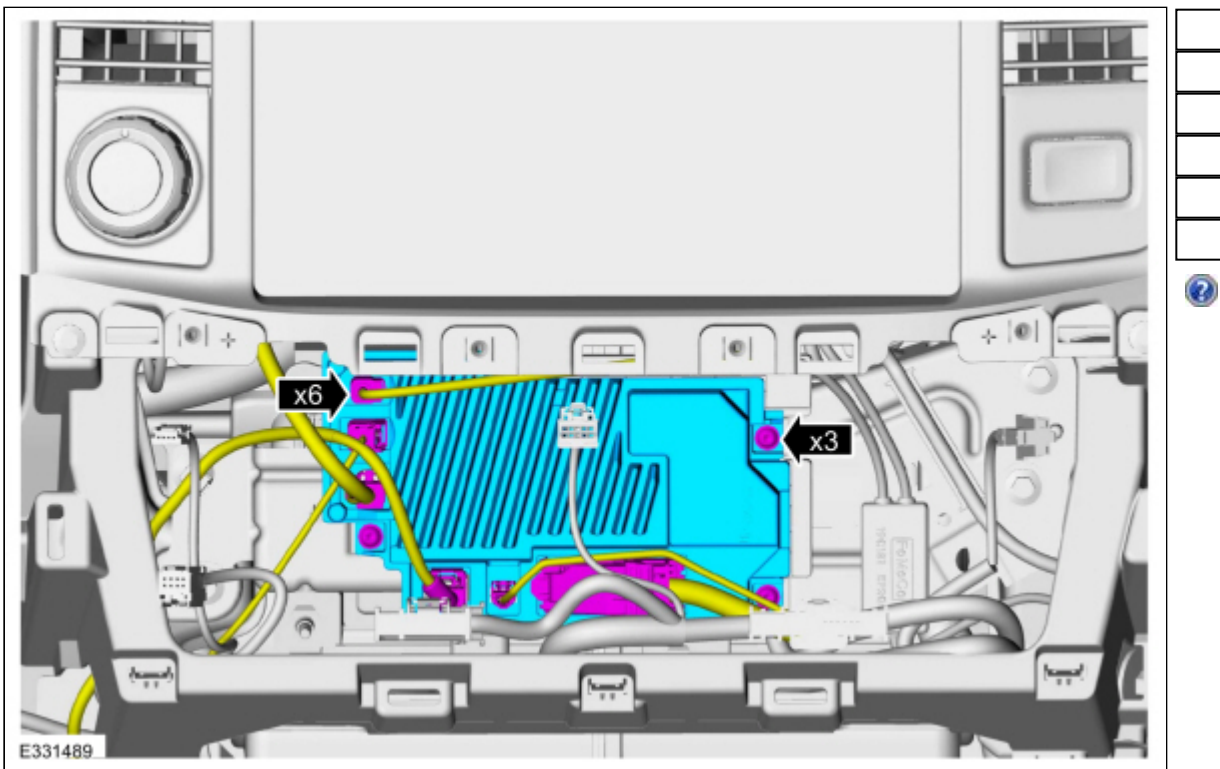

Installation

1. To install, reverse the removal procedure.
2. If a new APIM is being installed, program the APIM to the correct software level.
Refer to: [Module Programming](#) (418-01A Module Configuration, General Procedures).