

REMOVAL

1. Lower the steering column to the lowest position.
2. Using a trim stick (1) or equivalent, carefully remove the instrument cluster bezel (2).

