

## REMOVAL

1. Disconnect and isolate the negative cable from the battery. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector before disconnecting the negative cable from the battery.
2. Remove the instrument cluster bezel from the instrument panel. (Refer to 23 - Body/Instrument Panel/BEZEL, Instrument Cluster/Removal).
3. Remove the four screws (1) that secure the radio to the instrument panel support structure (2).
4. Pull the radio out from the instrument panel far enough to access the connections at the back of the radio.
5. Disconnect the antenna connectors (3) and the instrument panel wire harness connector (2) from the back of the radio.
6. If equipped, disconnect the Universal Serial Bus (USB) connector (1) from the back of the radio.
7. Remove the radio from the instrument panel.

