


## Body/Seats/SEAT, Front/Removal

# REMOVAL


## Driver Side

1. Before proceeding with the following repair procedure, review all warnings and cautions.
2. Remove the trim cover (1).

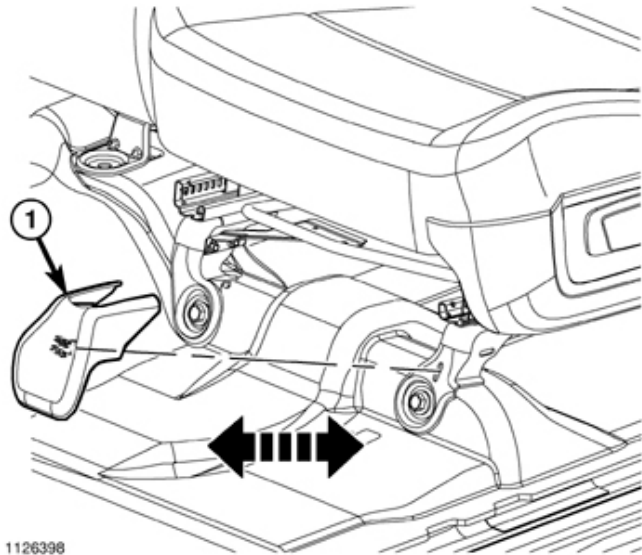


1126398

3. Disconnect the electrical connectors (1) and (2), if equipped.

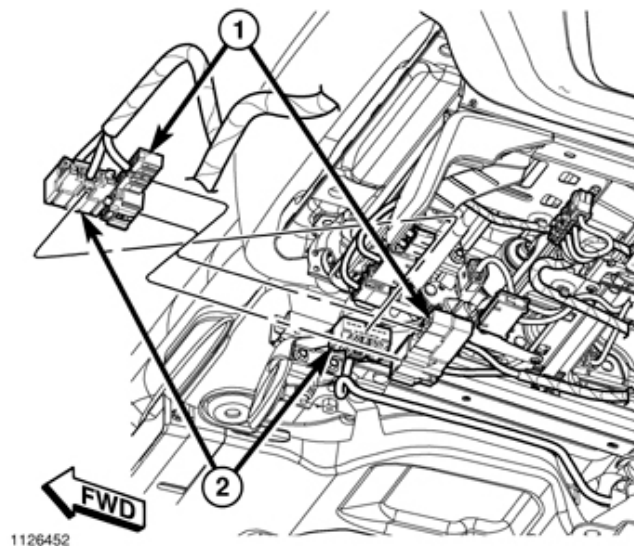

1126452


4. Remove the front mounting bolts (1) from the driver side seat.
5. Remove the rear bolts (2) and remove the driver seat.

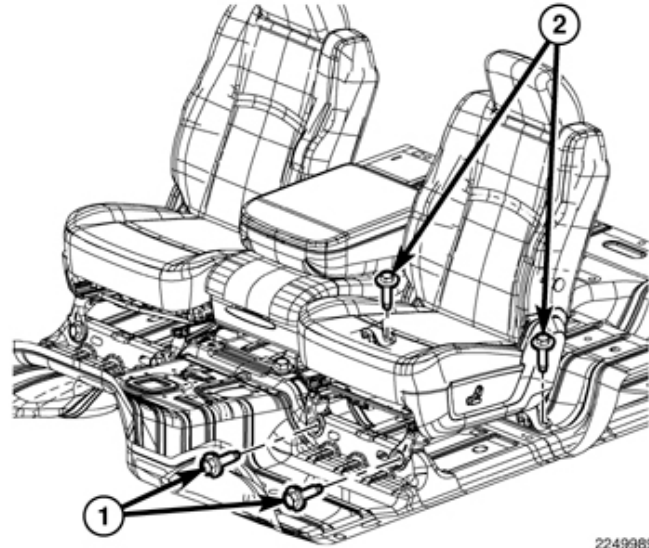

2249969


## Passenger Side

1. Before proceeding with the following repair procedure, review all warnings and cautions.
2. Carefully release the front clip and separate the jack cover (2) from the front of the riser (1).
3. Carefully pull the cover forward and release the rear hook from the rear of the riser (3).

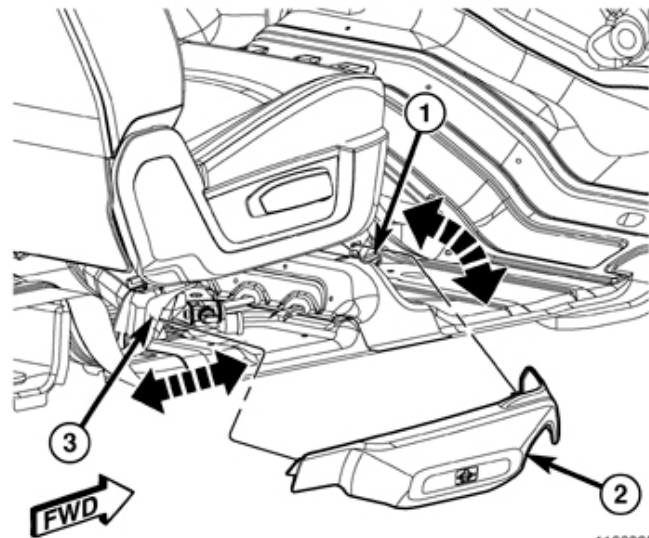


1126385

4. Disconnect the electrical connector (1), if equipped.

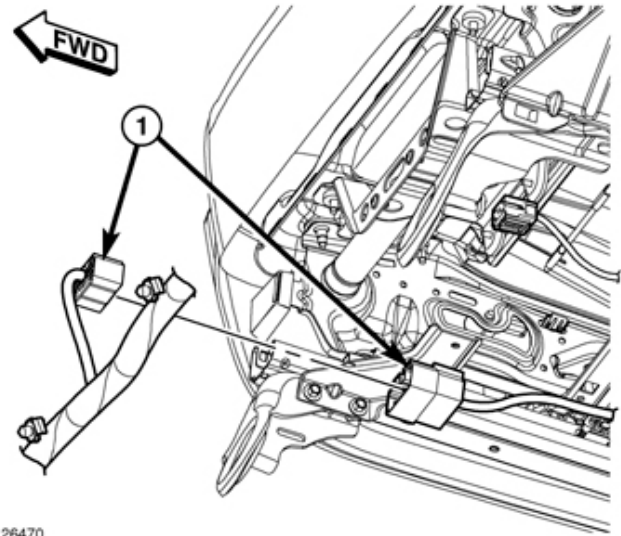


1126470

5. Remove the front passenger seat bolts (3).
6. Remove the center seat bolts (2), if equipped with the center seat.
7. Remove the rear bolts (1) and remove the passenger seat assembly.

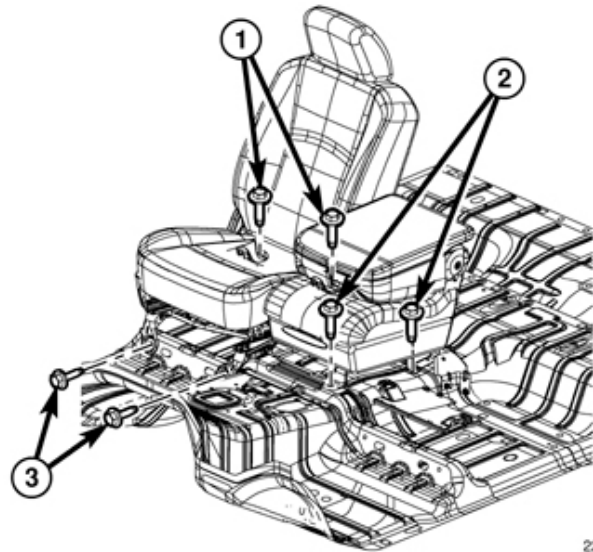

2250001


8. Disconnect the rear air duct (1) by sliding the telescoping duct section, attached to the seat, rearward.

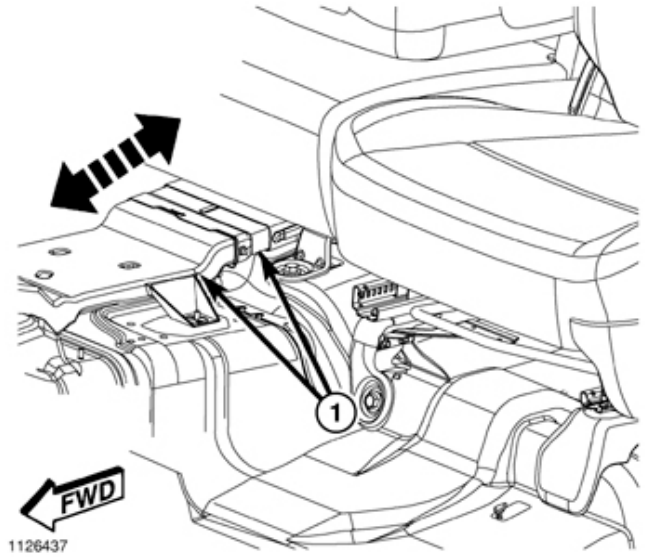

## Body/Seats/SEAT BACK, Front/Disassembly


# DISASSEMBLY

1. Remove the seat back.
2. Separate the side shield from the seat back (2) and remove the side shields (1).

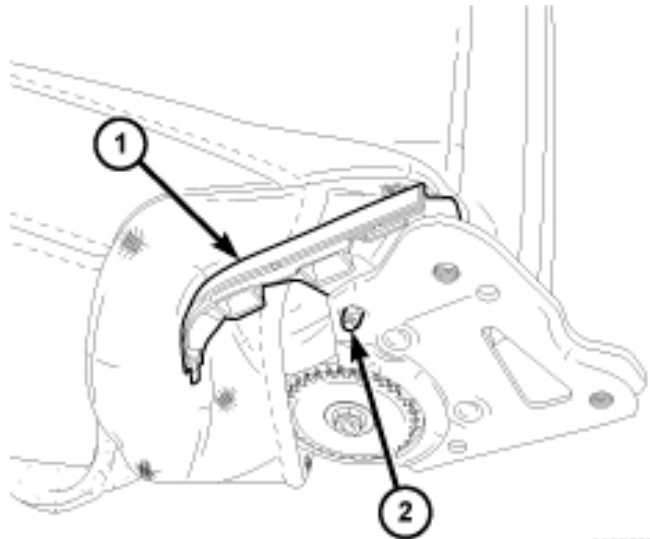


1162023

3. Remove the two screws (1) and remove the brace (2).

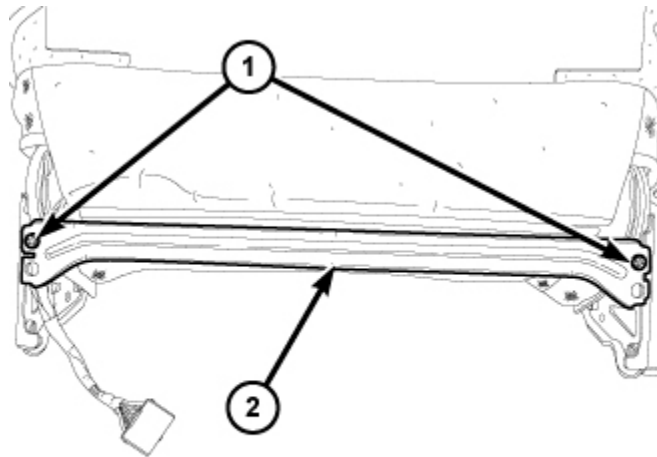


1162725

4. Push in the buttons on both headrest sleeves, pull the headrest up and remove.

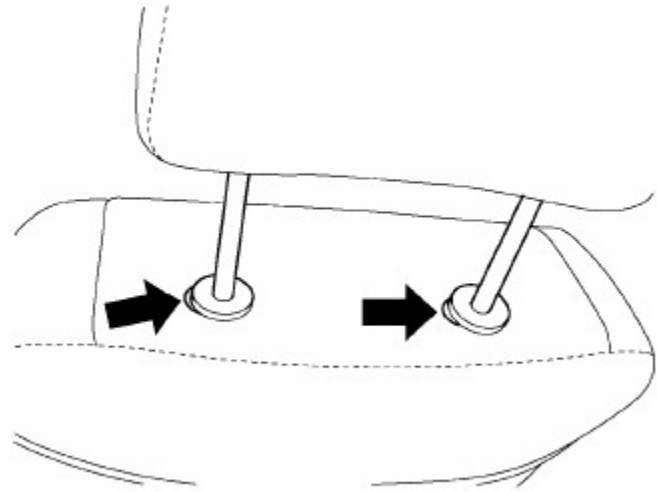


8120dd63

5. Separate the J-straps (1 and 2) and pull cover up over frame.

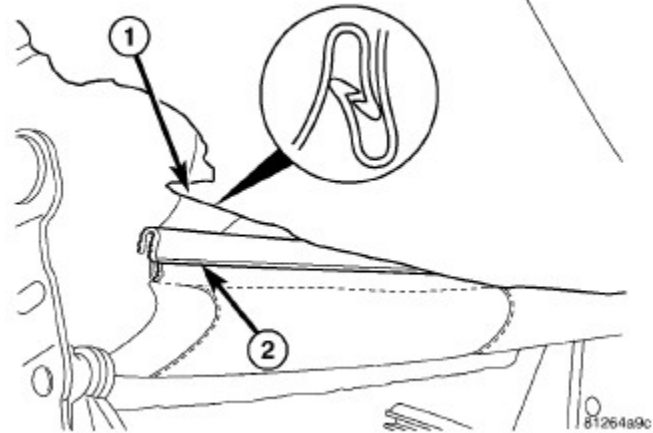


81264a9c


6. Position the foam aside and strike the bottom of the headrest sleeves (1) with a rubber mallet or equivalent, and remove.
7. Remove the cover.

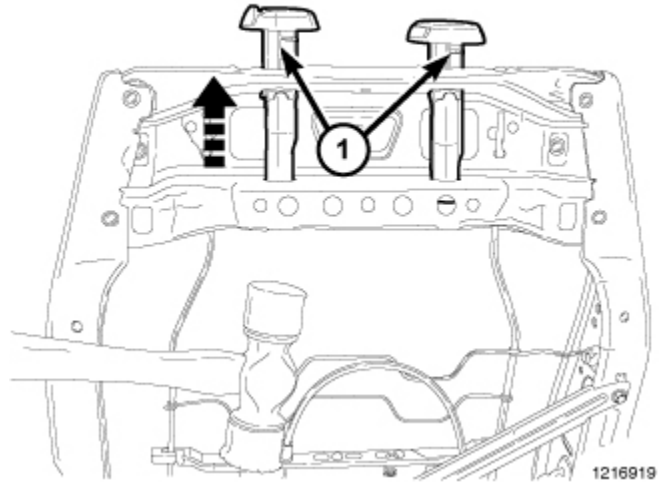

8. Release the vented seat bag (1) from the vent motor (2) clips.
9. Remove the foam cushion from the seat back frame.

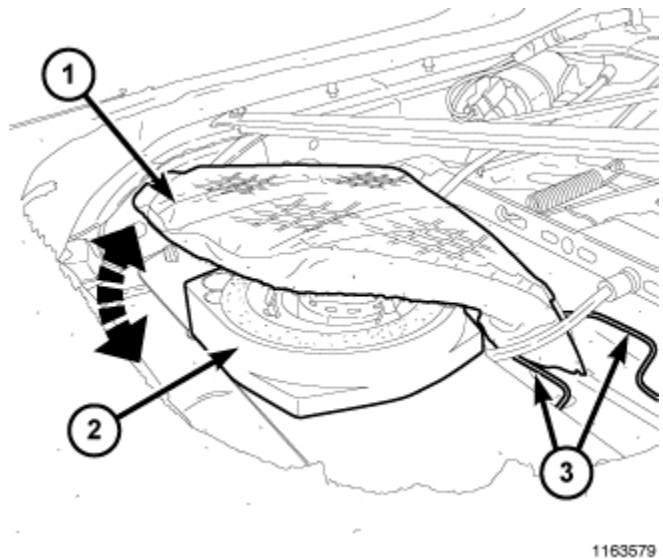


10. Disconnect the lumbar motor electrical connector (1) and remove the bolt (3).

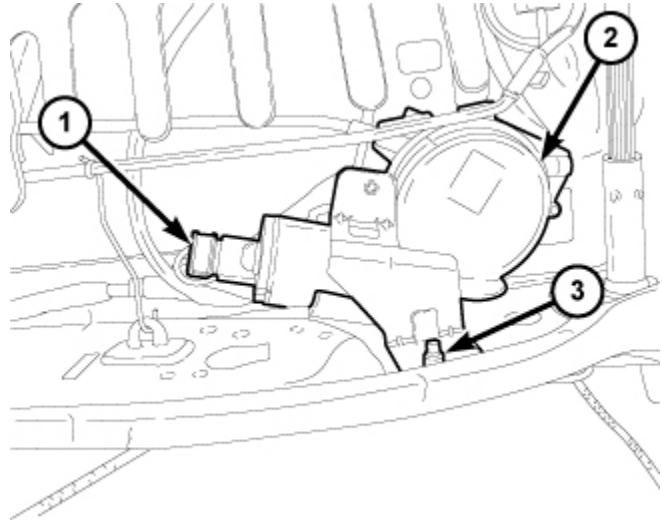

1163793


11. Separate the lower lumbar mat (1) from the clips (2).

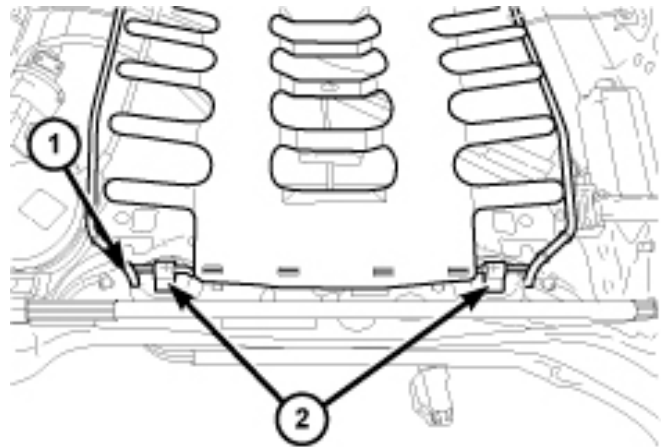

1164257



12. Release the lumbar mat side wires (3) by pulling out on the wire supports and then pulling them in.
13. Release the clips (2) and separate the vented seat motor from the lumbar support, if equipped.
14. Pull the upper support wires (1) down and release the lumbar mat from the seat back frame.

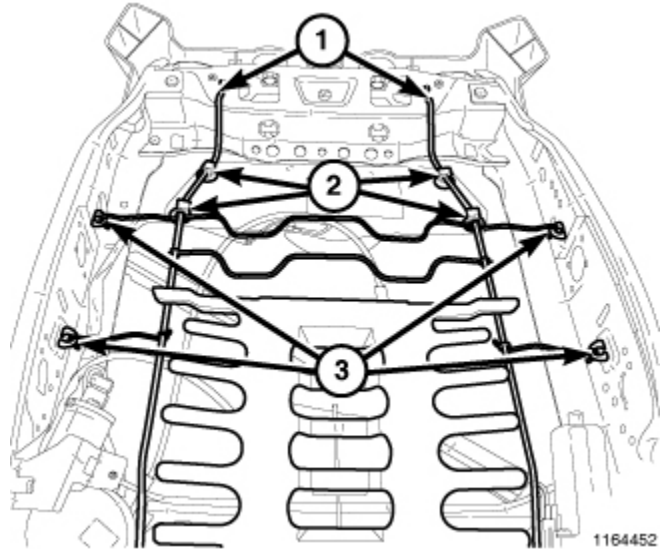


1164452

## Body/Seats/COVER, Seat Cushion, Front/Removal


# REMOVAL

## Manual


1. Separate the seat back cover straps (2) from under the seat cushion.

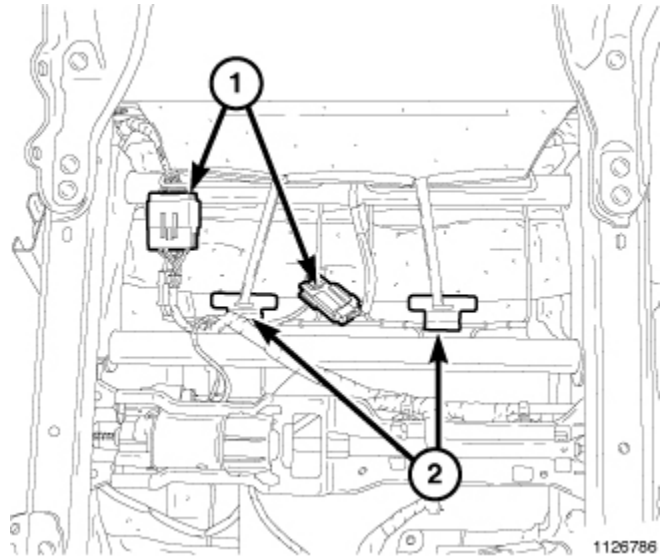


2. Remove the side shield screws (2) in the back.

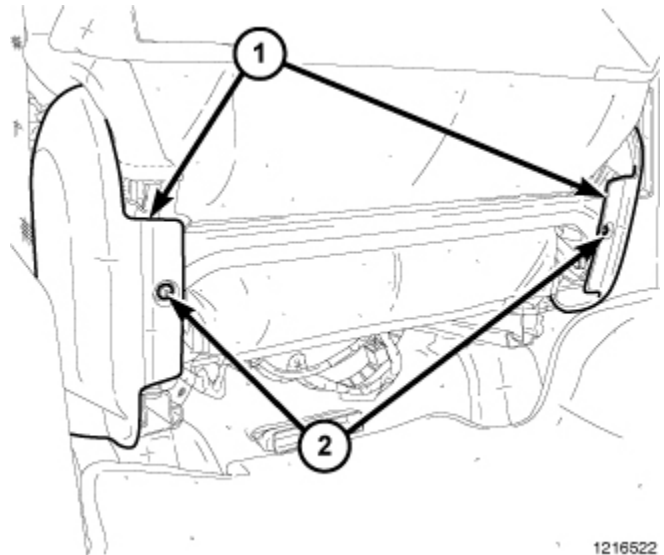


3. Remove the inboard shield screw (1).
4. Remove the inboard side shield (2).

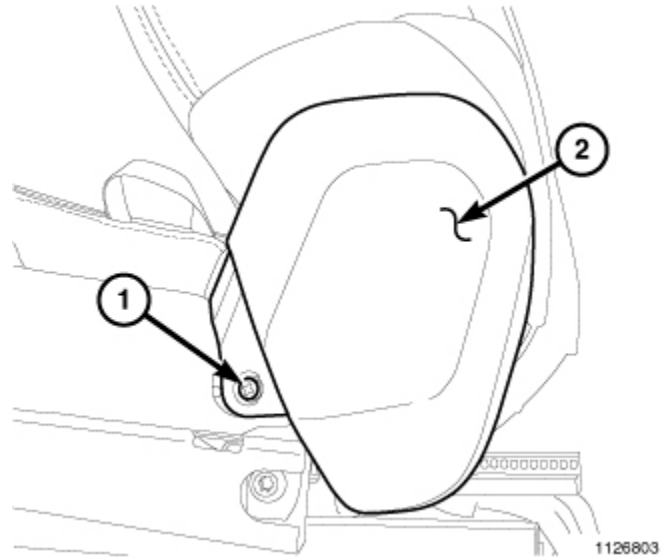

5. Using a door handle clip tool (1) or equivalent, release the clip holding the handle (2) onto the seat and remove the handle.
6. Using trim stick, release the seven tabs and separate the center bezel from the outboard side shield.
7. Pull the bezel rearward and release the front retaining tab.

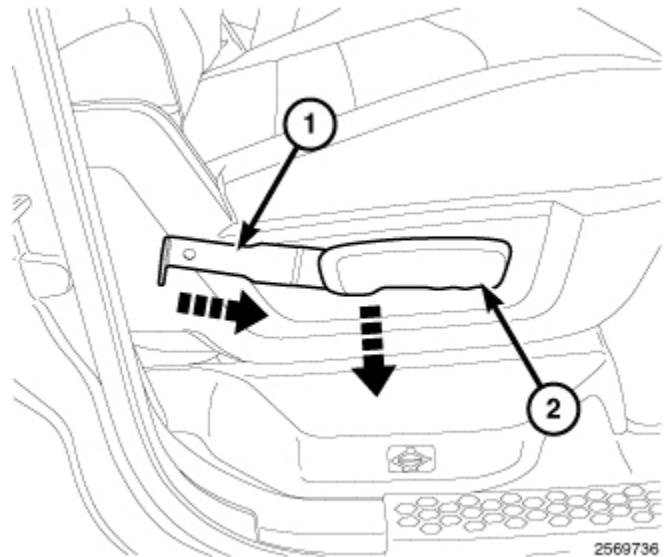


8. Remove the screw (1).
9. Release the retaining clips (2) and remove the outer side shield.

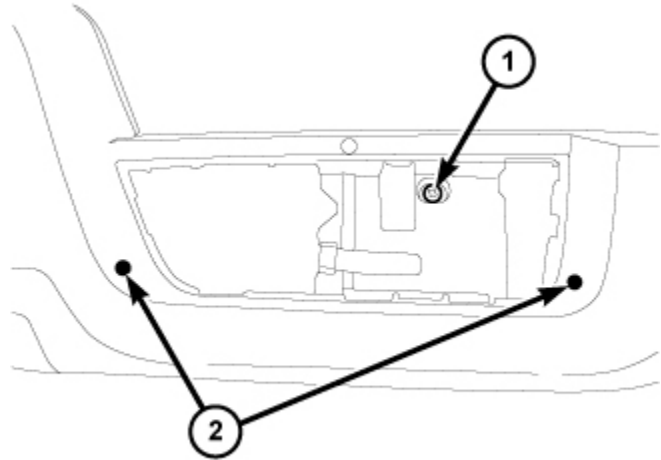


1158005

10. Separate the clip (1) and separate the recliner rod (2) from the lever.
11. Remove the push pin fastener (3).

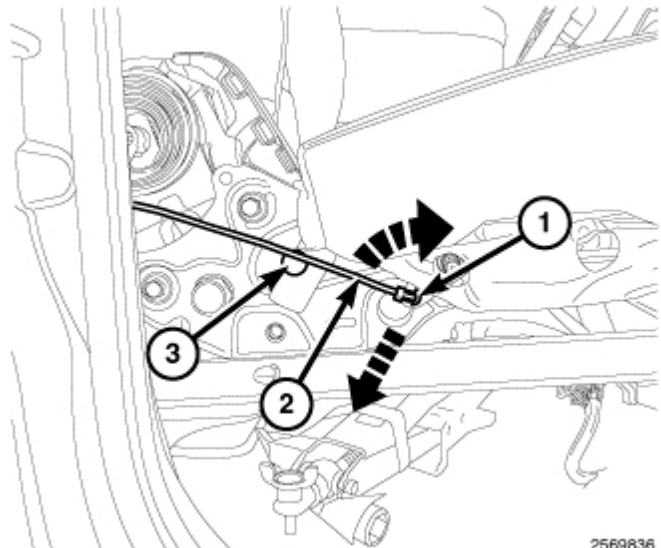


2569836

12. Separate the cover J-straps (1) from the sides and remove the foam/cover assembly.

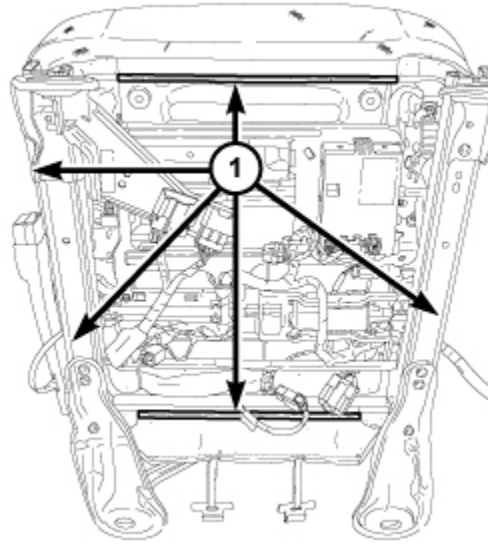

1221724


13. Remove the 10 hog rings (2) and separate the cover (1) from the foam.

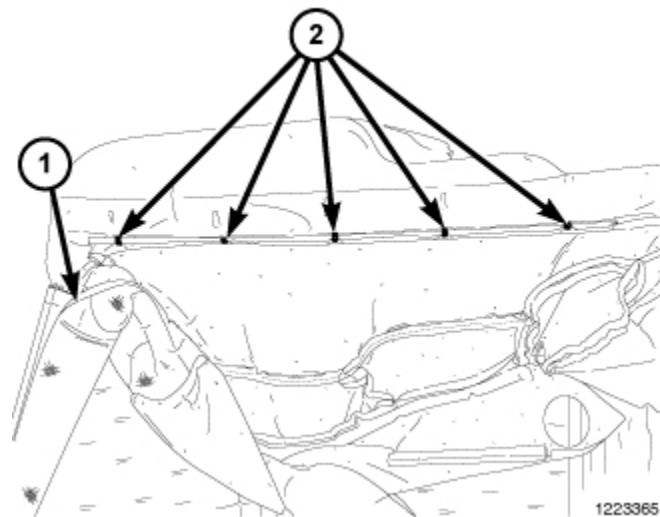


1223365

## Power Without Vented Seat


1. Remove the front seat.
2. Separate the seat back cover straps (2) from under the seat cushion and disconnect the electrical connectors (1).

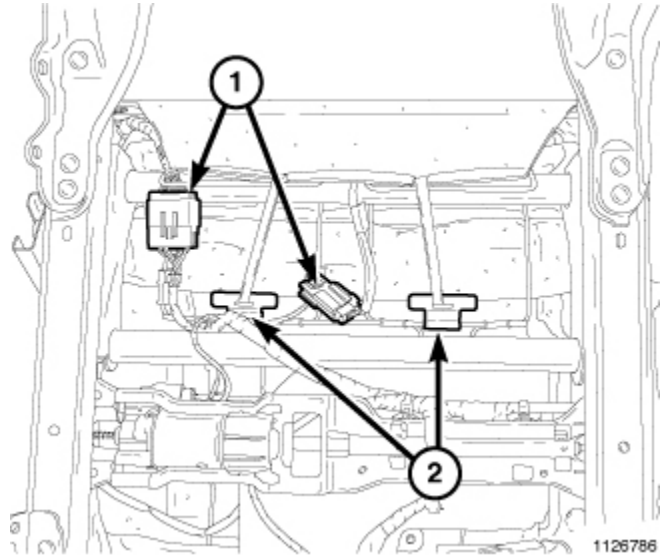

3. Remove the side shield screws (2) in the back.

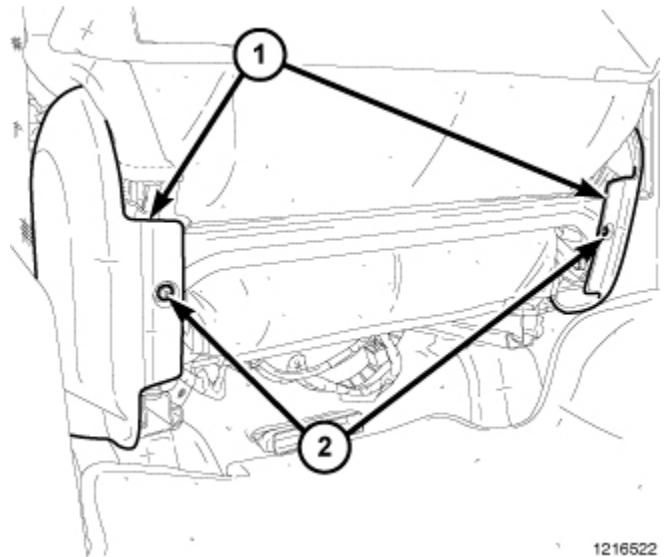


4. Remove the inboard shield screw.
5. Remove the inboard side shield.

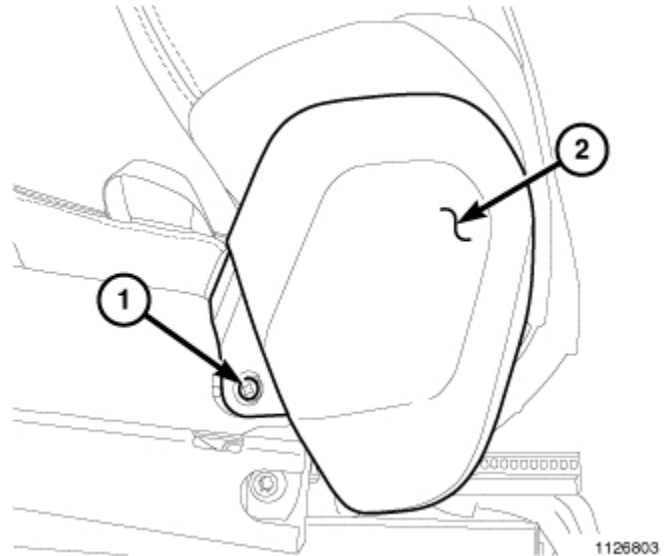


**CAUTION:** Disconnect the lumbar control switch electrical connector beneath the seat, prior to removing the power seat switch bezel from the seat. Failure to follow these instructions can result in damage to the lumbar control switch.

6. If equipped, disconnect the lumbar control switch electrical connector (1).

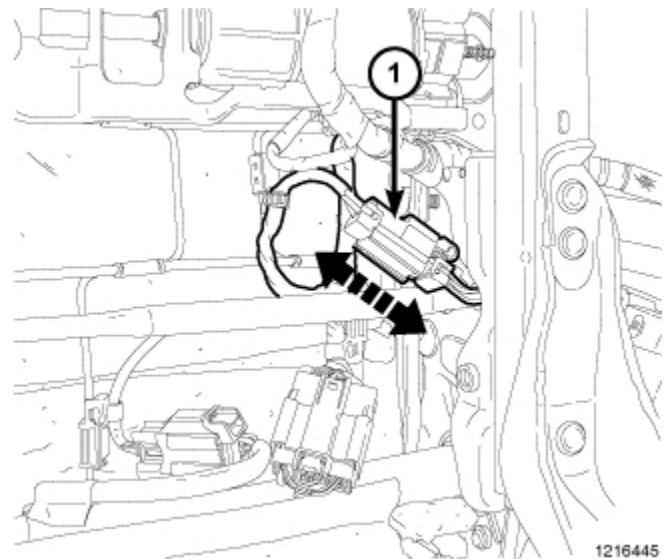


7. Using trim stick, release the seven tabs (3) and separate the bezel (1) from the outboard side shield.
8. Pull the bezel (1) rearward and release the front retaining tab (2).
9. Disconnect the wire harness connectors from the power seat switch and memory seat switch, if equipped.

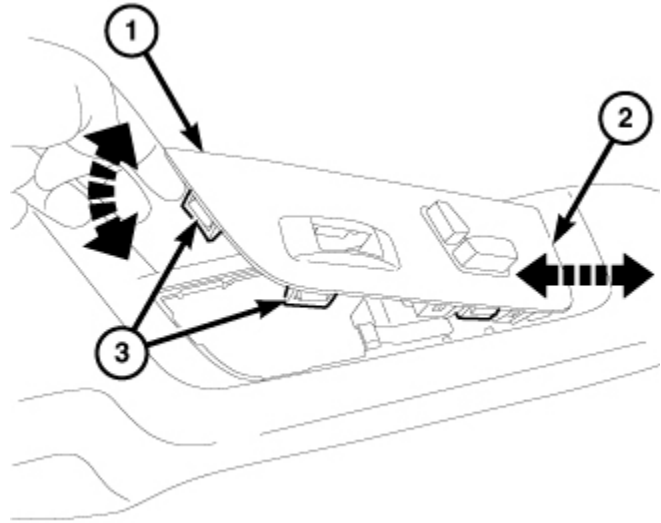

1154158


10. Remove the screw (1).
11. Release the retaining clips (2) and remove the outer side shield.

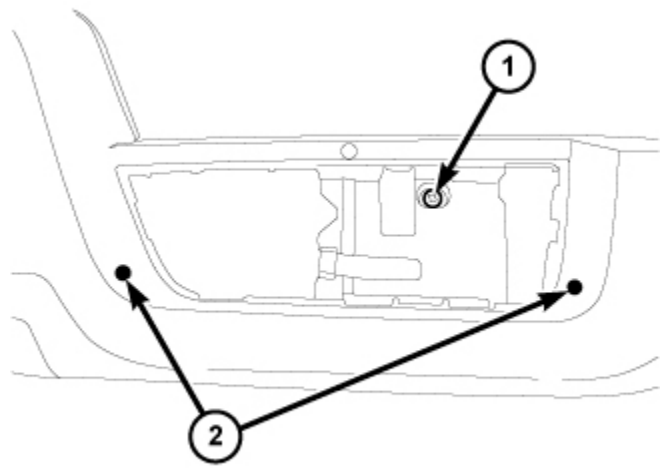

1158005




12. Separate the cover J-straps (1) from the sides and remove the foam/cover assembly.

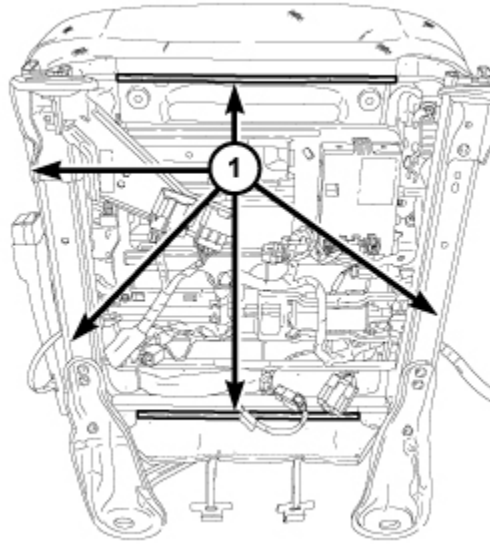

1221724


13. Remove the 10 hog rings (2) and separate the cover (1) from the foam.

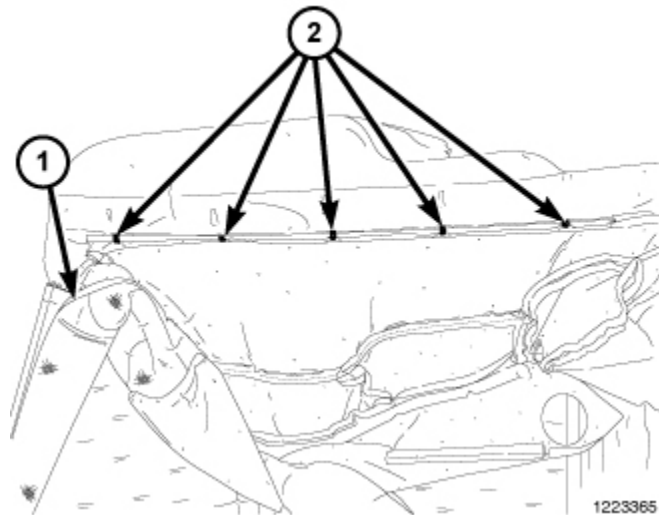


1223365

## Power With Vented Seat


1. Remove the front seat.
2. Separate the seat back cover straps (2) from under the seat cushion and disconnect the electrical connectors (1).

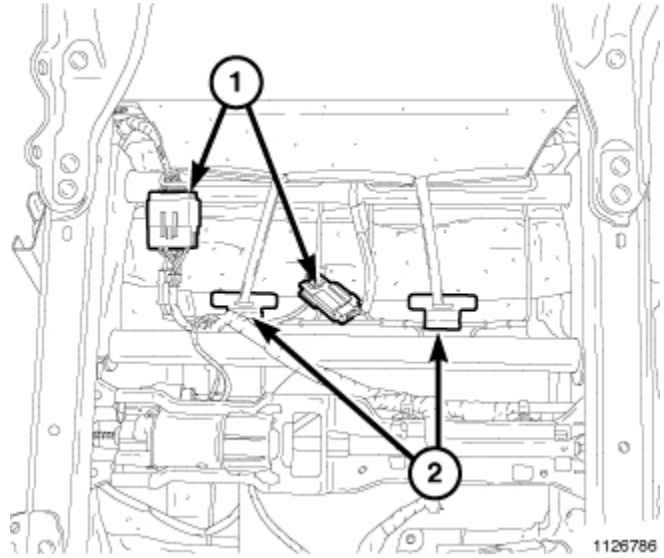

3. Remove the side shield screws (2) in the back.

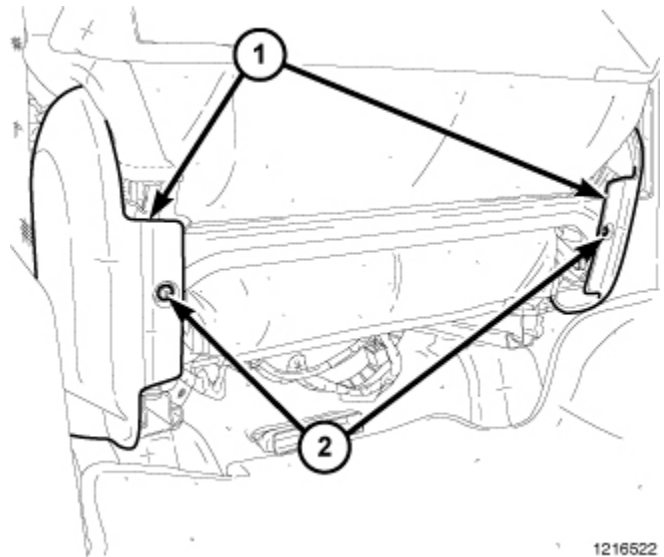


4. Remove the inboard shield screw.
5. Remove the inboard side shield.

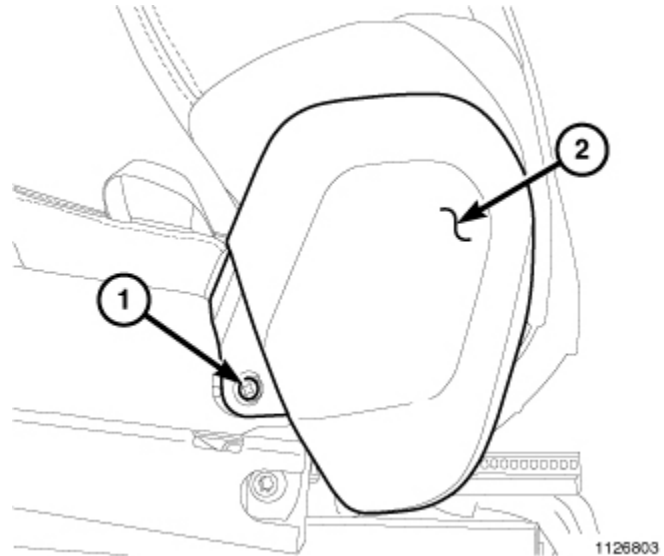


**CAUTION:** Disconnect the lumbar control switch electrical connector beneath the seat, prior to removing the power seat switch bezel from the seat. Failure to follow these instructions can result in damage to the lumbar control switch.

6. If equipped, disconnect the lumbar control switch electrical connector (1).

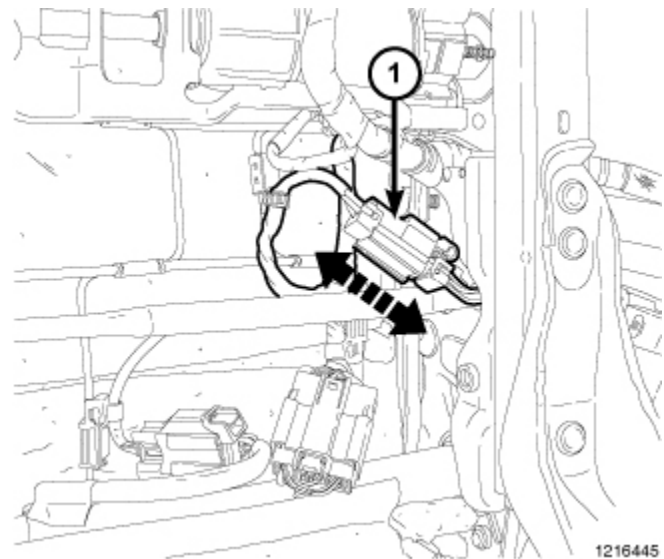


**NOTE:** Power seat bezel shown, manual seat bezel similar.

7. Using trim stick, release the seven tabs (3) and separate the bezel (1) from the outboard side shield.
8. Pull the bezel (1) rearward and release the front retaining tab (2).
9. Disconnect the wire harness connectors from the power seat switch and memory seat switch, if equipped.

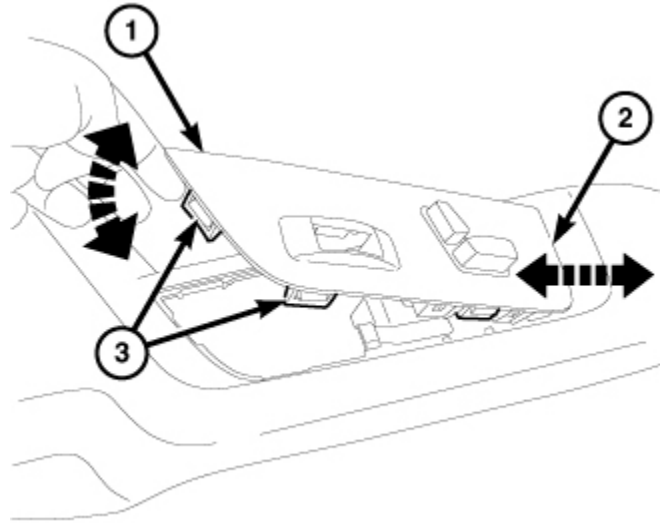


1154158

10. Remove the screw (1).
11. Release the retaining clips (2) and remove the outer side shield.

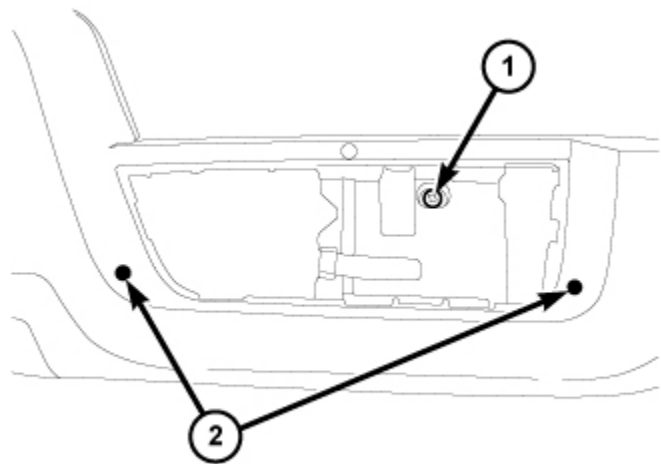


1158005


12. Disconnect the vented seat bag (1) from the motor (2).
13. Disconnect the electrical connectors, if equipped.

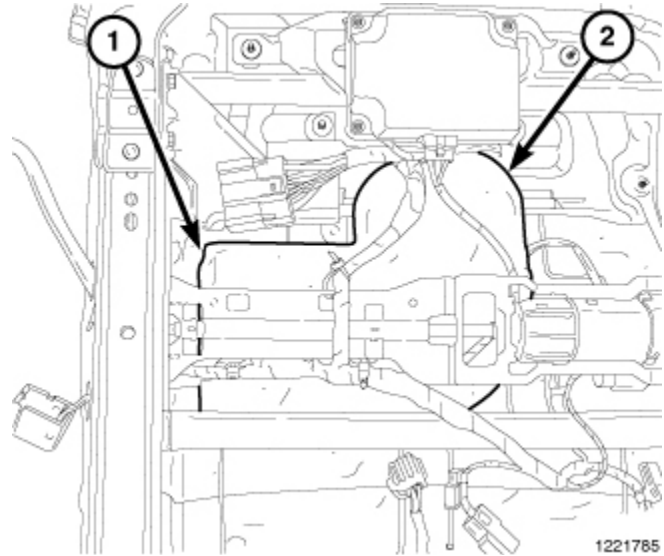


14. Separate the cover J-straps (1) from the sides and remove the foam/cover assembly.

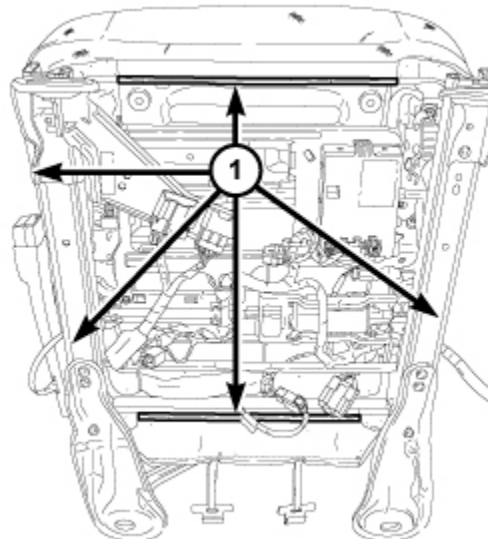

15. Remove the 10 hog rings (2) and separate the cover (1) from the foam.

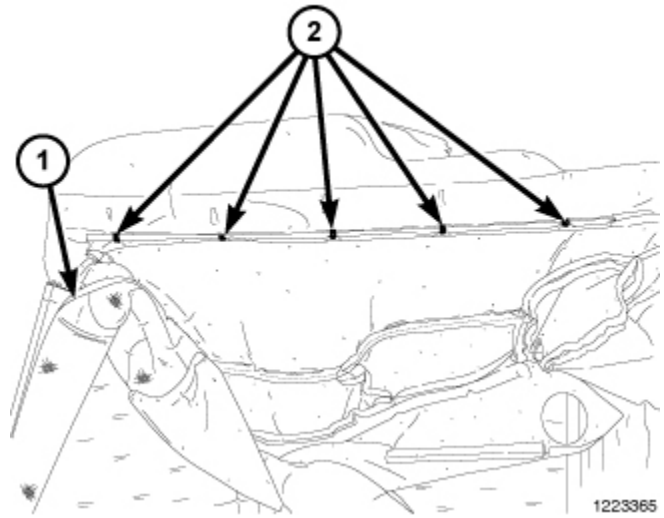

16. Pull the vent pad (1) through the foam.

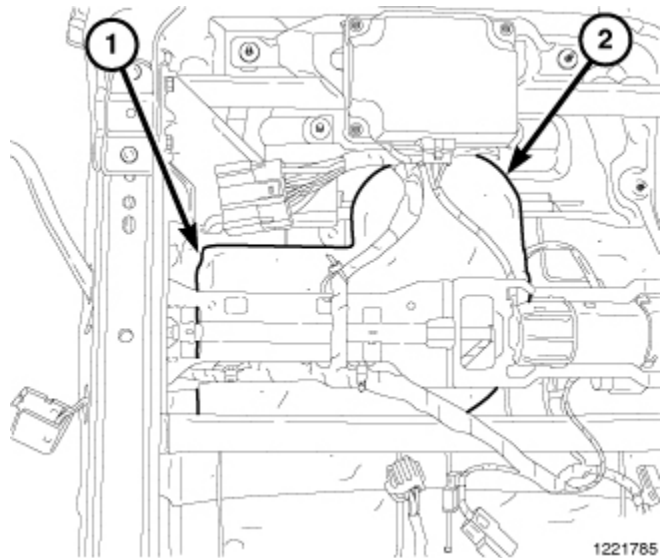


## Body/Seats/SEAT, Front/Installation

# INSTALLATION


### Driver Side

1. Install the driver seat and loosely install the front bolts (1).
2. Loosely install the driver seat rear bolts (2).

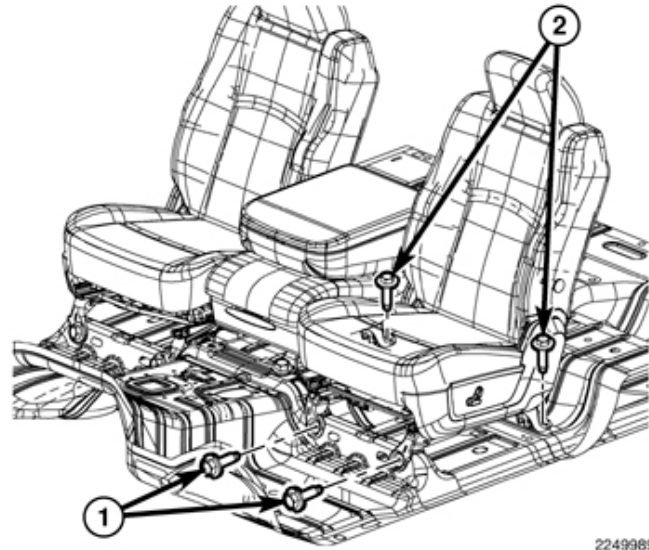


2249989

3. Tighten the driver seat bolts to 47 N·m (35 ft. lbs.) using the sequence shown.

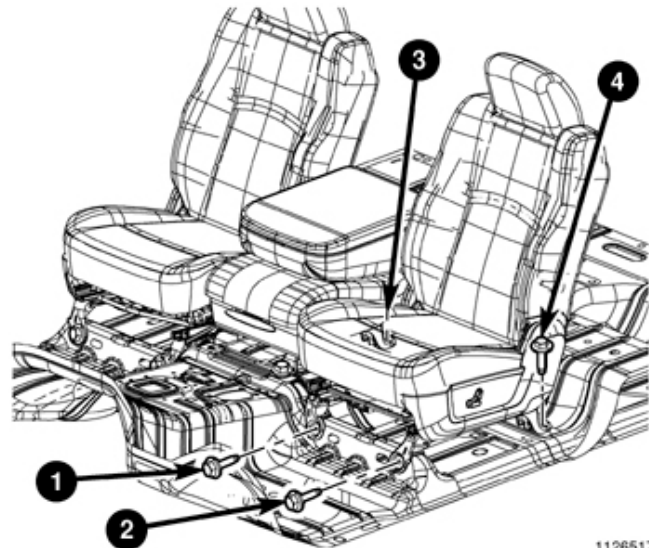


1126517

4. Connect the electrical connectors (1 and 2), if equipped.

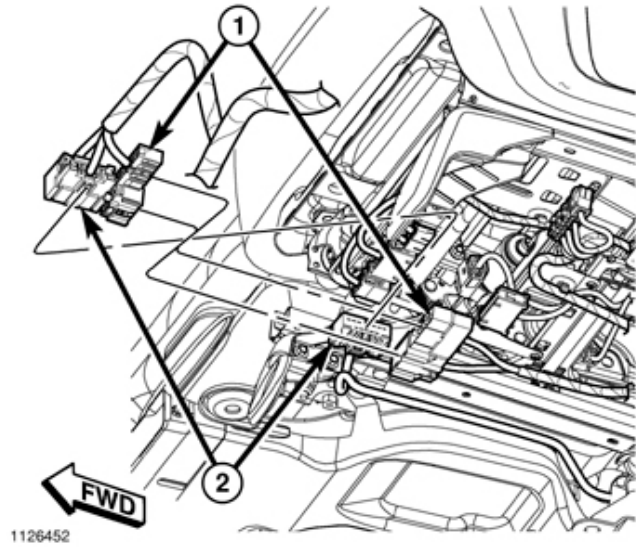


5. Install the trim cover (1) and seat the clip fully.

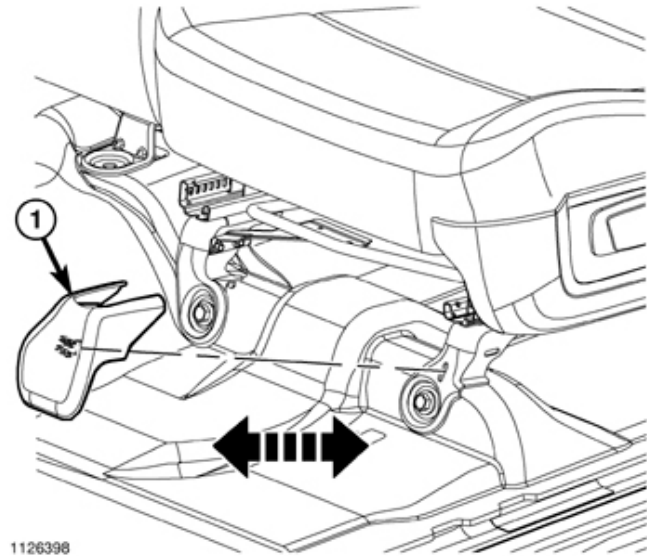


## Passenger Side




1. Position the passenger seat assembly into the vehicle and connect the air duct (1), if equipped.

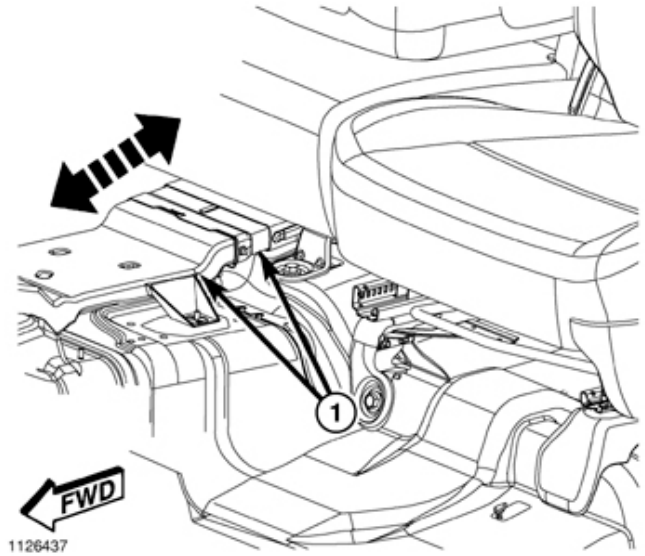

2. Loosely install the passenger seat front bolts (3).
3. If equipped with the center seat, loosely install the bolts (2).
4. Loosely install the passenger seat rear bolts (1).

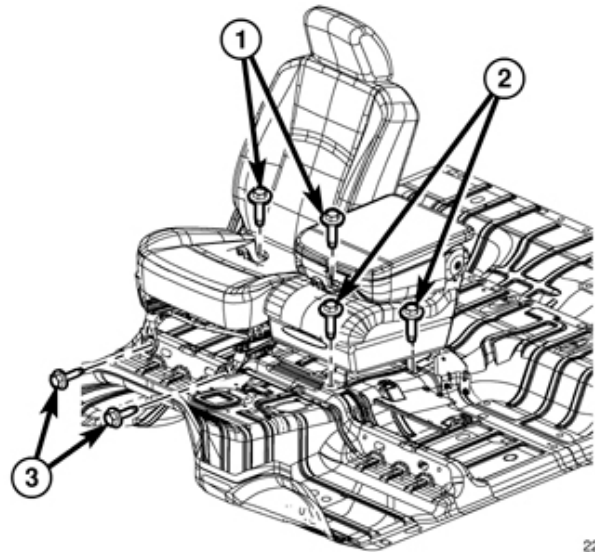


5. Tighten the passenger seat bolts to 47 N·m (35 ft. lbs.) using the sequence shown.

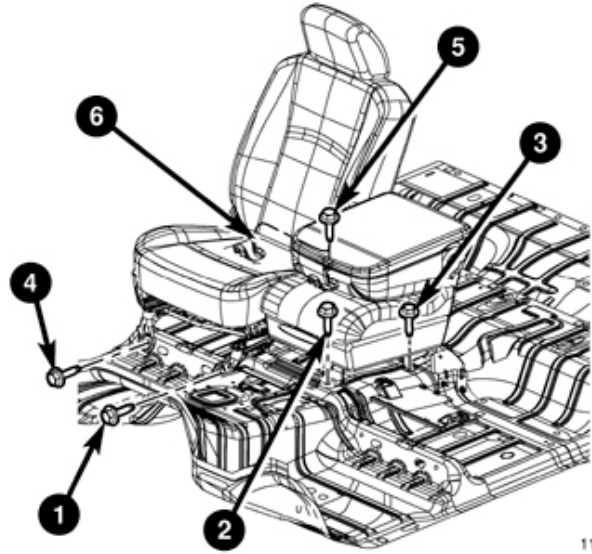

1126499

6. Connect the electrical connectors (1), if equipped.

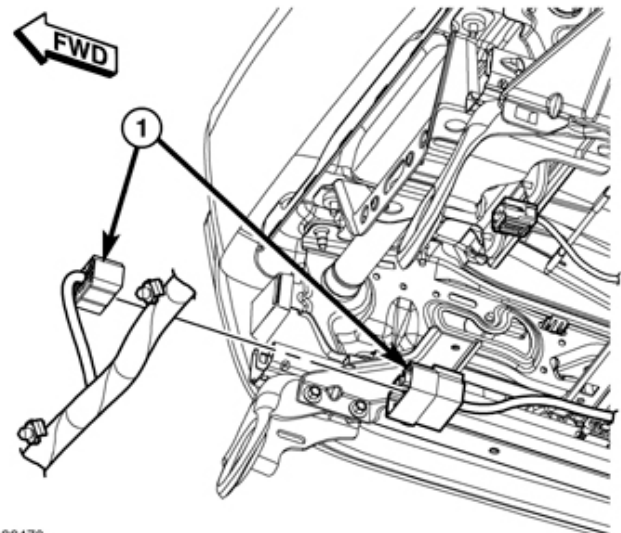

1126470

7. Secure the jack cover rear hook on the rear riser (3).
8. Position the front of the side shield (2) on the front of the riser (1) and seat the clip fully.

